


140 mm

105 mm

anko Portable Shower Instruction Manual

Keycode: 43-757-022

1. Product and accessory description:

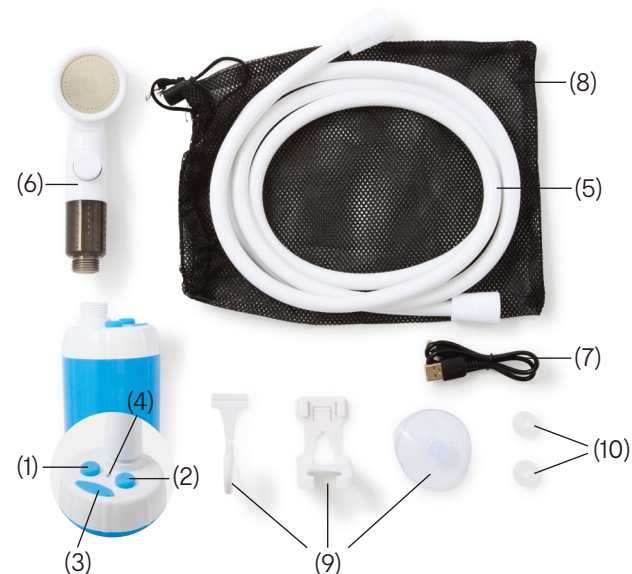

- (1) On/Off key (2) Mode switch (3) Charging socket
(4) Battery charging/battery indicator light (5) Hose
(6) 3-way shower head (7) Charging cable (8) Mesh bag
(9) Sucker hook (10) Spare sealing ring


NOTE: IF THE SEALING RING ON THE HOSE IS MISSING, INSTALL THE SPARE SEALING RING ONTO THE WATER PIPE AS SHOWN IN THE DRAWING.



2. Technical Specification:

Charging method: Dc, 5.0v/ 1.5a
Battery capacity: 4000 mah lithium rechargeable battery
Charging time: Over 3 hours
Working time: Up to 60 minutes
Water flow rate: 1.5-3.0 litres per minute

3. Assembly Steps:

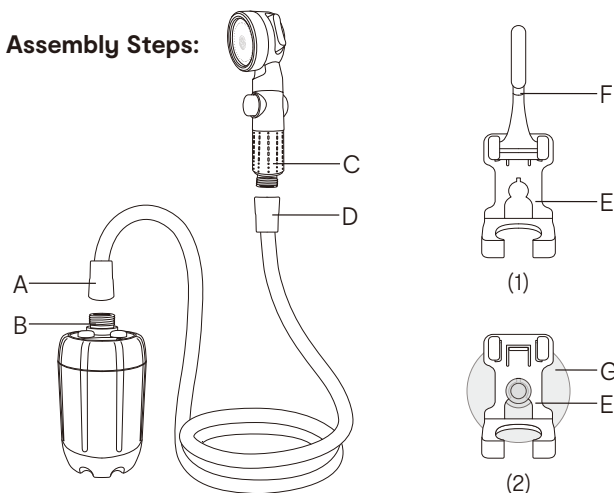

1. Connect A and B, then tighten firmly.
2. Connect C and D, then tighten firmly.
3. To hang the shower head on a rod, assemble the bracket as per method (1) and clip hook F onto shower holder E.
4. To mount it on flat glass, assemble the bracket as per method (2) and clip suction cup G onto shower holder E.

Note :

- (1) Usage: Do not lift the pump out of water while in using, otherwise it may cause water to spray out. Please turn off the machine and place it on the ground. Then, raise the shower head to straighten the water pipe, allowing the water inside the pipe to drain. Then, restart the machine to resume normal operation. After the water pump is turned on, it should be put into the water as soon as possible and it is prohibited to operate in the air for a long time. After use, turn off the machine and drain the water from the water pipe.
- (2) Charging: The charger output should have: 5V 2A (or greater than 2A), and it is strictly prohibited to put the water pump into the water during charging.

WARNING:

1. PLEASE REMOVE THE PRODUCT FROM THE WATER AFTER EACH USE AND DO NOT SOAK IT FOR A LONG TIME.
2. AFTER THE PRODUCT IS UNPACKED, IT CAN BE USED DIRECTLY. RECHARGE AT LOW BATTERY LEVEL. AFTER FULLY CHARGING, PLEASE CUT OFF THE POWER IN A TIMELY MANNER. WHEN NOT IN USE, CHARGE THE BATTERY AT LEAST ONCE EVERY THREE MONTHS.
3. FILTER CLEANING: IF THE FILTER SPONGE ACCUMULATES TOO MUCH DIRT, IT CAN BE REMOVED FOR CLEANING. (AS SHOWN IN THE RIGHT FIGURE) METHOD FOR DISASSEMBLING THE BOTTOM COVER: WITH THE



"A" NOTCH FACING THE PALM, USE YOUR THUMB AND INDEX FINGER TO FORCEFULLY CLAMP THE WINDOW OPENINGS ON BOTH SIDES OF THE BOTTOM COVER, AND ROTATE IN ANY DIRECTION AS SHOWN IN "B" TO REMOVE THE BOTTOM COVER. REMOVE THE SPONGE FROM THE BOTTOM COVER AND CLEAN IT. AFTER WASHING, REINSTALL IT. PRESS THE BOTTOM COVER BACK ONTO THE HOST AND ROTATE IT TO LOCK THE BUCKLE.

4. IT CANNOT BE USED IN LIQUIDS OTHER THAN FRESH WATER, WITH A TEMPERATURE RANGE OF 5 °C TO 50 °C.

5. DO NOT USE IF DAMAGED. STORED AWAY FROM HIGH TEMPERATURES, IGNITION SOURCES, AND FLAMMABLE AND EXPLOSIVE MATERIALS.

MADE IN CHINA

CUSTOMER SERVICE:

KMART AU: 1800 124 125
KMART NZ: 0800 945 995
TARGET AU: 1300 753 567