

ECP2-250311A_5000mAh Keychain Power Bank Black_IM

材质:80g书纸

表面处理:无

印刷方式:单色印刷



Discharge				
●○○○	●○○○	●●○○	●●●○	●●●●
1 LED flashing 0%	1 LED on: 1-25% power remaining	2 LED on: 25-50% power remaining	3 LED on: 50-75% power remaining	4 LED on: 75-100% power remaining
Charge				
●○○○	●○○○	●●○○	●●●○	●●●●
1 LED flashing 0%-25%	LED1 keep on LED2 flashing: 25-50%	LED1-LED2 keep on LED3 flashing: 50-75%	LED1-LED3 keep on LED4 flashing: 75-99%	LED1-LED4 keep on: 100%
Power ON/OFF Button				
⏏ Short press		⏏ Long press		
Power ON Or checking battery status		Power OFF		

4. Operation

1. Pull out the built-in charging cable to the charging port of the device being charged, then white indicator light will stay solid automatically. When there is no charge, the LED light will turn off after about 32 seconds. Press and hold "⏏" button for 3 seconds to turn off the device.

2. The device is powered by rechargeable Lithium battery. Please use provided USB-C cable for charging(plug the USB-C end into the device's charging port and the other USB-A end into a charger with a minimum output of 5V/2A). The four indicators scroll from left to right once, then stay flashing to show the current battery level. After fully charging, four indicator lights will stay solid.

5. Cautions

1. Before using the unit please read this manual carefully &Retain for Future use.

2. Ensure children and infants do not play with plastic bags or any packaging materials.

3. Children must not use this product without adult supervision.

4. Keep away from water,liquids,or wet areas.

5. Use a dry cloth to clean this product.Do not use chemicals on this product.

6. Do not expose the product to fire or high temperatures over 45 C .

7. Make sure the product has plenty of ventilation during charging.

8. Do not place the product in direct sunlight,heat or the under the windshield.

9. Do not drop,stand on,puncture,or apply excessive force to the product,as harsh impacts could damage the product.If unit is dropped or otherwise damaged,discontinue use immediately.

10. If crushed,punctured,disassembled,exposed to fire or high temperatures,batteries may catch fire or explode.

11.If the product swells or bulges,discontinue use immediately and dispose of the unit appropriately.

12. Do not insert foreign object into the product.

13. Do not try to repair or disassemble this product.

14. Do not charge the portable charger and charge your device simultaneously.

15. This product should be only operated from the type of power source indicated on the marking label.

16. To preserve battery lifespan,use and recharge at least once every 3 months.

17. For long-term storage (over 3 months),charge the device between 50 percent to 75 percent charge level.

18. When the unit is not in use,make sure it is correctly turned off and stored in a cool dry place.

19. When disposing of this product.Do so responsibly following local government requirements.

WARNING: READ AND FOLLOW ALL ABOVE INSTRUCTIONS CAREFULLY. DO NOT DROP OR APPLY EXCESSIVE FORCE TO THIS PRODUCT. DO NOT EXPOSE TO HIGH TEMPERATURES. IMPROPER USE OR HANDLING OF THIS PRODUCT MAY RESULT IN FIRE OR EXPLOSION CAUSING SERIOUS INJURY OR PROPERTY DAMAGE.

*** 12 Month Warranty**
Thank you for your purchase.
Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.
For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.
This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a maior failure and compensation for any other reasonably foreseeable loss or damage.
You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

CUSTOMER SERVICE:
KMART AU: 1800 124 125
KMART NZ: 0800 945 995
TARGET AU: 1300 753 567