


Glitter Speaker Lamp

Operating Instructions

Please read this manual carefully before using this product and retain for future reference.

Includes:

- 1 x Glitter Speaker Lamp
- 1 x Instruction manual
- 1 x USB-A to USB-C charging cable

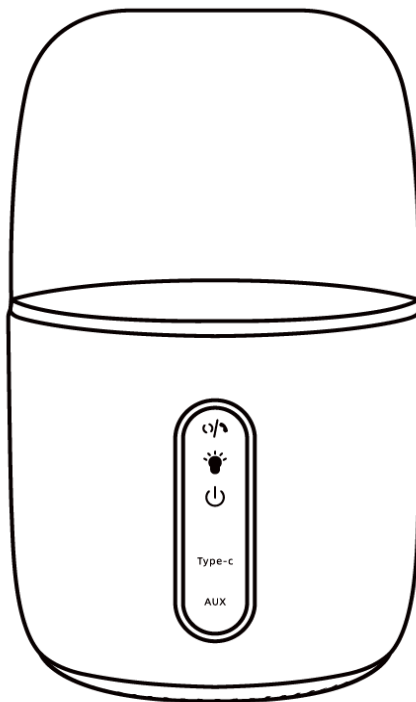

Product Specifications:

Input: 5V = 1A

Speaker Driver: 1 x 4Ω 10W

Bluetooth® version: 5.4

Playtime: Up to 4 hours (at 80% volume)


Charging time: Approx. 4 hours

Battery capacity: 3.7V, 2000mAh rechargeable lithium-ion battery (non-replaceable)

Important Safety Information:

- This product contains a **rechargeable lithium-ion battery (non-replaceable)**.
- **This product is not a toy. Keep out of reach of young children.**
- Do not leave the device connected to the charger for extended periods.
- Avoid exposing the device to high temperatures or direct sunlight for prolonged periods.
- Do not allow the battery to fully discharge before recharging.
- Do not disassemble, crush, puncture, or modify the battery or device.
- Handle with care and avoid strong impacts or dropping.
- Do not leave the device unattended while charging.
- Keep the device away from water, moisture, or other liquids.

Product Diagram:

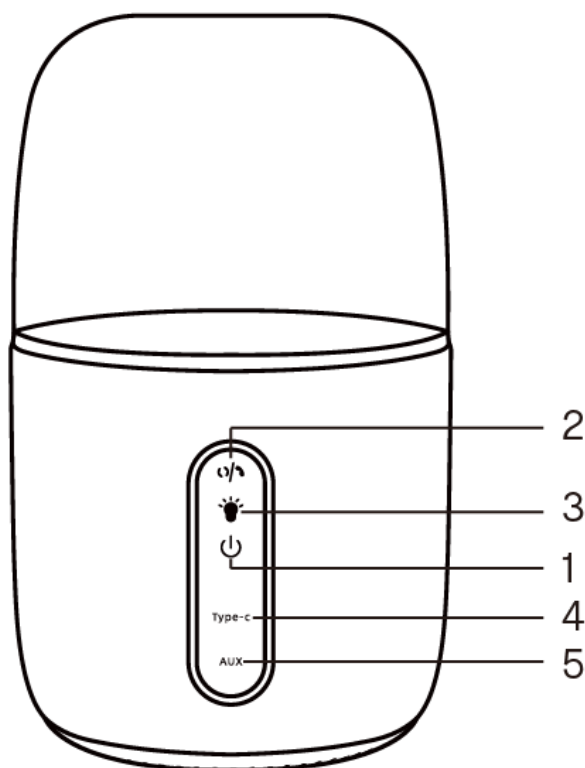

- | | |
|------------------------------------|------------------------|
| 1. Power button | 4. USB-C Charging Port |
| 2. Phone / Glitter Rotation button | 5. AUX port |
| 3. Light button | |

Operating Instructions:

Power on/off

1. Long press the Power button for 3 seconds to turn the device ON or OFF.
2. Short press the Power button to play or pause music.

Bluetooth Connection

1. Turn on the speaker, it will automatically enter Bluetooth pairing mode.
2. Enable Bluetooth on your smartphone, tablet, or other Bluetooth-enabled device.
3. Select "anko43758876" from the list of available devices.
4. A prompt tone will be heard when the connection is successful.

Music Playback

Play/Pause: Short Press the Power button

Note: Volume and track controls are managed through the connected device.

RGB light function

1. Short press the Light button to cycle through the 8 available lighting effects.
2. Press and hold the light button for 2 seconds to turn the light on or off.
3. Press and hold the Phone / Glitter Rotation button to start or stop the glitter rotating effect.

Phone calls

1. Answer a call: Press the Phone button or Power button.
2. Reject a call: Press and hold the Phone button.
3. End a call: Press the Power button or Phone button during a call.
4. Redial the last number: Press the Phone button once.

AUX In

Connect a 3.5 mm audio cable (not included) to the speaker's AUX port and the audio output port of your device.

The speaker will automatically switch to AUX mode when a connection is detected.

How to Charge

1. Before first use, please fully charge the speaker.
2. Use a certified 5V/1A USB power adaptor (not included). Only use the supplied charging cable.
3. Regularly charge the device (at least once a month) to maintain battery life. Prolonged storage at low charge may reduce battery performance.
4. The indicator remains red during charging and turns off once fully charged.
5. It takes approximately 4 hours to fully charge the product.

12 Month Warranty

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage.

You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth® SIG, inc., and any use of such marks by KMART AUSTRALIA is under licence.



MADE IN CHINA

CUSTOMER SERVICE:

KMART AU: 1800 124 125

KMART NZ: 0800 945 995

TARGET AU: 1300 753 567