

100.0 mm

70.0 mm

anko


Retro Handheld Game

Operating Instructions

Please read this manual carefully before using this product and retain it for future reference.

Includes:

- › 1 × Retro Handheld Game
- › 1 × Instruction manual

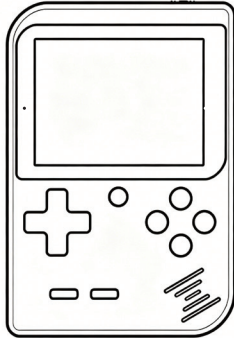

K: 43758890 | T: 72852262
Model: JLR-82041

Product Specifications

Dimensions: 8 cm (W) × 2.5 cm (D) × 11.5 cm (H)


Screen Size: 2.8-inch

Power Supply: 3 × 1.5V AAA batteries (not included)

Important Safety Information

- › Keep small parts and batteries out of reach of children.
- › Insert batteries with correct polarity (+/-).
- › Do not mix different types of batteries or new and used batteries.
- › Non-rechargeable batteries must not be recharged.
- › Remove batteries if the product will not be used for an extended period.
- › Exhausted batteries should be removed immediately.
- › Keep batteries out of reach of children and pets.
- › Swallowing batteries may cause serious injury or death. Seek immediate medical attention if swallowed.
- › Do not expose the product to excessive heat or dispose of batteries in fire.
- › Do not attempt to open, crush, or short-circuit batteries.
- › Dispose of batteries in accordance with local regulations.

Product Diagram

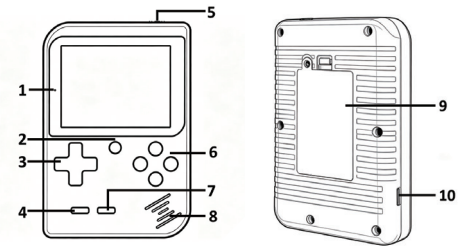

- | | |
|---------------------------|--------------------------|
| 1. Indicator light | 6. A / B / X / Y buttons |
| 2. Reset button | 7. Start button |
| 3. Directional pad(D-pad) | 8. Speaker |
| 4. Select button | 9. Battery compartment |
| 5. Power switch | 10. Volume wheel |

Operation Instructions

Installing Batteries:

1. Open the battery compartment cover.
2. Insert 3 × 1.5V AAA batteries, ensuring the correct polarity (+/-). (Batteries not included).
3. Close the cover securely.

Note: Battery installation and replacement must be performed by an adult.

Turn On / Off:

Slide the power switch to ON or OFF.

Game List and Selection:

1. When powered on, the list of 256 built-in games appears.
2. Use D-Pad to scroll through the game list.
3. Press A, or START button to enter a game.

During Gameplay:

1. D-pad: Used for movement and menu navigation
2. A / B / X / Y buttons: Game actions (function varies by game)
3. Reset button: Return to the main menu during gameplay

4. Select button: Function varies by game.

5. Start button: Pause or resume gameplay.

Exiting a Game:

Press RESET button once, or press and hold SELECT + START for 2 seconds.

Adjust Volume:

Rotate the volume wheel upward to increase the volume or downward to decrease the volume.

12 Month Warranty

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage.

You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

MADE IN CHINA
CUSTOMER SERVICE:
KMART AU: 1800 124 125
KMART NZ: 0800 945 995
TARGET AU: 1300 753 567

