

106.582 mm

anko

Retro Phone Speaker Operating Instructions

Please read this manual carefully before using this product and retain it for future reference.

Includes:

- 1 x Retro Phone Speaker
- 1 x Wrist Strap
- 1 x USB-A to USB-C charging cable
- 1 x AUX-IN cable
- 1 x Instruction Manual



K: 43758920 | T: 72852323
Model: JLR-80388

Product Specifications:

Bluetooth version: 5.4

Input: 5V = 1A

Speaker Power: 3Ω5W

Playtime: Up to 9 hours (at 80% volume)

Charging time: Approx. 3 hours


Frequency Range: 40Hz-20KHz

Battery capacity: 3.7V, 1200mAh rechargeable lithium-ion battery (non-replaceable)

Important Safety Information:

- › This product contains a **rechargeable lithium-ion battery** (non-replaceable).
- › Do not leave the device connected to the charger for extended periods.
- › Avoid exposing the device to high temperatures or direct sunlight for prolonged periods.
- › Do not allow the battery to fully discharge before recharging.
- › Do not disassemble, crush, puncture, or modify the battery or device.
- › Handle with care and avoid strong impacts or dropping.
- › Do not leave the device unattended while charging.
- › Keep the device away from water, moisture, or other liquids.
- › Use a certified 5V/1A USB power adapter (not included) that complies with local safety standards.

Product Diagram:

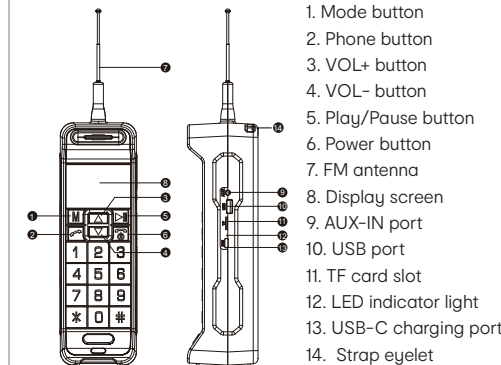

Note: The remaining number buttons are decorative and have no function.

Operation Instructions:

Power on/off

Long press the Power button for 2 seconds to turn the speaker on or off.

Mode switch

Press the Mode button to switch between Bluetooth, FM, AUX, USB and TF card modes.

Note: AUX, USB and TF card modes are available only when the corresponding device or media is connected.

Bluetooth Connection

1. Turn on the speaker, it will automatically enter Bluetooth pairing mode.
2. Enable Bluetooth on your smartphone, tablet, or other Bluetooth-enabled device.
3. Select "**anko43758920**" from the list of available devices.
4. A prompt tone will be heard when the connection is successful.

Note:

1. **The speaker will auto-reconnect to the last paired device when turned on again.**
2. **Long press the Play/Pause button to disconnect the Bluetooth.**

Music Playback

Play/Pause: Press the Play/Pause button.

Next Track: Press the VOL+ button.

Previous Track: Press the VOL- button.

Volume Up: Press and hold the VOL+ button.

Volume Down: Press and hold the VOL- button.

Note: Total 30 volume levels (L00-L30), L00 = mute.

Phone calls

Answer a call: Press the **Phone button** or Play/pause button.

Reject a call: Press the **Power button** or press and hold the **Phone button**.

End a call: Press the **Play/pause button / Power button** or press and hold the **Phone button** during a call.

AUX In: Connect the 3.5mm audio cable to the speaker's AUX port and your audio device. The speaker will auto-switch to AUX mode.

TF Card/USB Drive

Insert a TF card (MP3 format) or USB flash drive into the corresponding port. The speaker will auto-play music from the storage device (supports TF cards up to 32GB).

FM Mode

1. Short Press the Mode button to switch to FM mode.
2. Long press the Play/Pause button to start automatic station scanning. Detected stations will be saved automatically.
3. Short press VOL+ / VOL- button for next/Previous FM station.
4. Short press the Play/Pause button to play/pause.

How to Charge:

1. Before first use, please fully charge the speaker.
2. Use a certified 5V/1A USB power adapter (not included). Only use the supplied charging cable.
3. Regularly charge the device (at least once a month) to maintain battery life. Prolonged storage at low charge may reduce battery performance.
4. The indicator remains red during charging and turns off once fully charged.
5. It takes approximately 3 hours to fully charge the product.

12 Month Warranty

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided.

This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage.

You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth® SIG, inc., and any use of such marks by KMART AUSTRALIA is under licence.



MADE IN CHINA
CUSTOMER SERVICE:
KMART AU: 1800 124 125
KMART NZ: 0800 945 995
TARGET AU: 1300 753 567

75 mm