 


AIR DRUM KIT

Operating Instructions

Please read this manual carefully before using this product and retain for future reference.

- Includes:**
- › 1 x Bluetooth Speaker
 - › 2 x Drumsticks
 - › 2 x Foot pedals
 - › 1 x 3.5mm audio cable
 - › 1 x Storage bag
 - › 1 x USB-C Charging cable
 - › 1 x User manual

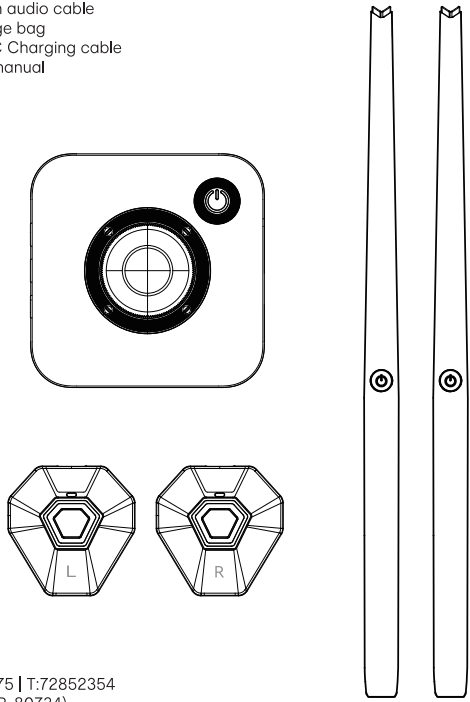

K: 43758975 | T:72852354
(Model: JLR-80734)

 
Product Specifications

- Input Rating:**
Bluetooth Speaker: 5V ~ 1A
Drumsticks / Foot pedals: 5V ~ 200mA
Charging time: Approx. 1-2 hours
Play time: Up to 5 hours (at 80% volume)
- Battery:**
Bluetooth Speaker: 3.7V 800mAh rechargeable lithium-ion battery (non-replaceable)
Drumsticks: 3.7V 170mAh rechargeable lithium-ion battery (non-replaceable)
Foot pedal: 3.7V 70mAh rechargeable lithium-ion battery (non-replaceable)

Important Safety Information

- **This product contains a rechargeable lithium-ion battery (non-replaceable).**
- This product is not a toy. Keep out of reach of young children.
- Do not leave the device connected to the charger for extended periods.
- Avoid exposing the device to high temperatures or direct sunlight for prolonged periods.
- Do not allow the battery to fully discharge before recharging.
- Do not disassemble, crush, puncture, or modify the battery or device.
- Handle with care and avoid strong impacts or dropping.
- Do not leave the device unattended while charging.
- Keep the device away from water, moisture, or other liquids.
- Use the product in an open area away from people, pets and fragile objects.
- Ensure there is sufficient space around you before swinging the drumsticks.


Product Diagram

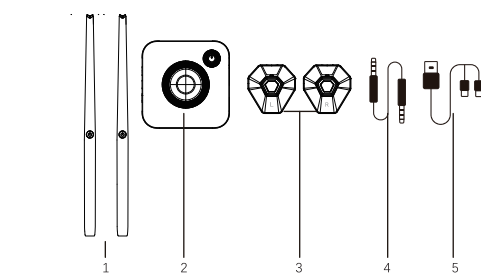

Note: The drumsticks and foot pedals are factory paired with the speaker.

Operating Instructions:

Bluetooth speaker

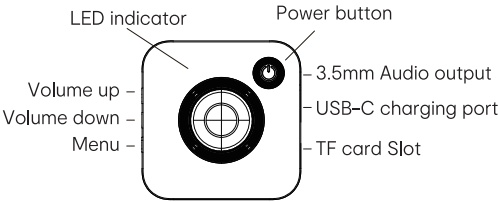

Power on/off

Long press the Power button for 3 seconds to turn the speaker ON or OFF.

Bluetooth Connection

1. Turn on the speaker, it will automatically enter Bluetooth pairing mode.
 2. Enable Bluetooth on your smartphone, tablet, or other Bluetooth-enabled device.
 3. Select "anko43758975" from the list of available devices.
 4. A "Connected" prompt tone will be heard when the connection is successful.
- Note: The speaker will auto-reconnect to the last paired device when turned on again.**

Music Playback

- Play/Pause: press the Power button
Next Track: Long press the + Button
Previous Track: Long press the - Button
Volume Adjustment: Press + / - Buttons to increase/decrease volume

Audio Output

1. Connect headphones or an external powered speaker using a 3.5 mm audio cable.
2. When a device is connected, the built-in speakers will be muted automatically.


TF Card

1. Insert a microSD card containing MP3 audio files into the corresponding port.
2. Double press the Menu button to switch to TF Card mode.
3. The speaker will auto-play music from the storage device (Supports microSD cards up to 64 GB.)

Menu function

- Press the Menu Button repeatedly to switch between:
- Beginner Mode
 - Simple Mode
 - Advanced Mode


Drumsticks

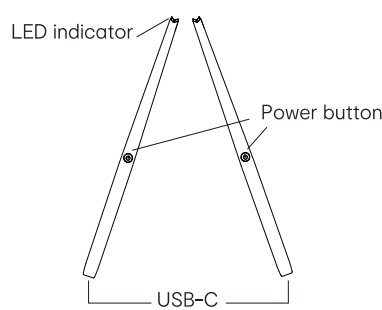

Power on/off

Long press the **Power** button to turn the drumsticks ON or OFF.

Foot pedal (Kick Drum & Hi-Hat)

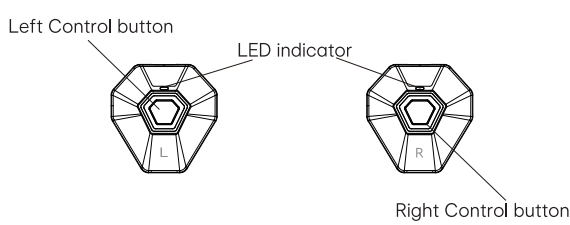

Left Foot Pedal (Clip the left foot pedal securely to your left shoe.)

Functions as the hi-hat (open/closed) pedal. Lifting the foot opens the hi-hat, while lowering it closes it.


Right Foot Pedal (Clip the right foot pedal securely to your left shoe.)

Functions as the kick drum pedal. It's activated by tapping or pressing down to produce the kick drum sound.

Power on/off


Long press the **Power** button to turn the Pedal ON or OFF.
The drumsticks and foot pedals are pre-paired with the Bluetooth speaker before leaving the factory. No additional pairing is required.

Position Calibration -Drumsticks

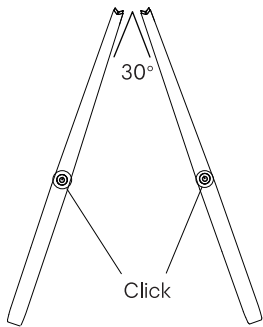

1. Turn on both drumsticks.
2. Hold both drumsticks naturally at approximately a 30° angle in front of you.
3. Press the Power Button once on each drumstick to complete calibration.
4. The LED indicator flashes red once to confirm successful calibration.

- Foot Pedal

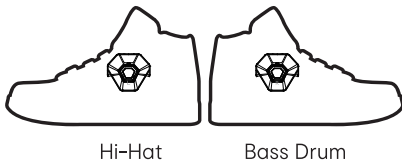

1. Attach both foot pedals to your shoes.
 2. Press the Left Foot Pedal Power Button once to calibrate.
 3. The indicator flashes red once to confirm calibration.
 4. Lift your heel to open the hi-hat and press down to close it.
- Note:**
1. **Press the button a third time to switch to the kick drum.**
 2. **Recalibrate the drumsticks whenever your playing position changes.**
 3. **For the best performance, use the drum kit in an open area and avoid striking objects while playing.**

How to Use

Step 1: Calibrate Before Playing

Ensure drumsticks and pedals are calibrated in your current playing posture. (See "Position Calibration" above)

Note: If you change your sitting position, recalibrate immediately.

Step 2: Drumstick Striking Techniques

1. Hold the drumsticks naturally and point forward.
2. Raise the drumsticks to strike cymbals and upper drums.
3. Keep the drumsticks level to strike the snare, hi-hat and lower drums.
4. The LED colour on each drumstick indicates the current drum or cymbal being triggered.


Step 3: Foot Pedal Control

1. Left Pedal (Hi-Hat): Lift your heel to open the hi-hat; press down to close the hi-hat.
2. Right Pedal (Bass Drum): Tap down with your foot to trigger the bass drum sound.


Note: If the right foot pedal is not connected, Tom 3 automatically functions as the bass drum.

Step 4: Switch Playing Modes

1. Press the Menu button on the speaker to cycle through playing modes:
2. Beginner Mode: Hit the Snare Drum (Green); Hi-Hat and Bass Drum play automatically.
3. Simple Mode: Play with 5 drum components (Snare, Tom 3, Hi-Hat, Hanging Cymbal, Ride Cymbal).
4. Advanced Mode: Access all seven drum sounds for the full drumming experience.

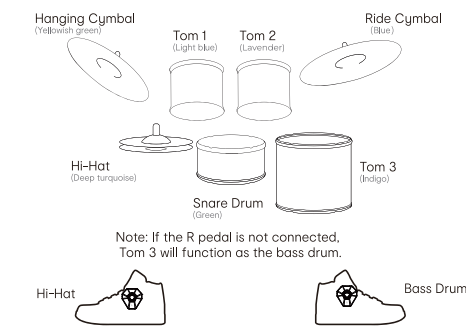

Note: If the R pedal is not connected, Tom 3 will function as the bass drum.

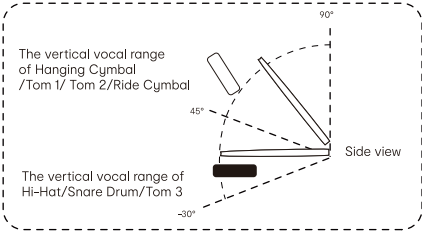

APP Operations

Download 'GAMSING' App:

Option 1: Download the "GAMSING" app from the App Store or Google Play.



Option 2: Scan the QR code to download and install the GAMSING APP




Connect App

- › Turn on the Bluetooth speaker.
- › Enable Bluetooth on your mobile device.
- › Open the GAMSING app.
- › Tap the connection icon in the bottom-right corner.



- › Select "anko43758975gra" from the Bluetooth device list.

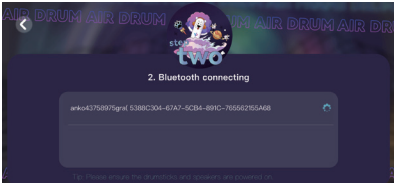

- › Once connected, the drum kit is ready to use.

Note:

- › **Bluetooth must be used, otherwise the drum kit will not work.**
- › When opening the app for the first time, you may be prompted to allow location access. Please select "Allow once" or "Allow while using the app". This is required for Bluetooth connection and proper app operation. If "Don't allow" is selected, the app may not be able to connect to the speaker.

Operating the GAMSING App

Drum position Practice

Practice striking the correct drum positions to improve accuracy and coordination.

Rhythm Practice

Follow guided rhythm exercises to improve timing and build drumming skills.

Song performance

Play along with built-in songs and practice complete drum performances.

Free Practice

Play freely and create your own rhythms without guided instruction.

Mode Selection:

- Press the Menu button to switch the Mode.
- Beginner Mode (Default): Learn basic rhythms and develop a sense of timing.
- Simple Mode: Practice rhythm patterns using the five drum positions. BPM can be adjusted to match your preferred tempo.
- Advanced Mode: Challenge yourself by playing more complex rhythms using all four drum positions.

How to charge

1. Before first use, please fully charge the speaker.
2. Use a certified 5V/1A USB power adaptor (not included). Only use the supplied charging cable.
3. Regularly charge the device (at least once a month) to maintain battery life. Prolonged storage at low charge may reduce battery performance.
4. The indicator light flashes green while charging and remains on once fully charged.
5. It takes approximately 1-2 hours to fully charge the product.

12 Month Warranty

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth® SIG, Inc., and any use of such marks by KSMART AUSTRALIA is under licence.

If you have any cybersecurity-related concerns or queries, please contact us online via our 'Contact Us' page at <https://www.kmart.com.au/contact-us/> or reach us by phone using the numbers listed below.

MADE IN CHINA
CUSTOMER SERVICE:
KMART AU: 1800 124 125
KMART NZ: 0800 945 995
TARGET AU: 1300 753 567



Statement of Compliance

Security standard for consumer grade relevant connectable products
AUSTRALIA

This statement of compliance has been prepared by, or on behalf of **Kmart Australia Limited**, who is the manufacturer of the below product. The statement of compliance is made in accordance with the Cyber Security (Security Standards for Smart Devices) Rules 2025, authorized by the Cyber Security Act 2024.

Product manufacturer details	
Name of the manufacturer	Kmart Australia Limited
Address of the manufacturer	1 Middle Rd, Chadstone VIC 3148
Name of the authorized representative	Jerry Or (Product Technologist)
Address of the authorized representative	Room 1016-1023A, 10/F, Trade Square, No. 681 Cheung Sha Wan Road, Cheung Sha Wan, Kowloon, Hong Kong
Name(s) of other authorized representatives in Australia (if applicable)	N/A
Address(es) of other authorized representatives in Australia (if applicable)	N/A
Product details	
Product type	AIR DRUM KIT
Batch identifier	43758975
Defined support period for the product	We will provide security updates for App until 11 Aug 2026.
	This device will receive all available security updates until at least 11 Aug 2026.

Declaration

It is declared that, in the opinion of the manufacturer:

1. The product listed in the table above has been manufactured in compliance with the requirements of Part 1 of Schedule 1 of the Cyber Security (Security Standards for Smart Devices) Rules 2025.
2. The manufacturer has complied with any other obligations relating to the product in Part 1 of Schedule 1 of the Cyber Security (Security Standards for Smart Devices) Rules 2025.

It is declared that this statement of compliance has been prepared by, or on behalf of, the manufacturer of the product listed in the table above and is accurate at the date of issue of **15th July 2026**.

Prepared by or on behalf of Kmart Australia Limited

Jerry Or

15 July 2026

(Name, function and signature of the signatory of the manufacturer)

(Place and date of issue of the statement of compliance)