




Bookshelf Speakers

Operating Instructions

Please read this manual carefully before using this product and retain for future reference.

- Includes:
- › 1 x Bookshelf Speaker
 - › 1 x Power adaptor
 - › 1 x stereo RCA to 3.5mm audio cable
 - › 1 x Instruction manual

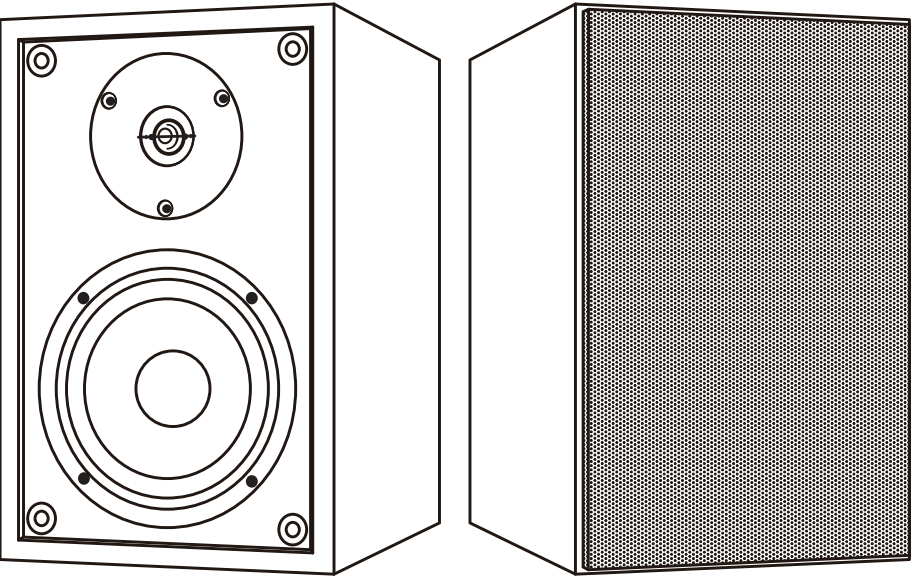

K: 43758982 | T: 72852279
Model: JLR-81031


Product Specifications:

Power Adaptor:
Adaptor Input: 100–240V~ 50/60Hz 1.2A
Adaptor Output: 21V – 1.5A
Bookshelf Speaker:
Input: 21V – 1.5A
Bluetooth® version: 5.3
Power output: 40W
Frequency response: 40Hz–18KHz
Bass unit: 2 x 4Ω 20W
Tweeter unit:2 x 8Ω 5W
Supported audio formats: MP3, FLAC, WAV, WMA, APE

Important Safety Information

- Listening at high volume for extended periods may cause hearing damage.
- Use only the provided 21V DC/1.5A power adaptor. Do not use other adaptors with incompatible voltage/current ratings.
- Using uncertified/incorrect power sources may cause overheating, fire, or permanent device failure.
- Dispose of damaged adapters immediately. Do not attempt to repair cracked/punctured adaptor.
- Do not expose the product to water, moisture or liquids.
- Do not use or store the product in wet or humid conditions.
- Do not disassemble or modify the product.
- Avoid exposure to excessive heat, direct sunlight or open flames.
- Keep the product out of reach of children and pets.


Product Diagram

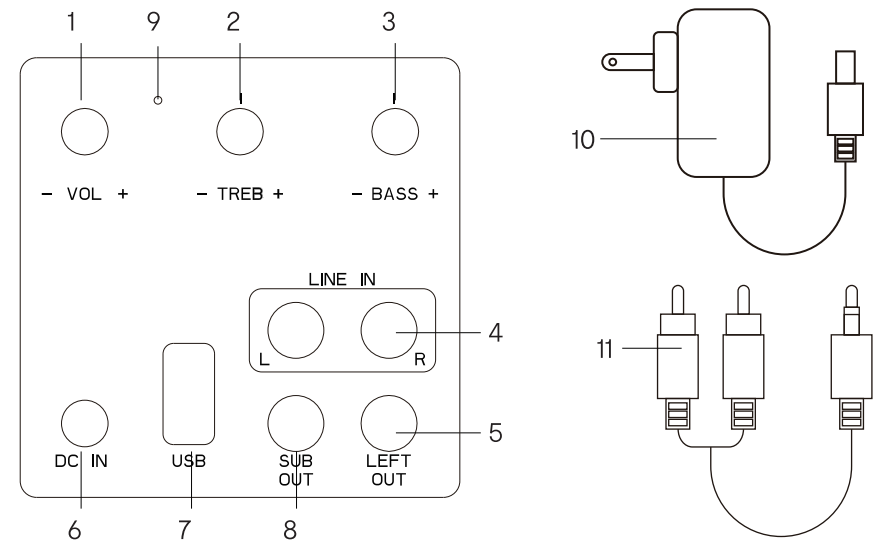

1. Power/Volume Knob
Volume Up: Rotate clockwise the Volume knob.
Volume Down: Rotate counterclockwise the Volume knob.
2. Treble knob
TREB enhance: Rotate clockwise the Treble knob.
TREB attenuate: Rotate counterclockwise the Treble knob.
3. Bass Knob
Bass enhance: Rotate clockwise the Bass knob.
Bass attenuate: Rotate counterclockwise the Bass knob.
4. Line in input port
5. Left speaker audio output – Connect to the main speaker (Right Speaker)
6. DC IN port
7. USB input port
8. Subwoofer Output Port
9. LED indicator
10. Power adaptor
11. Stereo RCA to 3.5mm audio cable

LED indicator:

Standby: Red light
Bluetooth: Blue light
Line mode: Yellow light
USB mode: Purple light

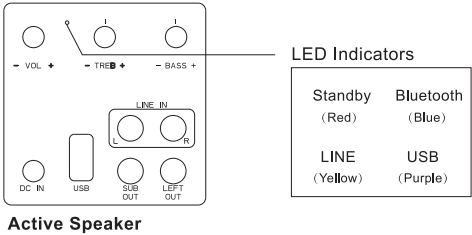

Operating Instructions:

Power on/off

Press and hold the Power knob for 2 seconds to turn the speaker on or off.

Mode switch

Press the Power knob to switch between Bluetooth, Line and USB modes.
Note: USB mode is available only when a USB storage device is connected.

Bluetooth Connection

1. Turn on the speaker. Press the Power knob until Bluetooth mode is selected.
2. Enable Bluetooth on your smartphone, tablet, or other Bluetooth-enabled device.
3. Select "Anko43758982" from the list of available devices.
4. A prompt tone will be heard when the connection is successful.

Note:

1. The speaker will auto-reconnect to the last paired device when turned on again.
2. After initial pairing, the unit will stay paired unless unpaired manually by the user.

AUX / Line In Connection

Connect the included Stereo RCA to 3.5 mm audio cable to the speaker's Line In port and the audio output port of your device.

Compatible devices include:

- TVs
- CD players
- Smartphones
- Tablets
- PCs and laptops
- Other compatible audio devices

Note: If there is no sound when connected to a TV, ensure the TV audio output format is set to PCM.

Subwoofer Connection

Connect an active subwoofer to the SUB OUT port using an RCA audio cable (not included).
The subwoofer output can be used to enhance low-frequency audio performance.

USB Drive

Insert the USB flash drive (exFAT / FAT32 format) into the corresponding port. The speaker will auto-play music from the storage device.

12 Month Warranty

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.
This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage.
You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth® SIG, inc., and any use of such marks by KMART AUSTRALIA is under licence.



MADE IN CHINA
CUSTOMER SERVICE:
KMART AU: 1800 124 125
KMART NZ: 0800 945 995
TARGET AU: 1300 753 567