



Indoor Use Only.

IMPORTANT: Please read these instructions carefully and retain for future reference.

Battery replacement

To replace batteries:

1. Carefully open battery compartment and remove exhausted batteries.
2. Replace with new batteries (Recommended Alkaline batteries).
3. Close the battery compartment.

Battery usage

Do not mix old and new batteries. Replace all batteries of a set at the same time.

Non-rechargeable batteries are not to be recharged;

Rechargeable batteries are only to be charged under adult supervision

Different types of batteries or new and used batteries are not to be mixed

Insert batteries with the correct polarities.

Exhausted batteries are to be removed from the product

Remove batteries when not in use for a prolonged period of time.

The supply terminals are not to be short-circuited

Dispose of batteries immediately in accordance with your local council.

KEEP BATTERIES OUT OF REACH OF BOTH CHILDREN AND PETS.

WARNING:

This product is a decoration not a toy. Keep out of reach of young children as may contain small parts that could represent a choking hazard.

KEEP OUT OF REACH OF SMALL CHILDREN AND PETS.

THIS IS NOT A TOY. FOR DECORATION ONLY.

Please observe the following warnings:

Never locate lights adjacent to Fires, Heaters, and other intense heat sources.

When not in use, store in original packaging provided.

Do not attempt to modify the product in any manner.

These lights use LEDs that are not replaceable.

Made in China