

正面排一排

Instruction Manual

Karaoke Machine

K: 43-767-212 | T: 72-943-601

Made in China

Before use please read this manual carefully.
Please retain for future use.

Battery Safety Warnings

1. Do not expose the battery to extremely high or low temperatures during use, storage, or transportation, nor to low air pressure at high altitudes.
2. Do not replace the battery with an incorrect type, as this may compromise the device's safety protection (especially for lithium batteries).
3. Never dispose of the battery in fire or a hot oven, or mechanically crush or cut the battery, as this may cause an explosion.
4. not leave the battery in extremely high-temperature environments, which may cause explosion or leakage of flammable liquid or gas.
5. A battery exposed to extremely low air pressure may cause explosion or leakage of flammable liquid or gas.
6. Red indicator while charging, light off when fully charged. Fast blue flash on power-up; solid blue after successful Bluetooth pairing. Slow blue flash during audio playback.
7. This product is only compatible a adapter with 5V/1A for power supply.

Product specifications

Wireless connection: FROZEN_KARAOKE
Built-in battery: 3.7V, 1200mAh, 4.44Wh
Speaker x 1: 4Ω 5W
Charging time: 2.5-3 hours
Playing time: 3-4 Hours in 70% volume
Comes with 2 Wired Microphone
Rated input: 5V  1A
Dimensions: 20cm(W) X 9.5cm(D) X 23cm(H)
Product weight: 830g
USB/TF 32GB Max (card not included)
Music format: MP3, WAV

Microphone Storage

The microphone can be stored on the back of the stereo.

Warm reminder

When the device is powered on but not connected for use, if there is no operation for more than 10 minutes, the unit will play a hibernation prompt tone and then automatically enter the intelligent power-saving sleep mode. Press any button to wake the device up.

反面排一排

The diagram shows a rectangular control panel with the following components from left to right:
 - Two circular microphone holes labeled MIC1 and MIC2.
 - A USB Type-A port labeled USB.
 - A TF card slot labeled TF.
 - A DC5V charging port labeled DC5V.
 - An ON/OFF power switch.

Keys Function

- M

Mode conversion button
 Used to convert Wireless mode, USB flash disk mode and memory card mode.

- 🎵

Original singing and backup switch button
 It is used to switch the original singing/ backup, giving children a real experience of KTV.

- ⏮️

Volume ~/Previous
 Short press to decrease the volume, long press to play the previous song.

- ⏭️

Volume+ /Next
 Short press to increase the volume, long press to play the next song.

- ⏸️

Pause/Play button
 When playing a song, press to pause playing, and then press to continue playing.

- 😊

Magic sound changing button
 After starting up, press this button to enter the magic sound changing mode. (Four magic voice effects)

2 MIC holes can be connected to 2 microphones, interactive duet more happily.

Intimate small portable easy to carry, reduce the risk of falling.

12 Month Warranty:

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

MADE IN CHINA

CUSTOMER SERVICE:
 KMART AU: 1800 124 125
 KMART NZ: 0800 945 995
 TARGET AU: 1300 753 567

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth® SIG, Inc., and any use of such marks by KMART AUSTRALIA is under licence.

Package contents

- 1 x Speaker
- 2x Microphone (wired)
- 1 x User Manual
- 1 x USB-A to USB-C Charging Cable

Wireless connection

- > Power on and LED indicator flashes rapidly indicating it is ready to pair with a Bluetooth device.
- > In the Bluetooth® menu on your device, search for "FROZEN KARAOKE" and connect.
- > Once the Speaker is successfully connected, the indicator will remain on and you can now play music through the speaker. When playing music, the indicator will flash slowly.

USB and TF Card mode

- > Insert a TF card or less than 32GB USB storage device (not included, up to 32GB) into the TF card slot, it will play music automatically.