

# anko

## SANDWICH PRESS

Model: LW-010D

### INSTRUCTION MANUAL

PLEASE SAVE THESE INSTRUCTIONS

## IMPORTANT SAFEGUARDS

### Word Definitions

**DANGER** - Indicates an imminently hazardous situation, which, if not avoided, will result in death or serious injury. Usage of this signal word is limited to the most extreme situations.

**WARNING** - Indicates a potentially hazardous situation, which, if not avoided, could result in death or serious injury.

**CAUTION** - Indicates a potentially hazardous situation, which, if not avoided, may result in minor/moderate injury or product/property damage. It also alerts against unsafe practices.

When using this or any other electrical appliance, always follow these basic safety precautions:

### READ ALL INSTRUCTIONS BEFORE USE.

**WARNING** - To reduce the risk of fire, electric shock, or serious personal injury:

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Always use the product on a flat, stable, heat-resistant surface.
- The temperature of the accessible surface may be very high when the appliance is in use. Make sure not to touch these hot parts of the appliance.
- Use the product in a well-ventilated area. Keep at least 4-6 inches of space on all sides of the product to allow adequate air circulation.
- Do not place the product on or near a gas or electric burner, or inside or on top of a heated oven or other heat source.
- Do not allow the product to touch curtains, wall coverings, clothing, draperies, or other flammable materials during its use.
- Do not touch hot surfaces of the product. Do not move the product while it is plugged in. Allow the product to thoroughly cool before handling it.
- Do not use attachments not recommended for use with this product or sold by the product manufacturer.
- Do not use the product near water or other liquids.

1

## 12 Month Warranty

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

### Contact for Kmart purchases

Kmart Australia Ltd.  
C/- Customer Service Centre  
690 Springvale Road,  
Mulgrave Vic 3170  
Customer Service: 1800 124 125  
(Australia) or 0800 945 995  
(New Zealand) or via  
Customer Help at [kmart.com.au](http://kmart.com.au)

### Contact for Target purchases

Target Australia Pty Ltd  
C/- Customer Service Centre  
2 Kendall Street, Williams Landing,  
Vic. 3027  
Customer Service: 1300 753 567  
or via Customer Help at  
[target.com.au/help/contact-us](http://target.com.au/help/contact-us)

6

**WARNING:** This appliance is not intended for use by young children or infirm persons unless they have been adequately supervised by a responsible person to ensure that they can use the appliance safely. Young children should be supervised to ensure that they don't play with the appliance.

- Do not place or drop the product into water or other liquids. If the product falls into water, immediately unplug it from the electrical outlet. **Do not touch or reach into the water.**

- Do not leave the product unattended while it is in use. The appliance is not intended to be operated by means of an external timer or separate remote-control system.
- Do not put any stress on the Power Cord where it connects to the product as the Power Cord could fray and break.
- Do not plug or unplug the product into/from an electrical outlet with a wet hand.
- Keep the product and its Power Cord away from heated surfaces.
- Never operate this product if it has a damaged Power Cord or Plug. It is not working properly, has been dropped, damaged, or exposed to water or other liquids.
- If the supply cord is damaged DO NOT use the item. The power cord must be replaced by a qualified electrical person only.

**CAUTION** - To reduce the risk of personal injury or product/property damage:

- This product is intended for indoor, non-industrial, non-commercial, household use only as a grill maker and healthy grill. Do not use the item outdoors or for any other purpose.
- Do not allow the Power Cord to hang where it may be tripped over or pulled (e.g., over the edge of a table or counter).

### SPECIAL INSTRUCTIONS:

- To avoid a circuit overload when using this product, do not operate another high-wattage product on the same electrical circuit.
- A short power supply cord is provided with this product. An extension cord is not recommended for use with this product, but if one must be used:
  - The marked electrical rating of the cord must be at least as great as that of the product.
  - Arrange the extension cord so that it does not hang where it can be tripped over or pulled unintentionally.

- CAUTION, hot surface.** Care must be taken. The surface is liable to get hot during use.

This appliance is intended to be used in household and similar applications such as:
 

- cafés/kitchens areas in shops/offices and other working environments;
- flam houses;
- by clients in hotels, motels and other residential type environments;
- hot and humid type environments.

- For Cleaning, please refer to CLEANING section.

5

2

## Parts

Power indicator light



## To Use

**CAUTION:** Do not use this product to cook or defrost frozen food. All food must be completely defrosted before cooking it with this product.

**NOTE:** During the initial use of this product, it may produce some smoke. This is normal and will subside with further use.

- Before using this product for the first time, clean it as described under the cleaning section.
- Press in the end of the Locking Latch nearest the Handle to lock the product.
- Open the unit by pulling the Handle up.
- Close the Plates and turn the unit on by plugging it into a standard electrical outlet. Verify that the Power Indicator Light illuminates in orange. **WARNING:** The Cooking Plates and metal surfaces of the unit will become extremely hot when in use. To avoid a burn hazard, wear heat resistant mitts or gloves and touch only the black portion of the Handle.
- After the unit preheats for approximately five minutes, the Ready Indicator Light will illuminate in green, indicating the product is ready for use.
- Use the Handle to lift the Upper Plate. Place food on the Lower Plate using wooden or plastic heat-resistant utensils. **CAUTION:** Do not use metal utensils on this product, as they will scratch and damage the Plates' non-stick coating.

3

- Use the Handle to lower and rest the Upper Plate on top of the food.

### NOTES:

- The cooking time for different foods depends on the type and thickness of the foods.
  - Food should be cooked thoroughly before consumption.
- When the food is cooked as desired, lift the Handle to open the Plates, then remove the food using the utensils. If more cooking will be done at this time, close the Plates to conserve heat.
  - Repeat Steps 7-9 until all cooking is complete, reapplying cooking oil as necessary.
  - Turn off the product by unplugging the Power Cord from the electrical outlet.
  - When the unit has completely cooled, clean and dry it.
  - Lock the unit in its closed position by pressing in the end of the Locking Latch furthest from the Handle.

## CLEANING

- Before cleaning, unplug and wait for the appliance and the plates to cool down.
- Wipe the outside with only a slightly moistened cloth ensuring that no moisture, oil or grease enters the cooling slot.
- Do not clean the inside or outside with any abrasive scouring pad or steel wool as this will damage the finish.
- Do not immerse in water or any other liquid.

TECHNICAL SPEC.  
220-240V-50Hz 1600W  
Made in China

4