

audiosonic™

- *Compact tablet design*
- *Swivel screen*
- *Play movies from USB*
- *Built-in Rechargeable battery*

9" Portable DVD Player

Model No.: PD-924

DVD
VIDEO



Instruction Manual

Thank you for purchasing this product.
Please read this manual carefully and
save it for future reference.

Important Safety Instructions



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

CLASS1
LASER PRODUCT

CAUTION: Laser radiation when open. Do not stare into beam.

CAUTION: USE OF ANY CONTROLS, ADJUSTMENTS, OR PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

POWER SUPPLY:

Connect the supplied adapter to the side of the DVD player in the slot marked DC IN. Plug the ends of the power cord to an AC100-240V outlet.

If the unit will not be used for a long time, disconnect the plug from the outlet.

NOTE:

Before plugging the power cord into an AC outlet, make sure that all the connections have been made.

Important Safety Instructions

1. Read these Instructions.
2. Keep these Instructions.
3. Heed all Warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding - type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding blade. The wide blade or the third blade are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.



12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

Special note: When placing your unit on a lacquered or natural finish, protect your furniture with a cloth or other protective material.

Do not touch the TFT-LCD screen by hand directly.

Warnings

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Additional Warnings

- The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.
L'appareil ne doit pas être exposé aux écoulements ou aux éclaboussures et aucun objet ne contenant de liquide, tel qu'un vase, ne doit être placé sur l'objet.
- Battery shall not be exposed to excessive heat such as sunshine, fire or the like.
Les piles ne doivent pas être exposées à de forte chaleur, tel qu'à la lumière du soleil, au feu ou autres choses de semblable.
- Caution marking is located at the rear or bottom of the apparatus.
Attention marquage est situé sur le panneau arrière ou inférieur de l'unité.
- The marking information is located at the rear or bottom of apparatus.
Le marquage est situé sur le panneau arrière ou inférieur de l'unité.



This symbol indicates that this product incorporates double insulation between hazardous mains voltage and user accessible parts.

DVD Player

Features

- DVD player : DVD, DVD±R/RW
- CD player: CD, CD-R/RW, JPEG CD
- TFT LCD display
- USB port & card reader
- Aspect ratio: 16:9
- 3.5mm audio/video output
- 3.5mm audio/video input
- Stereo headphone jack
- Built-in speakers
- Full function remote
- Multi-language on-screen display
- PAL video system
- Built-in rechargeable battery
- DC power input

Included

- 1 Remote control
- 1 A/V cable
- 1 Stereo headphone
- 1 AC/DC power adapter

Table of Contents

 
DVD Player	3
Features	
Included	
Table of Contents	4
Setup	5
Power	
Battery Power	
Remote	
Charging the Built-in Battery	
Introduction	6-7
DVD & CD Playback	8
Loading a Disc	
Playing a Loaded Disc	
Programming a Loaded Disc	
Accessing the Setup Menu	
Setup Menu Contents	
Setup Menu	9 -11
Accessing the Setup Menu	
General Setup Operation	
General Setup Page	
Audio Setup Page	
Video Setup Page	
Preference page	
Using a USB Thumb Drive or Memory Card	11
Connecting a USB Thumb Drive	
Accessing Content on a USB Drive	
Connecting a Memory Card	
Accessing Content on a Memory Card	
Audio/Video Output and Input	12
Using the 3.5mm Audio/Video Output	
Using the 3.5mm Audio/Video Input	
Troubleshooting	13-14
12 Month Warranty	15

Setup

Power

DC power input: requires an AC/DC adapter (included)

The **POWER INDICATOR** will turn red whenever the portable DVD player is powered on.

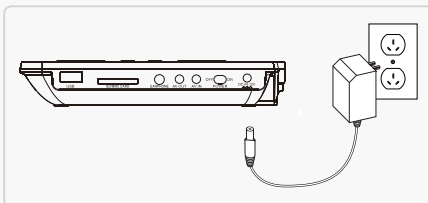

Battery Power

DC battery power: built-in rechargeable battery

The **CHARGE INDICATOR** will turn red whenever the built-in rechargeable battery is charging.

The **POWER INDICATOR** will turn red whenever the portable DVD player is powered on.

When the battery is fully charged, the **CHARGE INDICATOR** will turn green.

Charging the Built-in Battery

1. Plug the included AC/DC power adapter into the **DC POWER INPUT** on the portable DVD player and an AC power outlet.
2. Adjust the **POWER** switch to the off position.

The **CHARGE INDICATOR** will turn red whenever the built-in rechargeable battery is charging.

 
When the battery is fully charged, the **CHARGE INDICATOR** will turn green.

Remote

Loading batteries to the remote control



- Remove the battery compartment cover.
- Load two AAA (UM-4 or R03) batteries into the battery compartment, (included)
- Make sure that the batteries have been inserted in the correct polarities matching to the symbols +, - marked in the battery compartment. Close the battery compartment cover.
- When replacing batteries, replace both batteries. Do not mix new and used batteries operating together, otherwise, the operation lifetime will be much shorter than normal.
- Remove the batteries if the unit will not be used for a prolonged period of time.

The remote control transmits a directional infrared beam. Be sure to aim the remote control directly at the infrared sensor of the unit during operation.

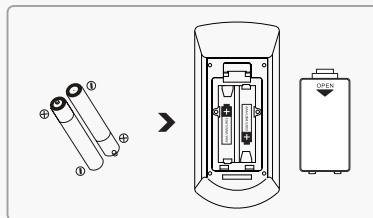


If the sensor has been covered or there is a large object between the remote control and the sensor, the sensor will not respond.

  The sensor may be not able to receive the remote signal when it is exposed to direct sunlight or a strong artificial light (fluorescent or strobe light). In this case, change the direction of the light or reposition the unit to avoid direct lighting.

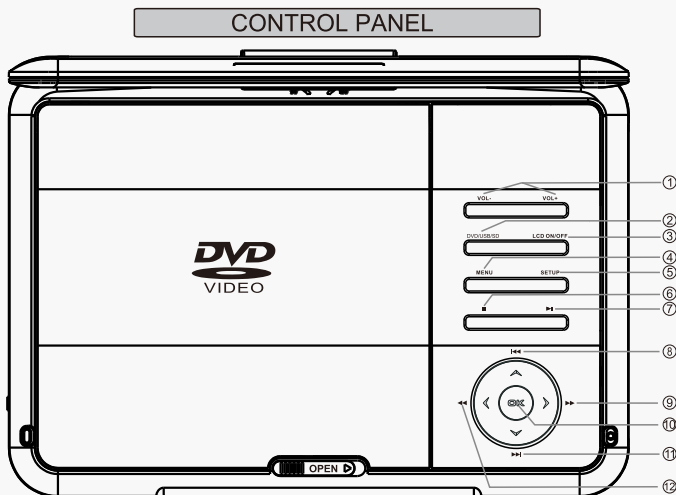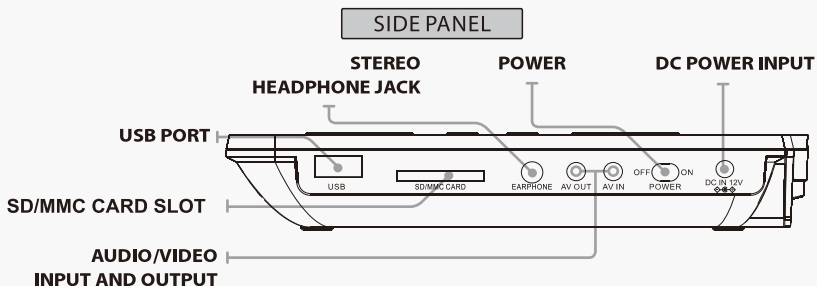

- ① VOL+/VOL-: Press to adjust the volume.
- ② DVD/USB/SD: Press to display the menu to select DVD/AV/Media(USB/SD) mode.
- ③ TFT ON/OFF: Press to switch on/off screen
- ④ MENU: Press to view TITLE menu on a loaded disc.
- ⑤ SETUP: Press to enter into the SETUP menu, press again to exit.
- ⑥ ■: Press to stop a playback.
- ⑦ ►►: Press to start or pause a playback.
- ⑧ ◀◀/▲: Press to skip to previous chapters or tracks, or select upper items in a menu.
- ⑨ ►►/▶: Press to fast forward through chapters and tracks, or move towards the right in a menu.
- ⑩ OK: Press to confirm a selection or setting in a menu.
- ⑪ ►►/▼: Press to skip next chapters or tracks, or select lower items in a menu.
- ⑫ ◀◀/◀: Press to fast rewind through chapters and tracks, or move towards the left in a menu.

 REMOTE CONTROL

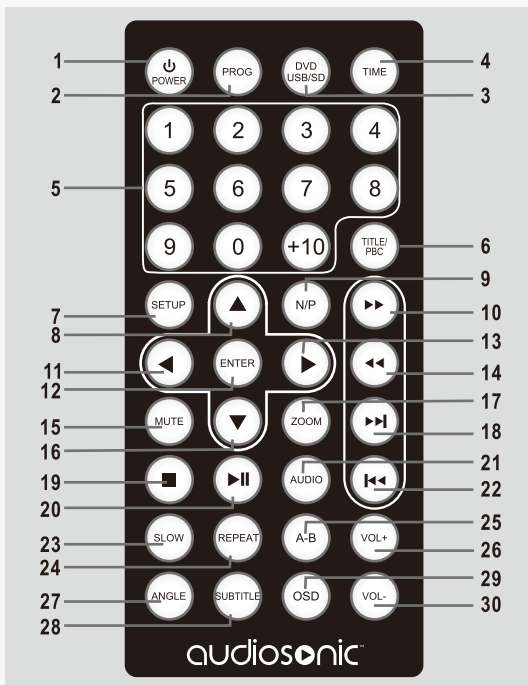

1. **POWER:** Turns the unit On and Off.
2. **PROG:** Displays the track menu available to program sequence of play. Enter the track numbers desired (i.e. 2,4,6,8). To exit this mode, press the PROG button to exit.
NOTE: Some DVD discs do not allow program setting. Single track discs can not be programmed.
3. **DVD/USB/SD:** to choose DVD/AV/MEDIA (USB/SD) mode.
4. **TIME:** Displays disc information (title/chapter/audio/subtitle/time elapse/bitrate).
5. **KEY-PAD:** To select the track number.
6. **TITLE/PBC:** (Operates only with DVD discs with title feature). Press this button to display "Title Menu". The DVD will start playing or you can select a disc track by entering the track number. The DVD will start with Chapter 1 from the selected title.
7. **SETUP:** To enter the main menu. Setup menu is a facility for the user to adjust the detail setting of the DVD player.
8. **UP:** Upward navigation key.
9. **N/P:** During DVD mode, it allows you to select the system: NTSC/PAL (default setting) or Multi.
10. **FAST FORWARD:** During playback, press this button repeatedly to select fast forward speeds between (2x/4x/8x/16x/32x).
11. **LEFT:** Left Navigation Key.
12. **ENTER:** To confirm your selection.

 
13. **RIGHT:** Right Navigation Key.
14. **REWIND:** During playback, press this button repeatedly to select rewind speeds between (2x/4x/8x/16x/32x).
15. **MUTE:** Cancels all audio.
16. **DOWN:** Downward Navigation Key.
17. **ZOOM:** Allows zoom in and zoom out options
18. **NEXT:** Skips to the next Chapter/Track.
19. **STOP:** During playback, press once to stop the disc. Press play and it will resume. Press stop key twice and it will discontinue play.
20. **PLAY/PAUSE:** This button toggles between start and pause mode.
21. **AUDIO:** During playback, press the AUDIO button repeatedly to select the desired audio sound track. A DVD disc may contain up to 8 selectables. **NOTE:** Not all DVD's have this feature.
22. **PREVIOUS:** To go to previous chapter/track.
23. **SLOW:** During playback, press the button repeatedly to reduce playback speed.
24. **REPEAT:** Press once to repeat chapter, press twice to repeat title, press three times to repeat ALL, press four times to cancel repeat. **NOTE:** Some disc (CD/JPEG/Kodak Picture CD/MP3) operates this function in menu mode.
25. **A-B REPEAT:** Repeats a selected point from A to B. Press once to select point A, press again to select point B. Press button again to turn off feature.
26. **VOLUME+:** Increase the audio/volume.
27. **ANGLE:** To change angles of playback. **NOTE:** Function depends on recorded format of disc.
28. **SUBTITLE:** Displays what is being said in text form.
29. **OSD:** On screen displays information of title/chapter/title remain/time elapse.
30. **VOLUME-:** Reduces the audio/volume.

DVD & CD Playback

Loading a Disc

1. Slide the **OPEN** switch to open the **DISC DOOR**.
2. Load a disc into the DVD player, label side facing up.
3. Manually close the **DISC DOOR**.

After a disc is loaded, it will begin playing automatically.

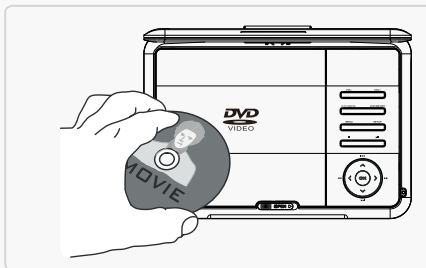

Playing a Loaded Disc

1. Follow the instructions for [Loading a Disc](#).
2. If the disc does not begin playing automatically, press the **PLAY/PAUSE** button.

Programming a Loaded Disc

1. Follow the instructions for [Loading a Disc](#) and [Playing a Loaded Disc](#).
2. While the loaded disc is playing, press the **PROGRAM** button on the remote.
3. Use the **NUMBER KEYPAD** to enter in the titles and chapters in the order you want to view them.

DVD Titles and chapters or CD tracks will play in the order they are programmed.

4. Repeat step 3 until the desired DVD titles and chapters or CD tracks are programmed.

Setup Menu

Accessing the Setup Menu

1. Press the **SETUP** button to access the setup menu.
2. After finish setting, press **SETUP** button again to exit.

General Setup Operation

Press **SETUP** button to enter into the setup menu, then press ◀/▶ button to highlight General, Audio, Video or Preference submenu, press **ENTER/OK/▼** button to enter into highlighted submenu. In submenu, press ▲/▼ to highlight preferred items, the current setting of the highlighted items shall display. Press ▶ button to enter into settings of selected item, then press ▲/▼ button to select different setting, and press **ENTER/OK** button to confirm the setting, the background color of the confirmed setting shall turn into orange. After the setting is done, press ◀ button to exit the setting.

There are following submenus:

 
GENERAL: General Setup Page menu.

AUDIO: Audio Setup Page menu.

VIDEO: Video Setup Page menu.

PREFERENCE : Preference Page menu.

General Setup Page

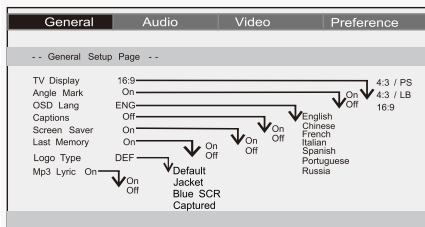

● TV Display:

4:3 / PS: if you have a normal TV and want both sides of the picture to be trimmed or formatted to fit your TV screen.

4:3 / LB: if you have a normal TV. In this case, a wide picture with black bands on the upper and lower portions of the TV screen will be displayed.

16:9: wide screen display.

● Angle Mark

Displays current angle setting information on the right hand corner of the TFT screen if available on the disc.

● OSD Language

You can select your own preferred language.

● Captions

Closed captions are data that are hidden in the video signal of some discs. Before you select this function, please ensure that the disc contains closed captions information and your TV set also has this function.

● Screen Saver

This function is used to turn the screen saver On or Off.

● Last Memory

This function is used to set Resume Playback function On/Off. When it is set on, the same disc can be played starting from where the previous playback was stopped.

 
● Logo Type

This function is used to change the Power-on display mode. Select Default or Jacket, the unit shall display the default picture when power-on. A blue screen shall display when Blue SCR is selected. A captured picture, if any, shall display when Captured is selected.

● Mp3 Lyric

This function is used to turn the Mp3 Lyric function On or Off.

Audio Setup Page

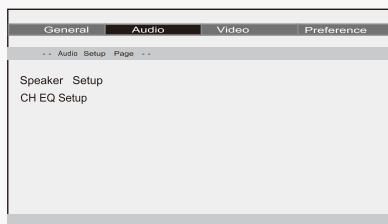

● Speaker Setup

 
On Audio Setup Page, press ▲/▼ to highlight Speaker Setup, then press **OK** button to enter into Speaker Setup submenu to setup Downmix:
→ **LT/RT** :Select this option if your DVD Player is connected to a decoder.
→ **Stereo** :Select this option when output delivers sound from only the two front speakers.
→ **V SURR**:Select this option when output Virtual surround sound.

● CH EQ Setup

On Audio Setup Page, press ▲/▼ to highlight CH EQ Setup, then press **OK** button to enter into the submenu and change the settings.

Setup Menu

Video Setup Page

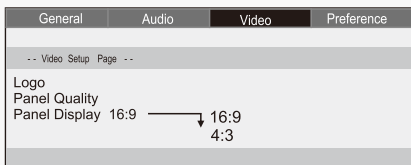

● **Logo:** This function is used to capture current display during video playback.

● **Panel Quality Setup page Sharpness**

This function is used to set the sharpness of picture High, Medium or Low.

Brightness

This function is used to set brightness of picture. Highlight Brightness item, then press ENTER or ► button to enter brightness submenu, then press ◀/▶ to setting brightness from -15 to +15, press ENTER or OK button to save and exit.

Contrast

This function is used to set contrast of picture. Highlight Contrast item, then press ENTER or ► button to enter Contrast submenu, then press ◀/▶ to setting contrast from -12 to +12, press ENTER or OK button to save and exit.

Hue

This function is used to set Hue of picture. Highlight Hue item, then press ENTER or ► button to enter Hue submenu, then press ◀/▶ to setting contrast from -9 to +9, press ENTER or OK button to save and exit.

Saturation

This function is used to set Saturation of picture. Highlight Saturation item, then press ENTER or ► button to enter Saturation submenu, then press ◀/▶ to setting contrast from -9 to +9, press ENTER or OK button to save and exit.

● **Panel Display:** This function is to change the display mode between 4:3 and 16:9.

● **TV Type**

Selecting the color system that corresponds to your TV connected to the AV output. This DV D player is compatible with both NTSC and PAL TV system.

PAL Select this if the connected TV is PAL system. It will change the video signal of a NTSC disc and output in PAL format.

NTSC Select this if the connected TV is NTSC system. It will change the video signal of a PAL disc and output in NTSC format.

Auto Change the video signal output automatic according to the playing disk format.

● **PBC:** Press to turn on/off programming playback.

● **Audio:** Selects a language for audio (if available).

● **Subtitle:** Selects a language for subtitle (if available).

 
● **Disc Menu:** Selects a language for disc menu (if available).

● **Parental**

Some DVDs may have a parental level assigned to the complete disc or to certain scenes on the disc. This feature lets you set a playback limitation level. The rating levels are from 1 to 8 and are country dependent. You can prohibit the playing of certain discs that are not suitable for your children or have certain discs played with alternative scenes.

● **Password**

This function is used to set Password Mode On or Off, and change the password. Highlight Password, then press ENTER or ► button to enter Password Setup Page and set Password Mode On or Off:

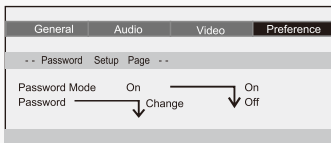


Highlight Password, then press ► to select Change, to press ENTER or OK to enter into the following submenu:



OLD PASSWORD: Enter the OLD password, (Factory setting is "0000"), and the cursor will jump automatically to NEW PASSWORD

NEW PASSWORD: Enter the NEW password. Enter 4 digits from the remote control unit numeric buttons, and the cursor will automatically jump to CONFIRM PASSWORD.

 Preference Page

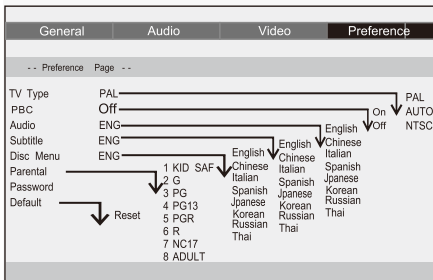

Setup Menu

CONFIRM PASSWORD: Confirm the NEW password by entering it again. If the confirmation is incorrect, the cursor will stay in this column. After entering the correct new password again, the cursor will jump automatically to OK.

OK: When cursor is on this button, press ENTER key to confirm setting.

N Note: If the password has been changed, the parental and disc lock code will also be changed. The default password(0000) is always active even the password has been changed.

● **Default:** Reset to the factory default setting.

Using a USB Thumb Drive or Memory Card

Connecting a USB Thumb Drive

1. Connect a USB Thumb Drive to the **USB PORT**.

MPEG 1 and MPEG 2 video formats are supported.

Accessing Content on a USB Drive

1. Follow the instructions for [Connecting a USB thumb drive](#).
2. Press DVD/USB/SD to display the on screen menu, press ▲/▼ to highlight Media, then press **ARROWS** button to highlight USB mode, press **ENTER** to confirm.
3. Use the **ARROWS** and **ENTER** buttons to select and play content from the connected USB thumb drive.

 
 
Connecting a Memory Card

1. Connect a memory card to the **MEMORY CARD SLOT**.

MPEG 1 and MPEG 2 video formats are supported.

Accessing Content on a Memory Card

1. Follow the instructions for [Connecting a Memory Card](#).
2. Press DVD/USB/SD to display the on screen menu, press ▲/▼ to highlight Media, then press **ARROWS** button to highlight SD mode, press **ENTER** to confirm.
3. Use the **ARROWS** and **ENTER** buttons to select and play content from the connected memory card.

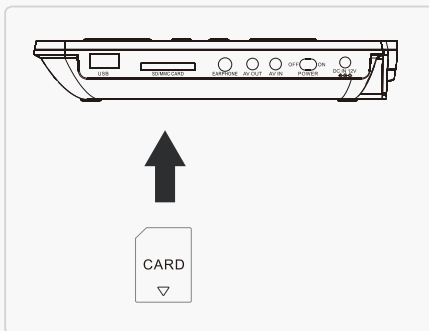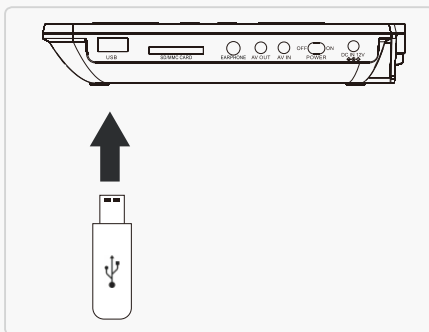

Audio/Video Output and Input

Using the 3.5mm Audio/Video Output

Requires a 3.5mm to 3 x RCA audio/video adapter and RCA audio/video cable (included).

1. Connect the 3.5mm to 3 x RCA audio/video adapter to the **3.5mm AUDIO/VIDEO OUTPUT** on the portable DVD player.
2. Connect the RCA stereo audio inputs and composite video input on a television or monitor.
3. Audio and video played through the portable DVD player will now be output through the connected television.

Using the 3.5mm Audio/Video Input

Requires a 3.5mm to 3 x RCA audio/video adapter and an RCA audio/video cable (included).

1. Connect the 3.5mm to 3 x RCA audio/video adapter to the **3.5mm AUDIO/VIDEO INPUT** on the portable DVD player.
2. Connect the the RCA stereo audio outputs and composite video outputs on an audio/video source such as a television.
3. Press **DVD/USB/SD** button to display the on-screen menu, press **▲/▼** to highlight **AV**, then press **ENTER** to confirm.
4. Audio and video played through the connected television will now be output to the portable DVD player.

Troubleshooting

If you suspect there is something wrong with the DVD player, immediately turn the power off. Disconnect the power connector and check that there is no smoke or excessive heat coming from the unit.

Never open or try to repair the unit yourself. There are no user serviceable parts inside.

PROBLEM

The player cannot play.

POSSIBLE CAUSE

POSSIBLE CAUSE	POSSIBLE SOLUTION
The disc cover may not be closed.	Close the disc cover.
There may be no discs in the DVD drive.	Put a disc in to the DVD drive.
The disc may not be put in in the right way.	Put the disc in with the label side up.
The disc may be dirty or warped.	Clean or change the disc.
The player's region code may not as the same as the region code of DVD disc.	Make sure the player's region code is the same as the region code of DVD disc.
There may be water on the lens.	Remove the disc and keep the player being powered off for at least two hours.

There is no sound .

The system connection may be not correct.	Connect the system correctly.
The speakers may be turned down.	Turn on the speaker.
The sound setup of the DVD disc may be not correct.	Setup the sound of the DVD correctly.
The disc may be dirty or warped.	Clean or change the disc.

Troubleshooting

PROBLEM	POSSIBLE CAUSE	POSSIBLE SOLUTION
<p>There is no picture.</p>	<p>The LCD may be not in correct video mode.</p>	<p>Choose the correct video mode.</p>
	<p>The system connection may be not correct.</p>	<p>Connect the system correctly.</p>
	<p>The unit may be not in AV out mode.</p>	<p>Switch AV IN/OUT on the right panel to OUT.</p>
<p>Poor AV performance.</p>	<p>The disc may be dirty or warped.</p>	<p>Clean or change the disc.</p>
<p>The remote control does not work</p>	<p>There may be some obstructions between the remote control and the player.</p>	<p>Remove the obstruction between the remote control and the player.</p>
	<p>The remote control may not be pointed at the player.</p>	<p>Point the remote control at the player directly.</p>
	<p>The batteries of remote control may not be inserted correctly.</p>	<p>Make sure the polarity of each battery is correct.</p>
	<p>The batteries of remote control may be out of power or weak.</p>	<p>Replace the batteries.</p>

Other possibilities:

Static or other external interference may cause the player function abnormally. In order to recover normal status, please unplug the power-supply cord and then plug it into the outlet again to reset the player. If the problems still exist, please cut off the power supply and consult your service center or the qualified technician.

12 Month Warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on **1800 124 125 (Australia)** or **0800 945 995 (New Zealand)** or alternatively, via email at **customer.satisfaction@kmart.com.au** for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.