

145*210mm 23/9/12

anko

Electric Grill (Griddle)

Model No:TXG-034C



12 Month Warranty

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children less than 8 years.


Basic Safety Instructions

1. Read and familiarize yourself with all operating instructions before attempting to use the grill.
2. Keep the appliance out of the reach of children.
3. As all cooking times vary do not leave the appliance unattended while switched on.
4. Beware that surfaces may become very hot during and after use always use an oven glove or cloth. Use the handles provided and do not touch heating surfaces.
5. Always disconnect the plug from the mains before cleaning--- wipe clean only --do not immerse unit, plug or cord in water or other liquid.
6. Always allow the unit to cool down before storage or cleaning.
7. Always ensure that the plastic drip tray is in place before use, remove and empty the drip tray before storing the unit.
8. Save this instructions for future reference.
9. There are no user serviceable parts, if the unit fails, the product must be repaired by a qualified electrical person only or must be disposed.
10. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
11. Children should be supervised to ensure that they do not play with the appliance.
12. This appliance is not intended to be operated by means of an external timer or separate remote-control system.
13. Use only the appropriate electrical connector supplied with the unit.
14. For Domestic use Only.
15. This appliances is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and others working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.
16. Please lay the grill flat for storage.
17. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
18. For clean surfaces in contact with food, please refer to Cleaning Instructions section.

Getting The Best Results From Your No Fat Grill


The grill is designed to cook using only the natural oils and fats contained within the food-no extra fat has to be added. During cooking much of the fat contained within the food is removed and will be collected in the drip tray thus making the food more healthy than if fried or grilled using additional oils or fats. Best results are therefore obtained when cooking foods containing some natural fats e.g. all types of meat and fish, burgers and other meat products, however different types of food can also be cooked including vegetables and even sandwiches.

PARTS IDENTIFICATION

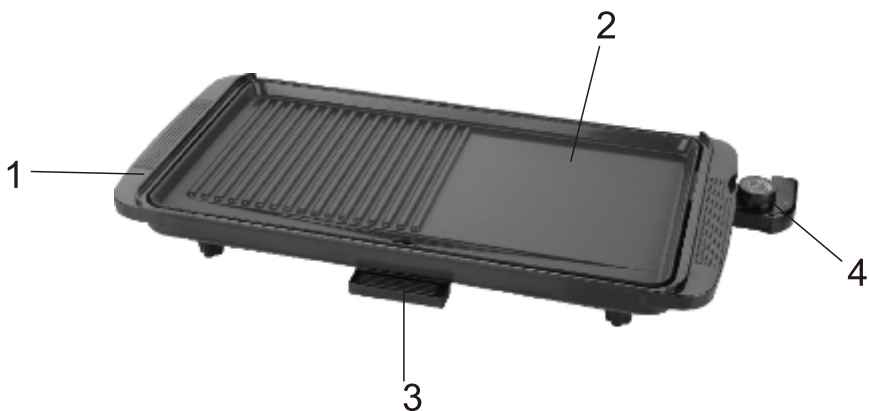

- 1.Cool-Touch Handle
- 2.Non-stick Grilling Surface
- 3.Drip Tray
- 4.Temperature Control Probe

Adjustable temperture Setting	Temperature
0	0
0-1	100-130 °C
2	109-138 °C
3	127-157 °C
4	136-165 °C
5	179-200 °C

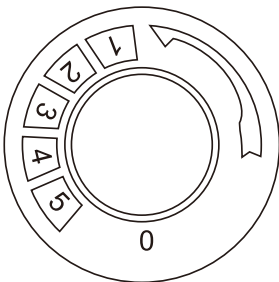

Operating Instructions

1. Before first use or after long periods of non-use wipe the non-stick cooking plates with a damp cloth to ensure clean surfaces.
2. Connected the grill to mains power and set the temperature control knob to desired heat setting, the power indicator light will glow to indicate the grill is in use.
3. For best results always pre-heat the grill for three to four minutes before use by plugging in to the mains and allowing it to heat up without any food on the cooking plate.
4. When the food is fully cooked remove it carefully from the grill using plastic/wood tools suitable for non-stick surfaces.
5. Immediately after use unplug the grill and allow it to cool sufficiently before cleaning and storage, always ensure that the drip tray is removed and cleaned.

Caution: Hot surface! Never leave the unit unattended when in use.

Cleaning Instructions

1. Ensure that the unit is unplugged and cool before attempting cleaning.
2. Never use a scouring pad or abrasive cleaner as this will damage the non-stick coating, plastic and metal parts.
3. The drip tray may be washed in hot soapy water.
4. Use specially shaped spatula or plastic/wood tools to scrape off any excess food adhering to the non-stick plates, a wet non-abrasive sponge or paper towel can be used to rub off stubborn patches.
5. Dry the non-stick plates thoroughly using a paper towel, the outer plastic case can be cleaned with a paper towel or soft cloth.