

# ASSEMBLY INSTRUCTIONS

## CAUTION:

THIS ITEM IS MADE OF HOLLOW BOARD AND METAL FRAME. TO BE ASSEMBLED ON A DRY, SOFT, SMOOTH AND CLEAN SURFACE. DO NOT CLEAN WITH DETERGENT OR CHEMICALS. AVOID DIRECT SUNLIGHT. DO NOT SIT OR STAND ON THE UNIT. DO NOT DRAG THE UNIT. MAXIMUM SAFE LOAD (EACH TIER):6KGS.

## WARNING:

KEEP AWAY FROM CHILDREN AND BABIES. THIS PACKAGE CONTAINS SMALL PARTS AND SHARP POINTS. ADULT ASSEMBLY REQUIRED.

IT IS RECOMMENDED YOU CONSULT YOUR TRADE PROFESSIONAL TO ASSIST WITH INSTALLATION OF THE WALL ANCHOR.

	A. Metal Frame	2 pcs		G. Board 570x348x15mm	1pcs		M. Screw M4x30mm	4 pcs
	B. Metal Frame	2 pcs		H. Board 570x248x15mm	1 pcs		N. Screw Cap M4mm	4 pcs
	C. Metal Frame	2 pcs		I. Board 570x148x15mm	1 pcs		O. Hex Key	2 pcs
	D. Metal X Wire	1pcs		J. Screw M7x48mm	16 pcs		P. Hex Key	1 pcs
	E. Metal Joint	4 pcs		K. Screw M6x10mm	8 pcs		Q. Wrench	1 pcs
	F. Board 570x448x15mm	1 pcs		L. Screw M8x15mm	8 pcs		R. Wall Anchor	1 pcs
				S. screw M4x15mm	1 pcs			
				T. Tapping Screw M4x35mm	1 pcs			
				U. Wall Plug	1 pcs			

①

Tool Required:  
O. Hex Key

②

Tool Required:  
O. Hex Key

③

Tool Required:  
O. Hex Key

④

Tool Required:  
O. Hex Key

⑤

Tool Required:  
P. Hex Key & Q. Wrench

Screw to the wall

Seek advice from a qualified trades person on how to attach this to your specific wall.

Part D should be on the opposite side (straight side, not diagonal side)

⑥

- It is strongly recommended that this product is permanently fixed to the wall.
- Please seek professional advice if you are in doubt of what fixing device to use.
- Regularly check that anchors are securely maintained.
- Stability of tall items may be affected by thick pile carpet or uneven floors.
- Do not place unanchored televisions on furniture.

Caution: (for your safety when attaching the anchor fixings, please note the following :)

- Check any electrical wires or plumbing inside the wall before drilling any holes (if you are unsure please seek professional advice from a qualified tradesperson)