

anko

4 Slice Flat Sandwich Press LW-8530A User Manual



PLEASE READ AND SAVE THESE
INSTRUCTIONS FOR FUTURE REFERENCE

IMPORTANT SAFEGUARDS

Signal Word Definitions

DANGER - Indicates an imminently hazardous situation, which, if not avoided, will result in death or serious injury. Usage of this single word is limited to the most extreme situations.

WARNING - Indicates a potentially hazardous situation, which, if not avoided, could result in death or serious injury or damage to property.

CAUTION - Indicates a potentially hazardous situation, which, if not avoided, may result in minor/moderate injury or product/property damage. It also alerts against unsafe practices.

When using this or any other electrical appliance, always follow these basic safety precautions:

READ ALL INSTRUCTIONS BEFORE USE.

WARNING- To reduce the risk of fire, electric shock, or serious personal injury:

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Always use the product on a flat, stable, heat-resistant surface.
- The temperature of the accessible surfaces may be very high when the appliance is in use. Make sure not to touch these hot parts of the appliance.
- Use the product in a well-ventilated area. Keep at least 4-6 inches of space on all sides of the product to allow adequate air circulation.
- Do not place the product on or near a gas or electric burner, or inside or on top of a heated oven or other heat source.
- Do not allow the product to touch curtains, wall coverings, clothing, dishcloths, or other flammable materials during its use.
- Do not immerse the appliance, power cord or plug in water or any other liquids to protect against electric shock.
- Do not touch hot surfaces of the product. Do not move the product while it is plugged in. Allow the product to thoroughly cool before handling it.
- Do not use attachments not recommended for use with this product or sold by the product manufacturer.
- Do not use the product near water or other liquids.

2

12 Month Warranty

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Willons Landing, Vic. 3027 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us

6

- Do not place or drop the product into water or other liquids. If the product falls into water, immediately unplug it from the electrical outlet. **Do not touch or reach into the water.**
- The appliance should be attended when in use.
- The appliance is not intended to be operated by means of an external timer or separate remote-control system.
- Do not put any stress on the power cord where it connects to the product as the power cord could fray and break.
- Do not plug or unplug the product into/from an electrical outlet with a wet hand.
- Keep the product and its power cord away from heated surfaces.
- Never operate this product if it has a damaged power cord or plug, is not working properly, has been dropped, damaged, or exposed to water or other liquids.
- If the supply cord is damaged, it must be replaced by qualified electrical person in order to avoid a hazard or the product must be disposed.
- Unplug the appliance from a power outlet when not in use and before cleaning.

CAUTION- To reduce the risk of personal injury or product/property damage:

- This product is intended for indoor, non-industrial, non-commercial, household use only as a Sandwich Press. Do not use the item outdoors or for any other purpose.
- This appliance is intended to be used indoors in household and similar applications such as: staff kitchen areas in shops, offices and other working environments, farm houses, by clients in hotels, motels and other residential type environments, bed and breakfast type environments.
- To avoid a circuit overload when using this product, do not operate another high-wattage product on the same electrical circuit.
- Do not allow the power cord to hang where it may be tripped over or pulled (e.g., over the edge of a table or counter).
- Do not use an extension cord with this appliance.
- CAUTION**, hot surface. Care must be taken. The surface are liable to get hot during use.

3

PARTS



OPERATION INSTRUCTIONS

CAUTION: Do not use this product to cook or defrost frozen food. All food must be completely defrosted before cooking it with this product.

NOTE: During the initial uses of this product, it may produce some smoke. This is normal and will subside with further use.

- Before using the product for the first time, clean it as described in the "Cleaning" section.
- Slide in the end of the Locking Latch nearest the Handle to lock the product.
- Open the unit by pulling the Handle up.
- Close the plates and turn the unit on by plugging it into a standard electrical outlet. Verify that the Power indicator light illuminates in orange.

WARNING: The cooking plates and metal surfaces of the unit will become extremely hot when in use. To avoid a burn hazard, wear heat resistant mitts or gloves and touch only the black portion of the Handle.

- After the unit preheats for approximately five minutes, the Ready indicator light will go out, indicating the product is ready for use.
- Use the Handle to lift the upper plate. Place food on the lower plate using wooden or plastic, heat-resistant utensils.

4

CAUTION: Do not use metal utensils on this product, as they will scratch and damage the plates' non-stick coating.

- Use the Handle to lower and rest the upper plate on top of the food.

NOTES:

- The cooking time for different foods depends on the type and thickness of the foods.
 - Food should be cooked thoroughly before consumption.
- When the food is cooked as desired, lift the Handle to open the plates, then remove the food using the utensils. If more cooking will be done at this time, close the plates to conserve heat.
 - Rapids steps 7-8 until all cooking is completed, reapplying cooking oil as necessary.
 - Turn off the product by unplugging the power cord from mains power outlet.
 - When the unit has completely cooled, clean and dry it.
 - Lock the unit in its closed position by sliding in the end of the Locking Latch located on the side of the Handle.

CLEANING

- Before cleaning, unplug and wait for the appliance and the plates to cool down completely.
- Wipe the outside with only a slightly moistened cloth.
- Do not clean the inside or outside with any abrasive scouring pad or steel wool as this will damage the finish.
- Do not immerse in water or any other liquid.
- If there is food residue stuck on the plates, reheat the unit and brush on a little vegetable oil. Let this stand for a few minutes before wiping the plates again with a damp cloth.
- Be sure to clean your plates every time you use it.

STORAGE

- Unplug the appliance.
- Ensure the appliance is completely cooled down.
- Do not wrap the power cord around the appliance.
- Store the appliance in a dry location and out of the reach of children.

TECHNICAL DATA

Model no. : LW-8530A
Voltage : 220-240V~50Hz
Power : 2000W

5