 


audiosonic™

2 CH DVD PLAYER

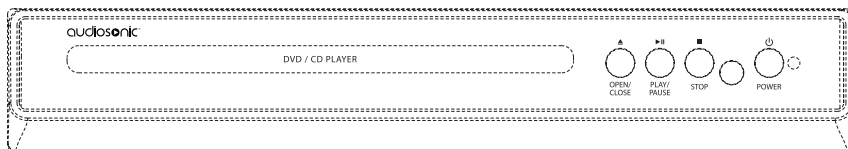

**MODEL:CDV-77271**

PLEASE READ BEFORE OPERATING THIS EQUIPMENT.

## WARNINGS AND PRECAUTIONS



**CAUTION**  
RISK OF ELECTRIC SHOCK  
DO NOT OPEN



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



### DANGER:

Invisible and hazardous laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam.



This symbol indicates that this product incorporates double insulation between hazardous mains voltage and user accessible parts.

• **CAUTION:** Allow DVD player to sit at room temperature for 2 hours before plugging in.

• **CAUTION:** TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

• **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

• **CAUTION:** Use of controls or adjustments or performance of procedures other than those specified may result in hazardous radiation exposure.

• **WARNING:** Do not place the unit on top of any soft, porous, or sensitive surfaces to avoid damaging the surface. Use a protective barrier between the unit and surface to protect the surface.

• **WARNING:** Use of this unit near fluorescent lighting may cause interference regarding use of the remote. If the unit is displaying erratic behavior move away from any fluorescent lighting, as it may be the cause.

• **CAUTION:** Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

• **WARNING:** There is a danger of explosion if you attempt to charge standard Alkaline batteries in the unit. Only use rechargeable NiMH batteries.

• **WARNING:** Lithium batteries, like all rechargeable batteries are recyclable and should be recycled and not disposed of in normal household waste. Contact your local government for disposal or recycling practices in your area. They should never be incinerated since they might explode.

• **WARNING:** Shock hazard - Do Not Open.

Main plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the main completely, the main plug should be disconnected from the main socket outlet completely.

Do not mix old and new batteries.

Do not mix alkaline, standard (carbon-zinc), and not rechargeable (ni-cad, ni-mh, etc) batteries.

## IMPORTANT SAFETY INSTRUCTIONS

1. Read these Instructions.
2. Keep these Instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding - type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



13. Unplug this apparatus during lightning storms or when unused for long periods of time.

14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

### Additional Warnings

- The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.
- Battery shall not be exposed to excessive heat such as sunshine, fire or the like.
- Caution marking is located at the rear or bottom of the apparatus.
- The marking information is located at the rear or bottom of apparatus.



These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Congratulations** on the purchase of your new DVD player.

We recommend that you spend some time reading this instruction manual in order that you fully understand all the operational features it offers.

Read all the safety instructions carefully before use and keep this instruction manual for future reference.

## Package Contents

Remove all packaging from the unit. Retain the packaging. If you dispose of it please do so according to local regulations.


The following items are included:




AV Cable



Remote Control

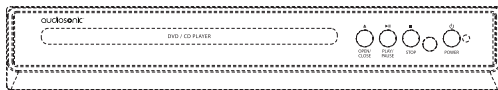

DVD Player

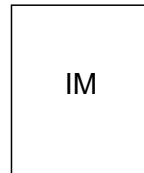


Instruction Manual



# PRODUCT OVERVIEW

## Front View

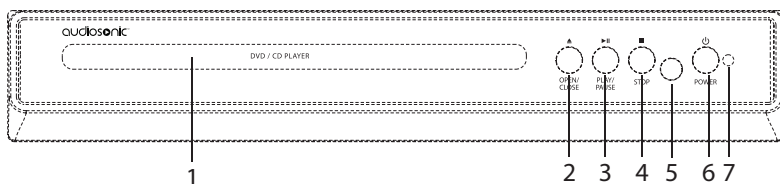

1. Disc tray

2. ▲ OPEN/CLOSE button

3. ►|| PLAY/PAUSE button


4. ■ STOP button

5. Remote sensor

6. ⏻ POWER button

7. Power indicator

## Rear View

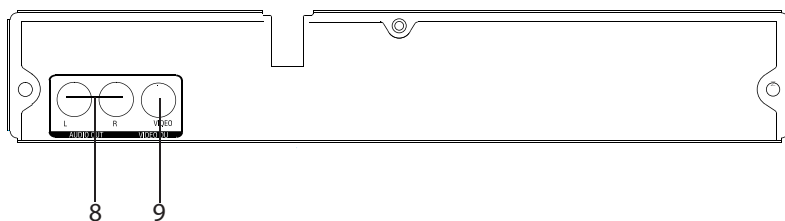

### 8. 2 Channel audio output

Connect audio cables to a stereo system equipped with an AUDIO input terminal.

### 9. Video output

Connect a composite VIDEO cable to the DVD player's VIDEO socket to the video input socket on the TV.

# REMOTE CONTROL

## 1. ▲ OPEN/CLOSE Button

Press to open and close the disc tray.

## 2. 0-9 Buttons

If enter digits that are less than 10 (10 included)  
Press 0-9 buttons combined.

### 10+ Button

If enter digits that are more than 10, eg: " 25",  
press "10+" button twice and press "5" button to  
enter.

## 3. MENU Button

Press to display the DVD main menu.

## 4. ▲▼◀▶ Buttons

Press to navigate and make selections on  
on-screen menus.

### ENTER Button

Press to confirm the selection or current operation.

## 5. ◀◀ PREV / ▶▶ NEXT Buttons

Press to skip to the previous / next title / chapter /  
track.

## 6. ◀◀ F.BWD / ▶▶ F.FWD Button

Press to perform fast rewind / fast forward  
playback.

## 7. PLAY/PAUSE (▶||) Button

Press to start or pause the playback.

## 8. OSD Button

Press to display the current playback information.

## 9. SUBTITLE Button

Press repeatedly to switch between different  
subtitle languages that are available in the disc.

## 10. N/P Button


Press to change the output signal to NTSC /  
PAL / AUTO.

## 11. ANGLE Button

Press to switch between multiple camera angles  
programmed on a DVD (if available).

## 12. ZOOM Button

Press repeatedly to zoom in the image.

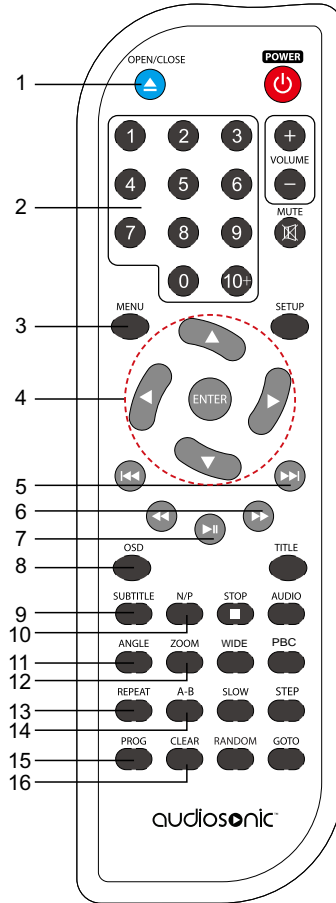

## 13. REPEAT Button

Press to select different repeat modes.

## 14. A-B Repeat Button

Press to repeat a section between point A  
and B within a title/ chapter/ track.

## 15. PROGRAM Button

Press to play the contents of the disc in a  
preselected order.

## 16. CLEAR Button

Press to erase input information.

# REMOTE CONTROL

## 17. POWER Button

Turn the power on or restore the DVD player to standby mode.

## 18. VOL +/- Buttons

To increase and decrease volume.

## 19. MUTE Button

To mute or restore the sound output.

## 20. SETUP Button

To access or exit the SETUP menu.

## 21. TITLE Button

Press to go to title menu.

## 22. AUDIO Button

To change the audio mode.

## 23. (■) STOP Button

To stop the playback.

## 24. PBC Button

To open the VCD main menu.

## 25. WIDE Button

Press to change aspect ratio.

## 26. STEP Button

Press to play forward frame by frame.

## 27. SLOW Button


Press repeatedly to enter slow playback at different speeds.

## 28. GOTO Button

To skip directly to a specific time / title / chapter / track in the disc.

## 29. RANDOM Button

Press to turn on or turn off random playback.

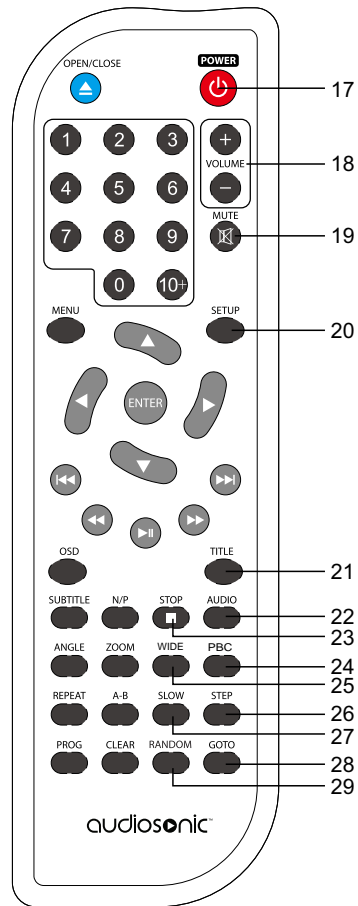


## REMOTE CONTROL

1. Unscrew the screw on the battery door.
2. Press and lift the back cover up to open the battery compartment of the remote control.
3. Insert two "AAA" batteries (not included), following the (+) and (-) markings in the battery compartment.
4. Close the battery compartment cover.

### Handling the Batteries

- Improper or incorrect use of batteries may cause corrosion or battery leakage, which could cause fire, personal injury or damage to property.
- Only use the battery type indicated in this manual.
- When the batteries are exhausted, the remote will not function. Replace both batteries at the same time with new ones.
- Do not install used batteries or mix different types of batteries.
- Do not dispose of used batteries as domestic waste. Dispose of them in accordance with local regulations.

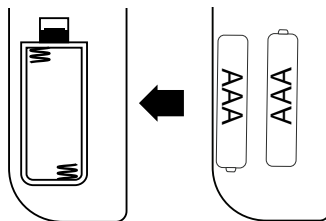


### Handling the Remote Control

- Do not drop or cause impact to the remote control.
- Do not spill water or any liquid on the remote control.
- Do not place the remote control on a wet object.
- Do not place the remote control under direct sunlight or near sources of excessive heat.
- Remove the battery from the remote control when not in use for a long period of time, as it could cause corrosion or battery leakage and may result in physical injury and/or property damage including fire.

### Remote Control Operation Range

Point the remote control to the DVD player no more than 5 meters/ 16 feet from the remote control sensor and within 60° of the front of the DVD player. The operating distance may vary depending on the brightness of the room.

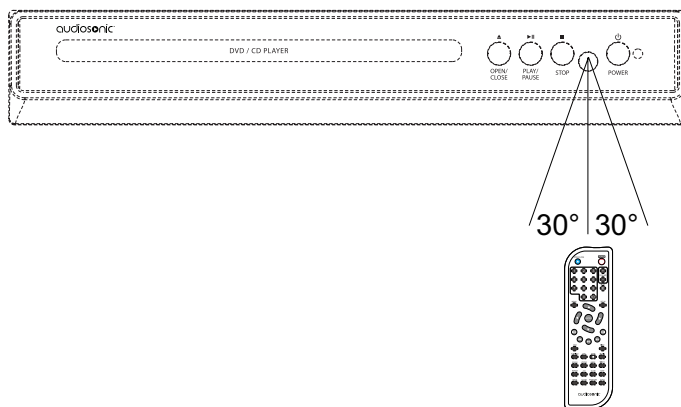






# MAKING CONNECTIONS


When connecting any external AV device or TV, do not connect the power cable to the wall outlet until all other connections are completed.

## Method 1: Connecting to a TV with an AV Cable

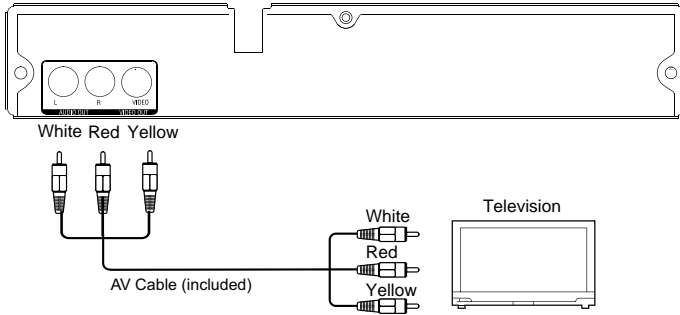

NOTE: Video = Yellow  
Audio Left = White  
Audio Right = Red

## Method 2: Connecting to a Stereo System and TV with an AV Cable

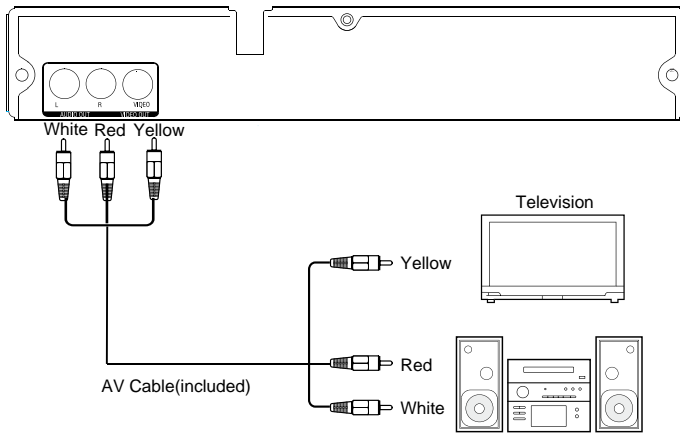

NOTE: Video = Yellow  
Audio Left = White  
Audio Right = Red



# OPERATIONS—DVD PLAYBACK

## POWER ON THE PLAYER

- 1) Plug the AC plug into a wall outlet that has AC 110-240V~60/50 Hz.
- 2) Press the POWER button to turn on the DVD player.

## LOADING A DISC

- 1) Press the OPEN/CLOSE button to open the disc tray. Place a disc into the disc tray with the label facing up.  
\* For a double sided disc, load the side which you wish to play facing down.
- 2) Press the OPEN/CLOSE button to close the disc tray. The playback will start once the disc loads.  
\* Some discs may not playback automatically. You can press the PLAY/PAUSE button to start playback.

## STOP PLAYBACK

- 1) Press the STOP button once to go to pre-stop mode. Some discs the DVD player will recall the stopped location.
- 2) Press the PLAY/PAUSE button to resume playback from the location where playback was stopped.
- 3) Press the STOP button twice to stop completely. This will cause the disc to go back to the beginning. Press the PLAY/PAUSE button to begin playback from the start of the disc.

## PREVIOUS AND NEXT

- 1) During disc playback, press the PREVIOUS button to go back to the start of the previous chapter, or the NEXT button to skip to the start of the next chapter.
- 2) Each press of the NEXT or PREVIOUS button during playback will skip back or forward through the chapters.  
\*PREVIOUS and NEXT functions are not available in chapter repeat and A-B repeat mode.

## FAST FORWARD AND FAST REVERSE

- 1) During playback, you can press the FAST REVERSE or FAST FORWARD to either fast forward or reverse through the disc. Each time either of these buttons are pressed, the fast forward/fast reverse speed will change. There are 5 levels of speed available: x2, x4, x8, x16, x32.
- 2) Press the PLAY/PAUSE button to resume normal playback.

## NOTE:

- 1) FAST REVERSE and FAST FORWARD functions are not available in A-B repeat mode.
- 2) DVD Discs that do not match the region code cannot be played on this player. You can find the DVD region on the back of the DVD case or on the actual DVD. Australia and New Zealand are classified as Region 4.

## SLOW

- 1) During disc playback, press the SLOW button to enter slow forward mode. There are 4 speeds available: 1/2, 1/4, 1/8, 1/16.
- 2) Press the PLAY/PAUSE button to resume normal playback.

## TITLE

While playing the disc, press the TITLE button to go to the title menu. (May not be available on all discs).

## VOLUME ADJUSTMENT

- 1) Press the VOLUME +/- buttons on the remote control to adjust the volume.
- 2) Press the MUTE button on the remote control to switch the sound off. The MUTE icon will show up on the TV screen. Press the mute button again to turn mute off. Alternatively, you can also press the VOLUME +/- buttons to cancel mute and restore sound.

## STEP

 
 
 
- 1) During playback, press the STEP button to play the DVD frame by frame.
- 2) Press the PLAY/PAUSE button to resume normal playback.

## OSD (On Screen Display)

During playback, press the OSD button on the remote control to set "Chapter Elapsed", "Chapter Remain", "Title Elapsed", "Title Remain".

## ZOOM

During the playback of DVD's, press the ZOOM button to enlarge the image by the following order:

 2x  3x  4x

To resume normal viewing, press the ZOOM button again until the picture returns to its normal state.

## OPERATIONS—DVD PLAYBACK

### A-B REPEAT

Repeat a section between point A and B within a Title/Chapter/Track.

- 1) Press the A-B button to choose a starting point (A).
- 2) Press the A-B button again to set an ending point (B) and complete the setting. The selected section A-B will be repeated.
- 3) Press the A-B button a third time to cancel and exit.

### ANGLE

Press the ANGLE button repeatedly to switch between different camera angles that are available on the disc. This function may not be available on all discs.

### REPEAT

Press once to repeat chapter.  
Press twice to repeat title.  
Press the third time to repeat all.  
Press repeatedly to cancel repeat mode.

### RANDOM

During playback, press the RANDOM button repeatedly to turn the random mode On or Off.

### N/P

In STOP mode, press the N/P button to switch between PAL, NTSC and AUTO (multi).

### SUBTITLE

Press the SUBTITLE button repeatedly to switch between different subtitle languages that are available on the disc. This function may not be available on all discs.

### AUDIO

Press the AUDIO button repeatedly to select different channels.

### WIDE


Press the STOP button to pause the playback. Then press the WIDE button repeatedly to select the aspect ratio.

### MENU

Press the MENU button and the chapter menu of the current DVD will appear on the screen. Use the navigation buttons to select the desired option. Then press the ENTER button to confirm the selection. This function may not be available on all discs.

### PROGRAM

1) During DVD playback, press the PROG (program) button. The Program menu will appear as the below:

1	Tt:02 ch:01	6	Tt: ch:
2	Tt: ch:	7	Tt: ch:
3	Tt: ch:	8	Tt: ch:
4	Tt: ch:	9	Tt: ch:
5	Tt: ch:	10	Tt: ch:
Exit    Start    Next 			

- 2) Using the navigation and numeric buttons, you can select and set the desired Tt (Title), Ch (Chapters), Tracks (for CD) or the movie (music) you want. During setting, press the CLEAR button to clear the incorrect input.
- 3) Using the navigation buttons, highlight and select the START button at the bottom of the screen. Press the ENTER button on the remote to start the program playback.
- 4) Press the PROG button again to exit.

### GOTO

- 1) During playback, press the GOTO button to search for a title/chapter on the disc.
- 2) Press the GOTO button again to display the search menu.
- 3) Press the LEFT or RIGHT navigation buttons repeatedly to select the title/chapter.
- 4) Press the 0-9, 10+ numeric buttons to select title/chapter.

# OPERATIONS—CD PLAYBACK

## POWER ON THE PLAYER

- 1) Plug the AC plug into a wall outlet that has AC 110-240V~60/50 Hz.
- 2) Press the POWER button to turn on the DVD player.

## LOADING A DISC

- 1) Press the OPEN/CLOSE button to open the disc tray. Place a disc into the disc tray with the label facing up.  
\* For a double sided disc, load the side which you wish to play facing down.
- 2) Press the OPEN/CLOSE button to close the disc tray. The playback will start once the disc loads.  
\* Some discs may not playback automatically. You can press the PLAY/PAUSE button to start playback.

## STOP PLAYBACK

- 1) Press the STOP button once to go to pre-stop mode. Some discs the DVD player will recall the stopped location.
- 2) Press the PLAY/PAUSE button to resume playback from the location where playback was stopped.
- 3) Press the STOP button twice to stop completely. This will cause the disc to go back to the beginning. Press the PLAY/PAUSE button to begin playback from the start of the disc.

## PREVIOUS AND NEXT

- 1) During disc playback, press the PREVIOUS button to go back to the start of the previous chapter, or the NEXT button to skip to the start of the next chapter.
- 2) Each press of the NEXT or PREVIOUS button during playback will skip back or forward through the chapters.  
\*PREVIOUS and NEXT functions are not available in chapter repeat and A-B repeat mode.

## FAST FORWARD AND FAST REVERSE

- 1) During playback, you can press the FAST REVERSE or FAST FORWARD to either fast forward or reverse through the disc. Each time either of these buttons are pressed, the fast forward/fast reverse speed will change. There are 5 levels of speed available: x2, x4, x8, x16, x32.
- 2) Press the PLAY/PAUSE button to resume normal playback.

## NOTE:

FAST REVERSE and FAST FORWARD functions are not available in A-B repeat mode.

## VOLUME ADJUSTMENT

- 1) Press the VOLUME +/- buttons on the remote control to adjust the volume.
- 2) Press the MUTE button on the remote control to switch the sound off. The MUTE icon will show up on the TV screen. Press the mute button again to turn mute off. Alternatively, you can also press the VOLUME +/- buttons to cancel mute and restore sound.

## OSD (On Screen Display)

During playback, press OSD button to show playing and disc information.

## A-B REPEAT

Repeat a section between point A and B within a Title/Chapter/Track.

- 1) Press the A-B button to choose a starting point (A).
- 2) Press the A-B button again to set an ending point (B) and complete the setting. The selected section A-B will be repeated.
- 3) Press the A-B button a third time to cancel and exit.

## REPEAT

Press the REPEAT button on the remote to select different repeat modes:

 Track       All

## OPERATIONS—CD PLAYBACK

### AUDIO

Press AUDIO button to switch the audio output.


### RANDOM

During playback, press the RANDOM button repeatedly to turn the random mode On or Off.

### PROGRAM

1) During CD playback, press the PROG (program) button. The Program menu will appear as the below:

1	02	6	--
2	04	7	--
3	---	8	--
4	--	9	--
5	--	10	--

EXIT    START    NEXT 

- 2) Using the navigation and numeric buttons, you can select and set the desired Tracks (for CD) or the movie (music) you want. During setting, press the CLEAR button to clear the incorrect input.
- 3) Using the navigation buttons, highlight and select the START button at the bottom of the screen. Press the ENTER button on the remote to start the program playback.
- 4) Press the PROG button again to exit.



## OPERATIONS– JPG DISC PLAYBACK

When a JPEG (Image) disc is inserted into the DVD player, the slideshow will automatically start. Press the STOP button to enter the navigation menu.

- In the menu, use the UP or DOWN navigation buttons to select a file, then press the PLAY/PAUSE button to start the slide show. Press the PREV or NEXT buttons during the slide show to return to the previous picture or skip to the next picture. Press the PLAY/PAUSE button during the slide show to pause the current picture. Then press the PLAY/PAUSE button to resume the slide show.

### ZOOM

- 1) During playback, press the ZOOM button to enlarge or minimize the image by the following order: 100%, 125%, 150%, 200%, 75%, 50%
- 2) To resume normal viewing, press the ZOOM button again until the picture returns to its normal state.

### REPEAT

- 1) Press the REPEAT button repeatedly to play a single photo. You can choose to repeat "Single", "Repeat One", "Repeat Folder".

### OSD (On Screen Display)

Press the OSD button to show the file information. Press again to show the picture number.

### IMAGE ROTATION

- 1) There are 3 modes that you can select when rotating a picture: "Invert", "Left" and "Right". These operations are only allowed when a picture is displayed normally and will be cancelled automatically when a new picture is displayed. The arrow navigation keys are used to select the different rotation modes:

▲ - Rotate 360°   ◀ - Rotate 270°   ▼ - Rotate 180°   ▶ - Rotate 90°

### PROGRAM

Press the PROG button repeatedly to change the picture in different slide types.

# SYSTEM SETUP

## SETTING MENUS:

NOTE: Preference page can only be opened when no disc is playing.

Press the SETUP button and the settings menu will appear on the screen as below. Using the navigation buttons, select and highlight the function you wish to set or reset. Press ENTER to enter and confirm the selection. After setting, press the SETUP button to save the settings and exit.

General	Audio	Dolby	Video	Preference
-- General Setup Page --				
TV Display		Wide		
Angle Mark		On		
OSD Lang		ENG		
Captions		Off		
Screen Saver		On		
Last Memory		Off		
Go To General Setup Page				

## GENERAL SETUP PAGE

- 1) If TV display is selected, use the navigation and ENTER buttons to set the aspect ratio to Normal/PS (4:3); Normal/LB (4:3 Letter Box) or Wide (16:9) to match the connected TV.
- 2) If Angle Mark is selected, use the navigation and ENTER buttons to set it On or Off. If it is set to On, when multi-angles are available in the DVD that is playing, the multi-angle logo will appear on the screen.
- 3) If OSD (On Screen Display) is selected, use the navigation and ENTER buttons to set the OSD language to English, French or Spanish as desired.
- 4) If Captions are selected, use the navigation and ENTER buttons to set it On or Off. If it is set to On, the screen will show captions. If it is set to Off, the captions on the screen will disappear.
- 5) If Screen Saver is selected, use the navigation and ENTER buttons to set it to On or Off. If it is set to On, the screen saver will come on when the unit stops or the image has been paused for 5 minutes.
- 6) If Last Memory is selected, use the navigation and ENTER buttons to set it to On or Off. If it is set to On, DVD will continue to play the video after stopped or paused.

## AUDIO SETUP PAGE

If Downmix is selected, use the navigation and ENTER buttons to set it to LT/RT, Stereo or 5.1CH as the audio output connection:

- If set to LT/RT, the rear left or rear right channels in Dolby 5.1 surround sound, the DVD will play on both the left and right speakers.
- If set to Stereo, the rear left channel will play on the left speaker, while the rear right channel will play on the right speaker.

NOTE: Function depends on the recording of disc.

## DOLBY SETUP PAGE

- 1) If Dual Mono is selected, use the navigation and ENTER buttons to set it to Stereo, L-Mono (play the left channel on all speakers), R-Mono (play the right channel on all speakers) or Mix-Mono (mix the right and left channels then play on all speakers) as desired. These functions will depend on the recording of the disc.
- 2) If Dynamic is selected, use the navigation and ENTER buttons to set the Dynamic Level as desired or you can turn it off.

# SYSTEM SETUP

## VIDEO SETUP PAGE

### OUTPUT MODE:

If the DVD player is connected to the TV through a Video Jack, please set to CVBS.

## PREFERENCE SETUP PAGE

NOTE: Preference page can only be opened when no disc is playing.


- 1) If TV type is selected, use the navigation and ENTER buttons to set to PAL, AUTO or NTSC.  
(NOTE: The TV system in the US, Canada and Mexico is NTSC).
  - 2) If Audio, Subtitle or Disc Menu is selected, use the navigation and ENTER buttons to set the priority of the available language (This function will depend on the recording of the DVD).
  - 3) If Parental is selected, use the navigation and ENTER buttons to set the rating level as desired.
    - Press the RIGHT navigation button to enter the menu. The rating level list will highlight.
    - Press the UP or DOWN navigation button to select the desired level (see below).
    - Press the ENTER button and a password window will pop up.
    - Enter the 6 digit password (default password is 136900) by using the numeric buttons on the remote.
    - Press ENTER to save the settings and exit.
- \* Rating Levels:
- 1 = (Kid Saf): Kid Safe
  - 2 = (G): All Ages
  - 3 = (PG): Parental Guidance
  - 4 = (PG 13): Parental Guidance under 13 years old
  - 5 = (PGR): Parental Guidance suggested under 17 years old
  - 6 = (R): Parental Guidance strongly recommended under 17 years old
  - 7 = (NC 17): 17 years or above
  - 8 = (ADULT): Adult only
- 4) If Password is selected, press ENTER to enter into the subsetting menu that will appear on the screen.
    - If Password Mode is selected, use the navigation and ENTER buttons to set it to On (activate the rating level setting) or Off (password is needed).
    - If Password is selected, press ENTER twice to enter. The new password setting menu will appear.
    - Enter the 6 digit old password. The column for the new password will become highlighted.
    - Enter a new 6 digit password. The column for confirm password will become highlighted.
    - Enter the new password again. The OK button on the screen will become highlighted. Press the ENTER button to save the setting and exit.
  - 5) If Default is selected, use the navigation and ENTER buttons to reset all of the settings and restore to the factory settings. Press the SETUP button to exit without making any changes.



## CARE AND MAINTAINANCE

### CARING FOR DISCS:

Treat the discs carefully. Always hold the disc by its edges and the hole in the center. Never allow your fingers to come in contact with the shiny, unprinted side of the disc as this could lead to issues with the playback of the disc.

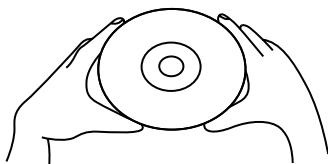

- Do not attach adhesive tape, stickers etc. to any part of the disc.
- Clean the disc periodically with a soft, lint-free, dry cloth. Never use detergents or abrasive cleaners to clean the disc. If necessary, use a CD cleaning kit.
- If a disc skips or gets stuck on a section while playing, there is a possibility the disc is dirty or damaged (scratched).
- When cleaning a disc, wipe in straight lines from the center of the disc to the outer edge of the disc. Never wipe in circular motions.



- Discs should be stored in their cases after each use to avoid damage.
- Do not expose the discs to direct sunlight, high temperatures or dust etc. Prolonged exposure or extreme temperatures can warp the disc.
- Do not stick or write anything on either side of the disc. Sharp writing instruments or ink may damage the surface.

### CLEANING THE PLAYER

- To prevent fire or shock hazard, disconnect your unit from the AC power outlet when cleaning.
- The surface finishing of your unit may be cleaned with a dust cloth and cared for as other furniture.
- Use caution when cleaning and wiping the plastic parts.
- Mild soap and a damp cloth may be used to wipe down the front panel.

## TROUBLESHOOTING GUIDE

PROBLEM	SOLUTION
No operation can be performed with the remote control.	<ul style="list-style-type: none"> <li>• Check the batteries in the remote control. They may need replacing.</li> <li>• Operate the remote control at a distance of no more than 5 m / 16 feet.</li> <li>• Remove batteries and hold down one or more buttons for several minutes to drain the microprocessor inside the remote control to reset it. Reinstall batteries and try to operate the remote control again.</li> </ul>
Disc does not play.	<ul style="list-style-type: none"> <li>• Ensure that the disc is installed with the label side facing up.</li> <li>• Check the region number of the DVD.</li> </ul>
Disc Menu does not appear.	<ul style="list-style-type: none"> <li>• Check if the disc has a Menu.</li> </ul>
No power	<ul style="list-style-type: none"> <li>• Press the On/Off button on the DVD player or on the Remote Control to turn on the unit.</li> <li>• Make sure the wall outlet has power.</li> </ul>
The picture is distorted or turns black and white during color playback.	<ul style="list-style-type: none"> <li>• The disc does not match with the TV color system standard (PAL/NTSC).</li> <li>• The disc is dirty. Clean the disc.</li> <li>• Sometimes a small amount of picture distortion may appear. This is not a malfunction of the unit.</li> </ul>
The screen aspect ratio cannot be changed.	<ul style="list-style-type: none"> <li>• The Screen Aspect Ratio is fixed on your DVDs.</li> <li>• Depending on the TV, it may not be possible to change the Screen Aspect Ratio.</li> <li>• This is not a problem with the DVD player.</li> </ul>
No audio.	<ul style="list-style-type: none"> <li>• Make sure you have securely connected the DVD player and other devices.</li> <li>• Make sure the TV and the amplifier are in good condition and are setup properly.</li> </ul>
Not able to select some items in the setup/ system menu.	<ul style="list-style-type: none"> <li>• Press the STOP button twice before selecting the setup/ system menu.</li> <li>• Depending on the functions programmed on the discs, some menu items cannot be selected.</li> </ul>
The DVD player does not start playback.	<ul style="list-style-type: none"> <li>• Insert a readable disc with the playback side facing down.</li> <li>• Check the disc type, color system (PAL/NTSC) and region code.</li> <li>• Check for any scratches or smudges on the disc.</li> <li>• Press SETUP button to turn off the setup menu.</li> <li>• Enter the password in order to change the parental rating level or to unlock the disc for playback.</li> <li>• Moisture may have condensed inside the system. Remove the disc and leave the system turned on for about an hour.</li> <li>• Disconnect the power cable from the wall outlet mains socket for a few minutes. Reconnect the power cable and try to operate the DVD player.</li> </ul>
Picture freezes momentarily during playback.	<ul style="list-style-type: none"> <li>• Check the disc for fingerprint or scratches, and clean with a soft cloth wiping from center to edge.</li> </ul>



# SPECIFICATIONS

Power Source.....	AC 110 -240V~50/60Hz
Power Consumption.....	10W
Power source of the Remote Control.....	DC 3V, 2×AAA size batteries
Signal System.....	NTSC / PAL / AUTO
Operating Temperature.....	+5° to+35°C
Operating Humidity Range.....	5% to 90% (no condensation)
Compatible Discs.....	DVD/ DVD±R/ DVD±RW/CD/CD-R/ CD-RW/VCD/Kodak Picture/JPEG

### Compatible Discs:

#### DVD-VIDEO Disc

- 12cm single-sided, single layer
- 12cm single-sided, dual layer
- 12cm single-sided, single layer
- 8cm single-sided, single layer
- 8cm single-sided, dual layer
- 8cm single-sided, single layer

#### COMPACT DISC

- 12cm disc
- 8cm disc

### Audio Signal Output Characteristics:

Frequency Response:	
DVD (Linear Audio).....	20Hz-20KHz
CD Audio .....	20Hz-20KHz
S/N Ratio .....	70dB

Specifications are subject to change without notice.



## 12 Month Warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via email at [customer.satisfaction@kmart.com.au](mailto:customer.satisfaction@kmart.com.au) for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

