

PC 2.0CH SPEAKER

USER'S MANUAL



General Safety Guidelines

Thank you for purchasing our 2.0 notebook speaker system. Before installing, please read the following instructions carefully. Keep the user manual for your future reference.

To avoid the risk of fire or electric shock, you should not expose the device to rain or humidity.

Plug the device only into a properly installed socket. Be sure the device voltage corresponds to the grid voltage.

Avoid covering the device's vent openings.

Package Content

Speakers 2pcs

User manual 1pcs

Product Features

3D stereo effect.

Power supplied by USB, no adapter or amplifier required.

Full frequency speaker.

First Use of the Device/introduction


Select a proper place for the device: A dry, level and slip-proof surface

Do not place objects (such as vases) on the top of the speaker.

Make sure the device is vented sufficiently!

OPERATION INSTRUCTION

- 1.Connect USB Cable from speaker to computer.
- 2.Connect the 3.5mm cable from speaker to the computer.
- 3.Play the music, movie or games on the computer.
- 4.Adjust the volume: Raise or lower the volume by adjusting the audio regulator.

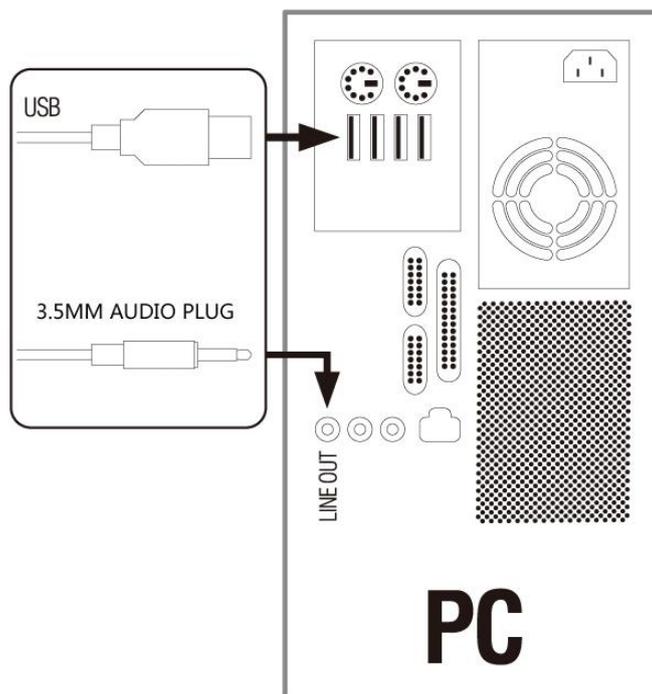

Technical specification

R.M.S: 5W*2

P.M.P.O: 300W

Speaker Driver Unit:2.75" 4Ω 5W*2

S/N Ratio: ≥75dB

Frequency Response: 100Hz-20KHz

T.H.D.: ≤1% 1W 1KHz

Warning

To extend the service life, avoid distortion and protect your hearing. Do not turn the volume too loud; do not operate the device on maximum volume.

Do not subject the speakers to extreme heat, cold or humidity.

Do not touch the speaker membranes with fingers or objects.

When not in use remove the USB from the input.

To clean ,please use the dry and soft cloth.

12 Month Warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at [Kmart.com.au](https://www.kmart.com.au) for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.