


# Vacuum Cleaner (battery operated)

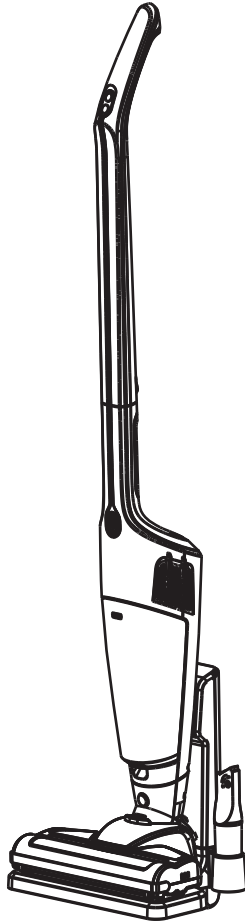

Model:VSS01B15P

**Instruction Manual - Please keep for future reference**

These instructions contain important information which will help you get the best from your appliance and ensure safe and correct use and maintenance.

# Contents

<b>Safety Information</b>	<b>2-3</b>
<b>Parts</b>	<b>4</b>
<b>Assembly</b>	<b>5</b>
<b>Charge</b>	<b>6</b>
<b>Operation</b>	<b>7</b>
<b>Maintenance</b>	<b>8</b>
<b>Store</b>	<b>9</b>
<b>Disassemble</b>	<b>10</b>
<b>Troubleshooting</b>	<b>11</b>
<b>Technical Specifications</b>	<b>12</b>
<b>Guarantee</b>	<b>13</b>

# Safety Information

**Important - Please read all instructions before use and keep for future reference**

## FOR HOUSEHOLD USE ONLY.

This appliance should only be used for domestic cleaning, and must only be used indoors, as described in this user guide.

Please ensure that this guide is fully understood before operating the appliance.

1. Always switch off and remove the charger from the socket before cleaning the appliance or any maintenance task.
2. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

3. If the power cord is damaged, it must be replaced by a qualified electrician in order to avoid a hazard or the appliance must be disposed of.
4. Keep hands, feet, loose clothing and hair away from rotating brushes.
5. Use only the original charger supplied with the appliance.
6. Check that your supply voltage is the same as that stated on the charger.
7. When charging the appliance, the power switch must be off.
8. Never charge the batteries in temperatures above 37°C or below 0°C.
9. It is normal for the charger to become warm to the touch when charging.
10. Use only attachments provided.
11. Static electricity: some carpets can cause a small build up of static electricity. Any static discharge is not hazardous to health.
12. Do not use your appliance out of doors or on any wet surface or for wet pick up.
13. Do not pick up hard or sharp objects, matches, hot ashes, cigarette ends or other similar items.
14. Do not spray with or pick up flammable liquids, cleaning fluids, aerosols or their vapours.
15. Do not continue to use your appliance or charger if it appears faulty.
16. Do not leave the appliance unattended when in use.
17. Never use the appliance without the filters in place!

# Safety Information

**Important** - Please read all instructions before use and keep for future reference

18. Do not suck up liquids!
19. Check that the filters are inserted correctly!
20. Do empty the Dust Bin regularly for optimal operation of the vacuum.
21. Do not replace the batteries with non-rechargeable batteries.
22. The vacuum must use only with provided battery charger YLS0121A-A210040.



**WARNING:** Do not recharge non-rechargeable batteries.



**WARNING:** Before charging the product, please make sure your hands are dry.



**WARNING:** Please don't touch the rolling brush with your hands when the machine is in function.



**WARNING:** Please use the charger we supplied with the appliance when charging. Other chargers may cause breakdown or even danger.

## **End of Product Life Battery Disposal**

If the cleaner is to be disposed of the batteries should be removed. The battery is to be disposed safely. Used batteries should be taken to a recycling station and not disposed of with household waste. To remove the batteries, please proceed according to the following instructions:


**IMPORTANT:** Always fully discharge the batteries before removal and ensure the charger is unplugged.

1. Run the cleaner until the batteries are completely empty.
2. Remove the ergonomic handle and the screws, in the main body to open the cleaner.
3. Remove the motor battery housing and disconnect the cables.
4. Remove the batteries from the housing.

**Note:** Contact your local council waste disposal service for proper disposal facilities available for your area when disposing the appliance and the batteries.

# Parts

Please familiarise yourself with parts and accessories listed below

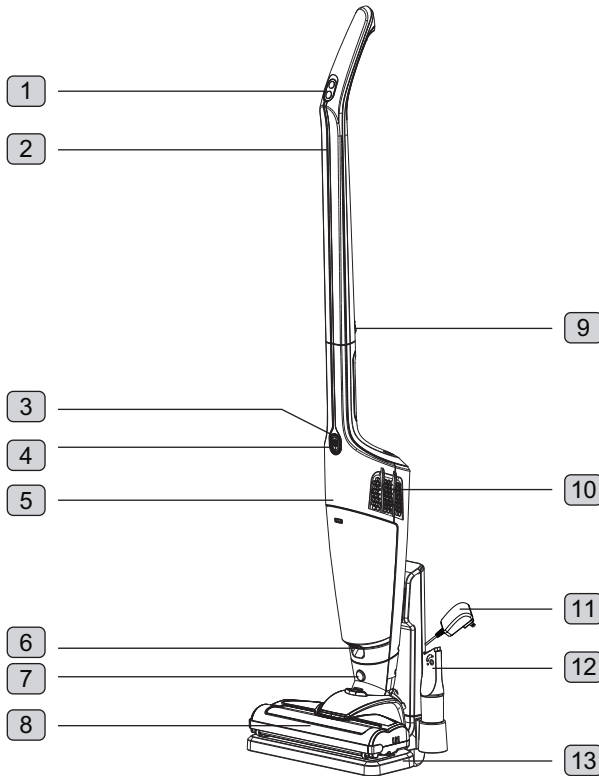

- |   |                           |    |                       |
|---|---------------------------|----|-----------------------|
| 1 | On/Off / Speed switch     | 8  | Brush head            |
| 2 | Handle                    | 9  | Handle release button |
| 3 | Power/ Charging indicator | 10 | Air exhaust           |
| 4 | On/Off switch             | 11 | Battery charger       |
| 5 | Handheld Vacuum unit      | 12 | 2 in 1 brush          |
| 6 | Dust cup release button   | 13 | Charging stand        |
| 7 | Brush release button      |    |                       |

# Assembly

## How to assemble

A. After opening the package, please check for all the parts for VSS01B15P listed below.

1. Handheld unit
2. Brush head
3. Charger
4. Charging cradle
5. Handle
6. Charging cradle chassis
7. 2 in 1 brush

B. Assemble the brush:





Align the joint of brush with the handheld unit and then connect the two parts together.

C. Assemble the handle:

Align the joint of the handle with the handheld unit and then connect the two parts together.

D. Assemble the charging stand:

Align the charging chassis with charging cradle and then connect the two parts together.

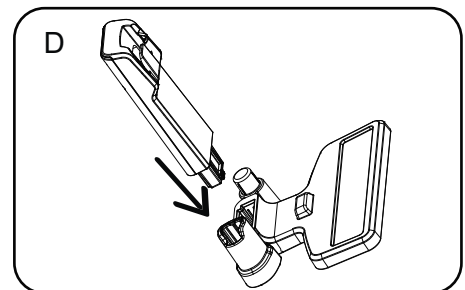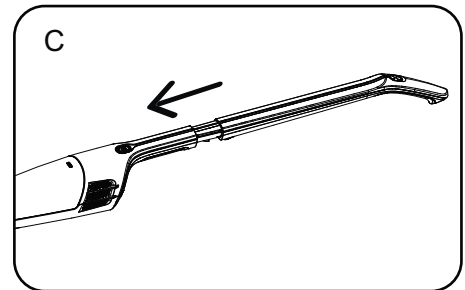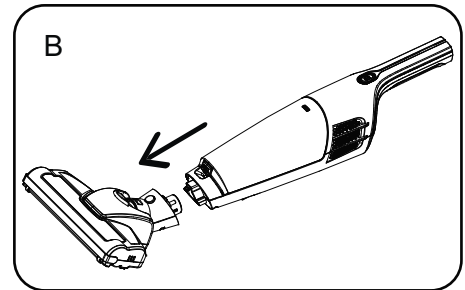
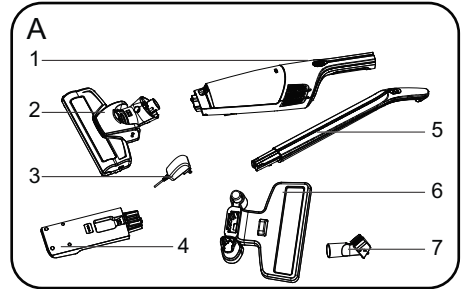


# Charging

## How to charge

Connect charger to charging stand, then plug the charger into socket.

Put the main unit onto the charging stand. Make sure there is proper contact between the vacuum and stand.

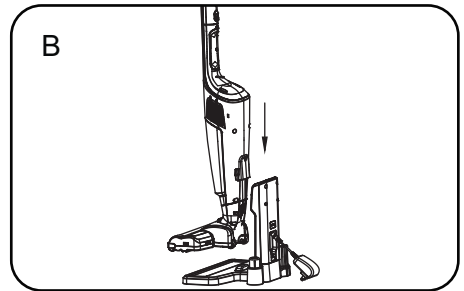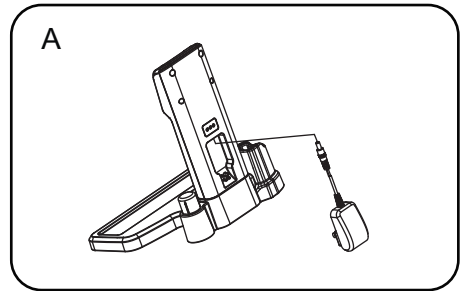





# Operation

## How to use

1. Press on/off button in handle to start operation. (P1)  
Power can be regulated as you change to SLOW or FAST. (P2)

2. Remove the handle, the handheld unit can be used with the 2 in 1 brush. Press the on/off button shown in (P3) to turn on the appliance.

3. Remove the 2 in 1 brush from the handle, and the handheld unit can be used with other accessories in (P4).

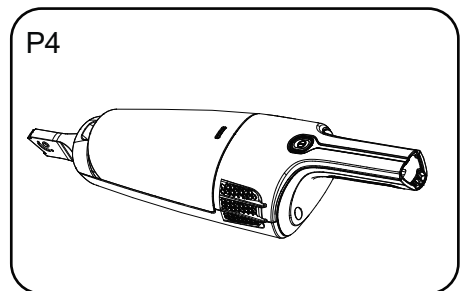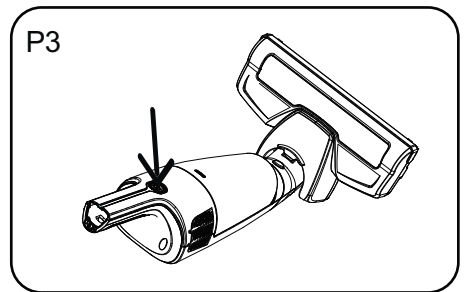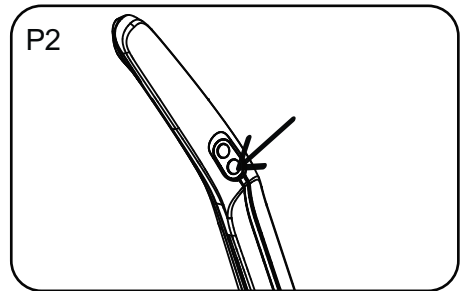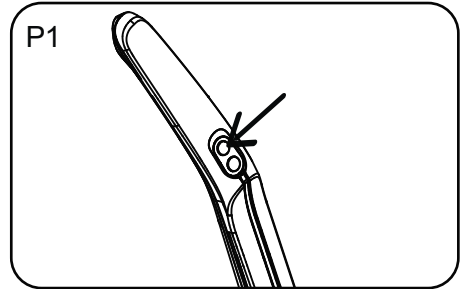





# Maintenance

## Emptying the Dust Tank

1. P5: Press the dust cup release button and pull out the dust cup.

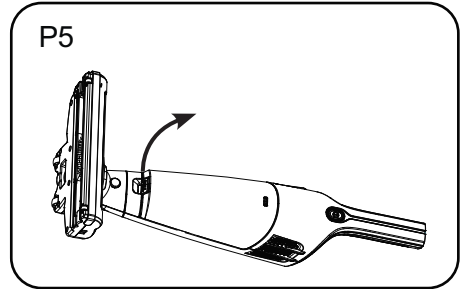


2. P6: Pull out the filter unit and empty the dust cup.

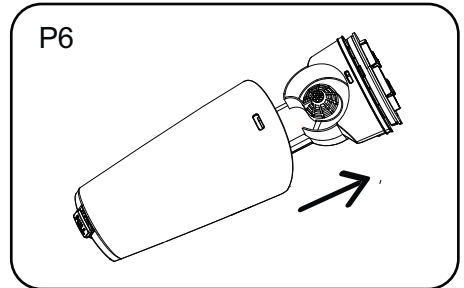

3. P7: **IMPORTANT!** Filters must be cleaned regularly for best suction performance and to prevent over-heating and damaging the vacuum cleaner.



Take out the filter sponge, wash it with water and dry in open air. Make sure all the filters are dried thoroughly before fitting them back to the unit.

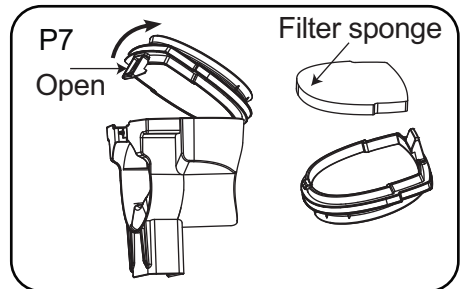

# Storage

## How to store


Please connect main unit with charging stand and place it against the wall.(P8,P9)

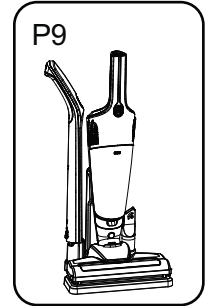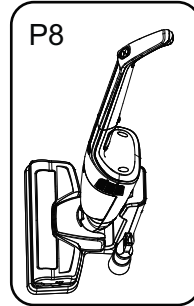

## More about the functions

1. Steady Green light indicates normal operation.
2. When the green light flashes, this indicates the battery power is low. It needs to be recharged.
3. Red light indicates that the vacuum cleaner is in "charging" mode.
4. The red light will turn to green when the battery is fully charged. The green light will last a certain time and then turn OFF, this is normal.


**THE PRODUCT NEEDS TO BE CHARGED PERIODICALLY(2 or 3 TIMES A MONTH) TO ENSURE OPTIMUM BATTERY LIFE, EVEN IF YOU HAVE NO INTENTION OF USING IT FOR A LONG TIME.**

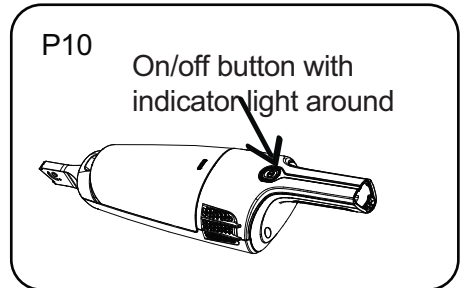


# Disassembly

## How to disassemble



1. Press the brush release button to pull out the brush. (P11)

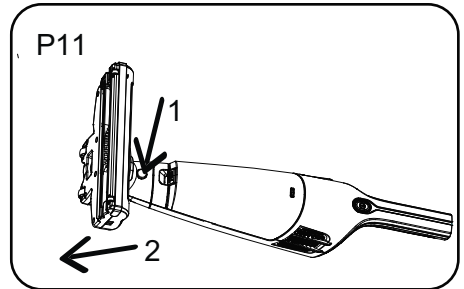

2. Press the handle release button to pull out the handle. (P12)

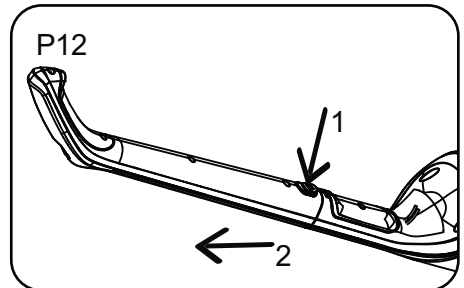

3. Turn the lock clockwise and lift the tab to uncover the rolling brush. Pull the rolling brush (P14) for cleaning or replacement.

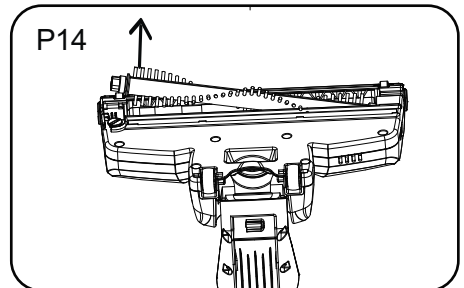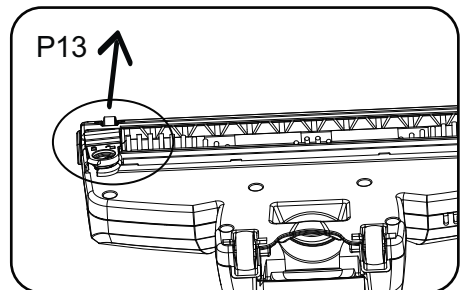

# Troubleshooting

<b>Problem</b>	<b>Possible causes</b>	<b>Solutions</b>
The vacuum cleaner does not switch on	<ol style="list-style-type: none"> <li>1. The power button on the unit has not been depressed</li> <li>2. There is no electricity to the power socket</li> </ol>	<ol style="list-style-type: none"> <li>1. Depress the power switch on the unit</li> <li>2. Seek expert help from a qualified electrician</li> </ol>
The machine stopped when using and can't start again	<ol style="list-style-type: none"> <li>1. The dust cup is full of dust, overheat protection circuit has activated due to overheating.</li> </ol>	<ol style="list-style-type: none"> <li>1. Clear the dust cup, allow the unit to cool down for 30 minutes.</li> </ol>
The vacuum cleaner won't pick up	<ol style="list-style-type: none"> <li>1. The accessories are not correctly fitted</li> <li>2. There are blockages in the hose/ accessory</li> <li>3. The dust bag is full</li> <li>4. The filters are blocked/clogged</li> </ol>	<ol style="list-style-type: none"> <li>1. Check hose/tools are correctly attached to the machine/hose/tube; refer to 'ASSEMBLY/ OPERATION' section</li> <li>2. Check the air paths of the hose/accessory are not obstructed by blockages</li> <li>3. Check dust bag and if necessary empty</li> <li>4. Frequently cleaning filters will maintain performance; see 'MAINTENANCE' section</li> </ol>
Dust is escaping from the vacuum cleaner	<ol style="list-style-type: none"> <li>1. The filters/dust bag are not fitted correctly</li> <li>2. The filters are damaged</li> </ol>	<ol style="list-style-type: none"> <li>1. See 'PARTS' and 'MAINTENANCE' sections</li> <li>2. If the filters are damaged these will need to be replaced</li> </ol>
Accessories won't pick up dust/debris	<ol style="list-style-type: none"> <li>1. The wrong tool is fitted for the task</li> <li>2. The tools are blocked</li> <li>3. The filters are blocked</li> <li>4. The dust bag is full</li> <li>5. The hose/tubes are blocked</li> </ol>	<ol style="list-style-type: none"> <li>1. See 'PARTS' section</li> <li>2. Check the air paths of the tools are not obstructed by blockages</li> <li>3. Frequently cleaning filters will maintain performance; check 'MAINTENANCE' section</li> <li>4. Check and empty the dust bag</li> <li>5. Check the air paths of the hose/tubes are not obstructed by blockages</li> </ol>
The blockage indicator (if applicable to model) activates	<ol style="list-style-type: none"> <li>1. The filters/dust bag are blocked</li> <li>2. The dust bag is full</li> <li>3. The accessories/hose/tube are blocked</li> </ol>	<ol style="list-style-type: none"> <li>1. Frequently cleaning filters will maintain performance; check 'MAINTENANCE' section</li> <li>2. Check and empty dust bag</li> <li>3. Check the air paths of the accessories/hose/ tubes are not obstructed by blockages</li> </ol>
The stick powered off automatically after starting up, in between you find green and red light alternately flashes.	<ol style="list-style-type: none"> <li>1. The power is insufficient, please charge the vacuum cleaner.</li> <li>2. The vacuum cleaner is in protection mode due to hair or dust on the rolling brush.</li> </ol>	<ol style="list-style-type: none"> <li>1. Charge the stick, refer to page 6.</li> <li>2. Clean the rolling brush, refer to point 3 in page10.</li> </ol>

# Technical Specifications

<b>Model Number</b>	VSS01B15P
Sound level	82 dB(A)
Battery	14.4V Ni-MH 1500mAh
Working time:	15-20 Minutes
Charging time	4-6 hr
Battery Charger	YLS0121A-A210040
Input voltage	100-240V a.c.
Output voltage	21V d.c. 400mA
Battery type that can be charged	Ni-MH, 1500mAh, 1.2Vx 12 cells

## **12 Month Warranty**

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at [Kmart.com.au](http://Kmart.com.au) for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.