

# Instruction Manual





## 3 Person Instant Tent

(Keycode : 42513650)

### Product Image-



### Parts list-


No.	Part name	Quantity	Image
1	Inner tent body	X1	
2	Flysheet body	X1	
3	Guy rope	X4	
4	Pegs	X8	

Please read all instructions carefully and sure you have all parts before starting to assembly.

### Assembly steps-

#### Step 1,


Put up your tent. Take out the tent and unfold it as below, pull out the corner from centre.

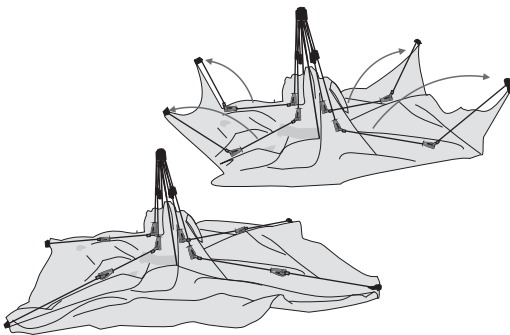

#### Step 2,


Uplift the pole knuckle to make the tent free standing. Push down the poles beside the spring mechanism until it clicks into place.

Peg down the tent where you want building your campsite. Secure the guy ropes to make tent sits more stable.

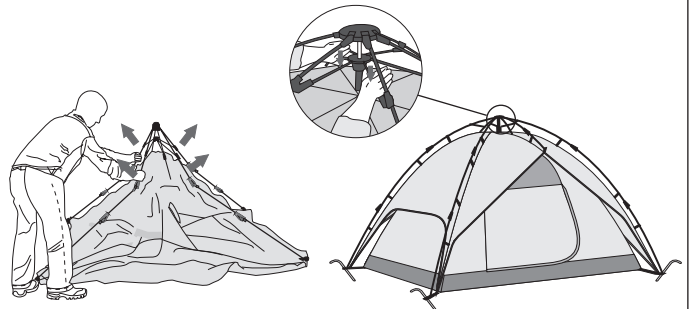


#### Step 3,

Take down your tent. Uplift the pole beside the spring mechanism until it becomes loose. Fold down the top ridge poles.

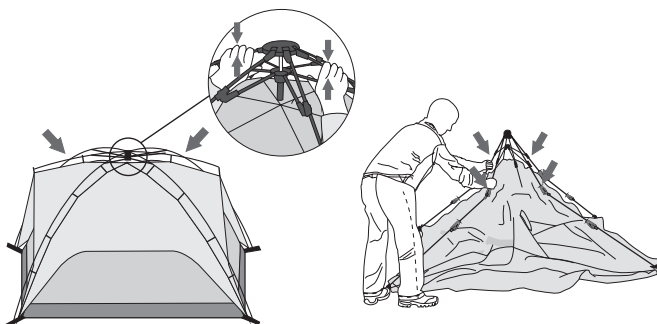

#### Step 4,

Pull the knuckles and fold the pole back. Refer to image A and B.

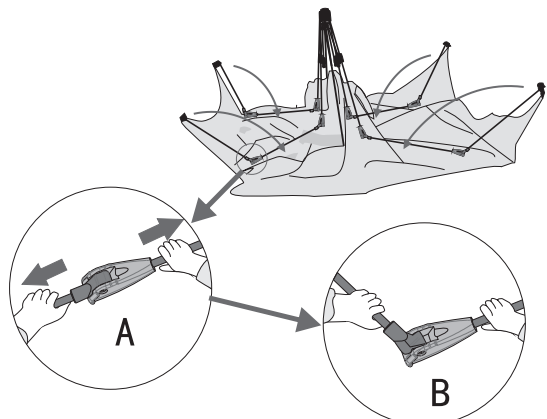

# Warning -

- KEEP ALL FLAME AND HEAT SOURCE AWAY FROM THIS TENT FABRIC
- DO NOT USE CANDLE, MATCHES OR OPEN FLAME OF ANY KIND IN OR NEAR THE TENT
- DO NOT COOK INSIDE THE TENT
- DO NOT SMOKE IN THE TENT
- DO NOT STORE FLAMMABLE LIQUIDS INSIDE THE TENT
- EXTINGUISH OR TURN OFF ALL LANTERNS BEFORE GOING TO SLEEP
- CHOOSE LEVEL SITE TO ERECT TENT THAT IS CLEAR FROM OVERHANGING BRANCHES AND NOT IN LOW LYING AREAS THAT COULD BE SUBJECT TO FLOODING

# Care instruction-

- WIPE CLEAN WITH A DAMP CLOTH
- DO NOT USE ABRASIVE MATERIALS AND SOLVENTS
- ENSURE TENT IS CLEAN & DRY BEFORE PACKING OR STORAGE TO PREVENT DAMAGE FROM MOULD & MILDEW

Made In China