

**MINI FACIAL CLEANSING BRUSH**

TB-1387

**INSTRUCTION MANUAL**


**IMPORTANT SAFETY INSTRUCTIONS**  
READ ALL INSTRUCTIONS BEFORE USING THE APPLIANCE AND KEEP THEM FOR FUTURE REFERENCE

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- This appliance is for household use only.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
- **DANGER.** To reduce the risk of fire, do not immerse this product into water.
- **WARNING:** Only use with accessories recommend or provided.
- **WARNING:** Please refer to the electrical compliance label before charging or operating the unit
- **WARNING:** Product must not be exposed to heat, fire or direct sunlight.
- Do not place or store this product where it can fall or be pulled into a water source like a sink, tub, or pool while charging
- If the product falls into water, unplug it immediately.
- Do not expose battery to extreme temperatures
- Do not tamper or puncture battery
- Do not use if the battery or any cords are damaged
- Unplug your charger when not in use
- Never try to repair this product yourself.
- When the unit is not in use, make sure it is correctly turned off and stored in a cool, dry place.

**IMPOTANT WARNINGS**

- **CAUTION! Wash the Latex Sponge and brush heads before use. Hand wash it in warm, soapy water. Rinse thoroughly and allow to dry.**
- **CAUTION! Do not use with exfoliation creams with rough or jagged particles together with this appliance.**
- If you are under a doctor's care for any skin condition or if you think you have very sensitive skin, please consult your physician before use.
- If the condition of your skin worsens after one or several uses, give your skin a rest for a few days.

**STRUCTURE:**

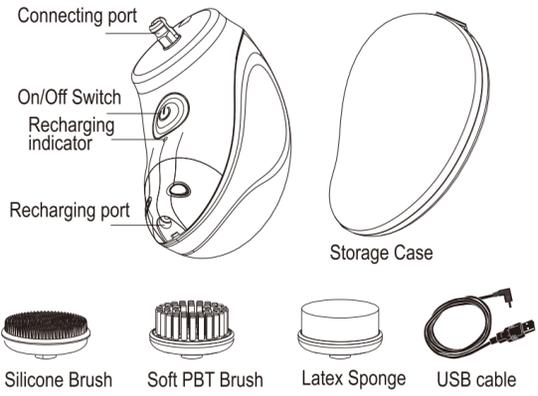

**FEATURES:**

1. The machine has 3 professional heads for deep cleaning:  
Soft PBT Brush: Quickly removes dirt, blackhead and makes the skin look softer and smoother.  
Latex Sponge: Deeply cleans the the dirt, grease and makeup residue, to keep the skin clean.  
Silicone Brush: Can be used for daily cleaning, safe, gentle, and suitable for sensitive skin.
2. Rotates clockwise & counter-clockwise, good for cleaning both sides of the face, for any skin texture, and cares for the skin tenderly.
3. Mini size with a fashionable droplet shaped palm box, ideal for travel.
4. Water resistant - IPX6.
5. USB rechargeable, environmentally-friendly.

**HOW TO USE:**

**• Charging the Cleansing Brush:**

1. Before using the cleansing brush for the first time, it must be fully charged for at least 3hours.
2. Connect the DC plug into the DC jack on the appliance.
3. Connect the USB plug into a USB port on a computer or a DC 5V USB power supply device.
4. The charging indicator will have RED light flashing. Once fully charged, the light will illuminate BLUE.
5. Always check to ensure that the charging light illuminate BLUE before using.



**• How to use:**


1. Select a head and attach it to the main body. Wet the head with water.
2. Wet your face with warm water and apply the cleanser.
3. Press the On/Off switch to start clockwise rotation, put it on the right side of your face, and move gently in a circle. Press the On/Off switch again to change to counter-clockwise rotation for the left side of your face. Press the On/Off switch a third time to turn it off.



4. Recommended use it twice daily; 20 seconds on the forehead, nose and chin, and 10 seconds on both cheeks.
5. Do not continuous operate the cleansing brush for over 90 seconds.

**• Cleaning & Maintenance**

1. Flush and clean the main unit and attachment heads after each use, dry with a towel or by air.
2. Do not clean the main unit and attachment heads with sharp or corrosive materials.
3. Restore all accessories back into the case to keep them dry and clean.

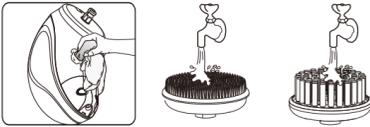

**• Tips for brush:**

1. Worn brushes may stimulate your skin; for better cleaning and a safer effect, we recommend replacing an old brush with a new brush every 3 months.
2. The brushes are only used by this model:TB-1387.

**ATTENTION:**

1. Please stop using this machine if there are inflammations, burnings or severe acne on your skin.
2. Keep out of reach of children.
3. DO NOT disassemble the main body.

**TROUBLE CLEARING:**

Problems	Reasons	Solutions
Brush head vibrates	Brush head snap-in position incorrect	Re-install the head
Abnormal noise		

12 Month Warranty

Thank you for your purchase from Kmart.

 
Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at Kmart.com.au for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

名称	说明书		业务包材设计		
尺寸	345*170mm		订单号	GRC17019	审核
材质	80g书写纸	型号	TB-1387	日期	2017-09-27
工艺	单黑双面		单位	设计	杨婷
其它	风琴2折后115*170mm (成品)		毫米		