

Assembly Instruction












CARE INSTRUCTIONS:


TO BE ASSEMBLED ON A CLEAN, DRY AND SMOOTH SURFACE. WIPE CLEAN WITH A SOFT DAMP CLOTH. NEVER USE SCOURERS, ABRASIVES OR CHEMICAL SOLVENTS. CHECK AND TIGHTEN ALL PARTS REGULARLY. KEEP AWAY FROM MOISTURE AND DIRECT SUNLIGHT. STORE IN A DRY PLACE. FOR INDOOR USE ONLY.

WARNING!

 
DO NOT STAND, SIT OR LEAN ON THIS UNIT. DO NOT USE THIS UNIT AS A STEP LADDER. ENSURE THIS UNIT IS USED ONLY ON A FLAT SURFACE. DO NOT USE THIS UNIT UNLESS ALL BOLTS AND SCREWS ARE FIRMLY SECURED. DO NOT PLACE HOT ITEMS SUCH AS COFFEE CUPS DIRECTLY ON THE SURFACE OF THIS FURNITURE ITEM. KEEP AWAY FROM CHILDREN AND BABIES. THIS PACKAGE CONTAINS SMALL PARTS AND SHARP POINTS. ADULT ASSEMBLY REQUIRED. A MILD ODOUR MAY BE PRESENT WHEN FIRST OPENING THIS CARTON. SIMPLY ALLOW TO AIR OUTSIDE AND THIS WILL FADE. **MAXIMUM SAFE LOAD: 5KGS PER SHELF.**

1 Hardware List

	a	∅4x35mm	20PCS		g	∅4x1 2mm	1PC
	b	∅6x30mm	20PCS		h	∅6x30mm	1PC
	c	∅6x50mm	10PCS		i	∅4x35mm	1PC
	d	∅6x35mm	4PCS		j	∅15 mm	16 PCS
	e	15x9.5mm	4PCS		k	∅2x1 6mm	48PCS
	f	28x28x12mm	1PC				

 


 
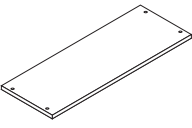 
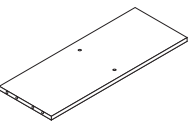 
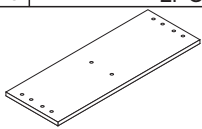 

 


Tool required
Phillips Head Screw Driver
(Not Provided)

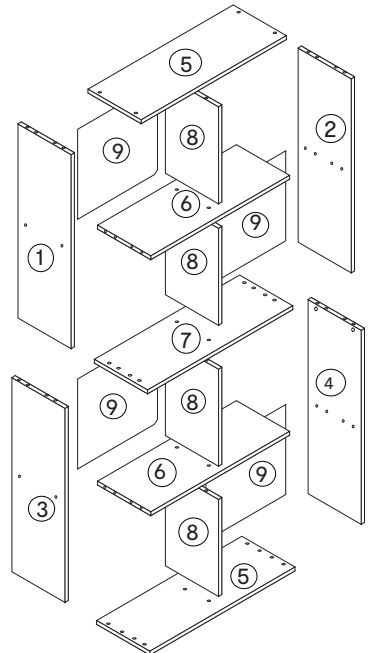 


Tool required
(Not Provided)

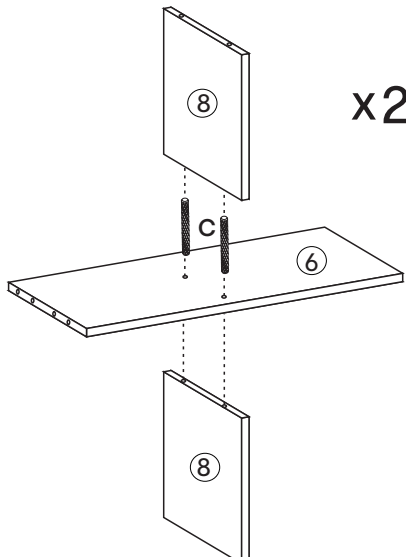 
3

	1	1PC		2	1PC		3	1PC		4	1PC		5	2PCS		6	2PCS	
												7	1PC			8	4PCS	
																9		4PCS

2

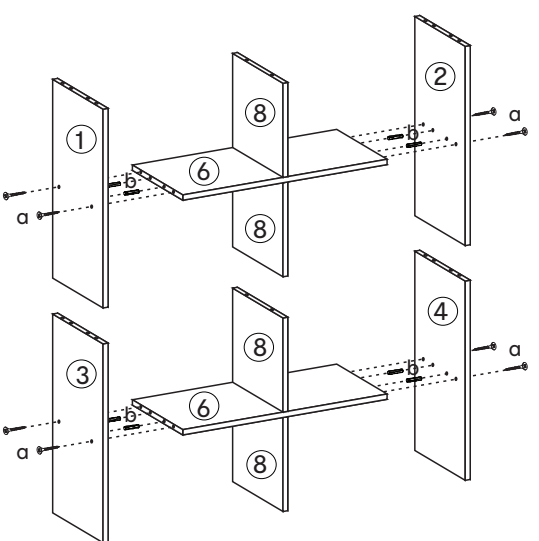 


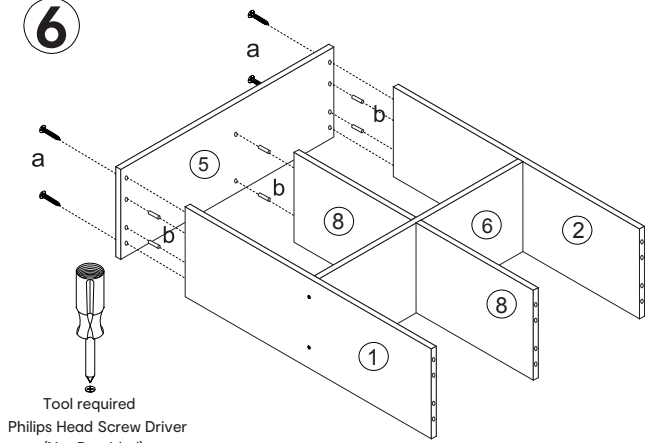 
4



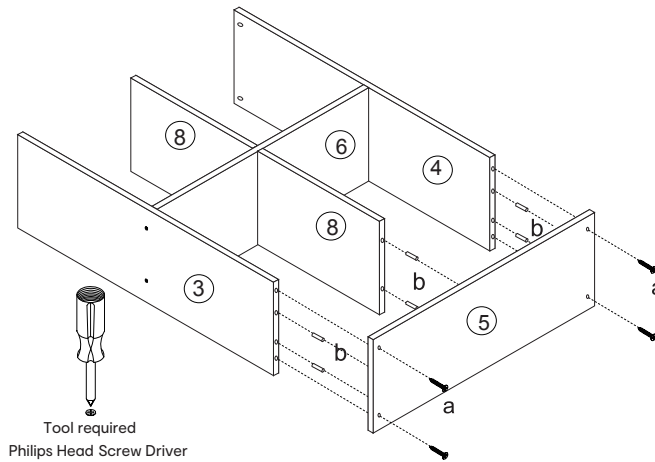 
x2

5

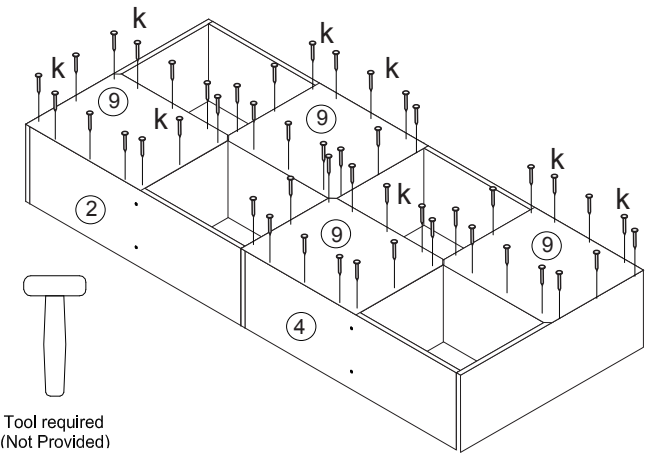 


6

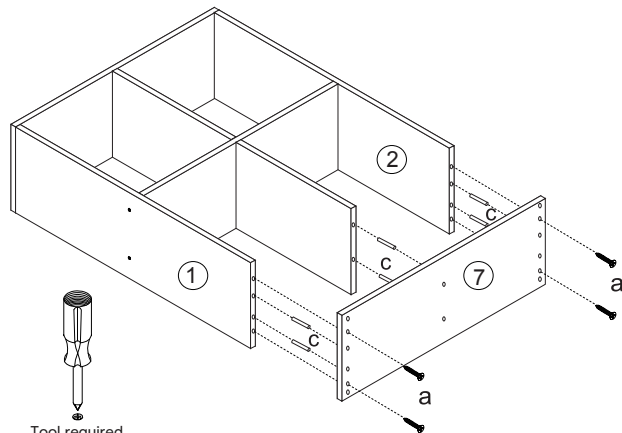 
Tool required
Philips Head Screw Driver
(Not Provided)

8

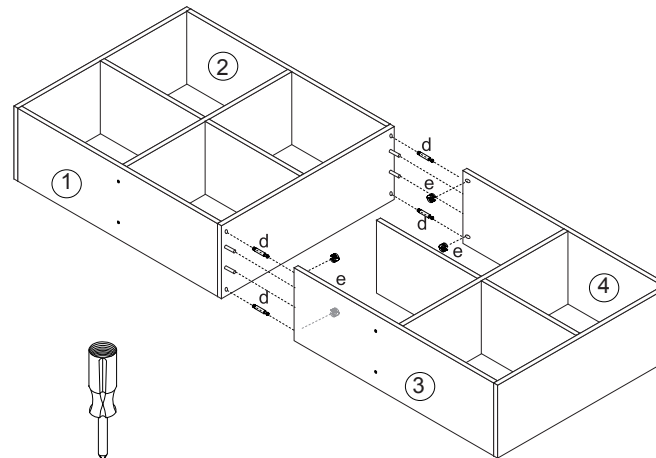 
Tool required
Philips Head Screw Driver
(Not Provided)

10

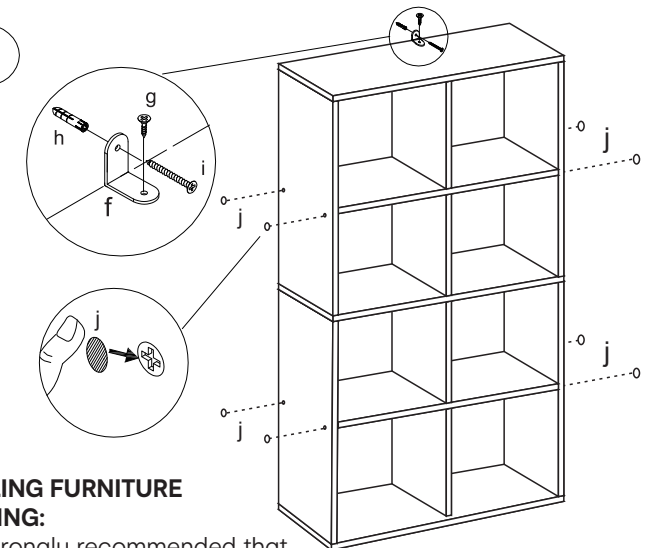 
Tool required
(Not Provided)

7

Tool required
Philips Head Screw Driver
(Not Provided)

9

Tool required
Philips Head Screw Driver
(Not Provided)

11

TOPPLING FURNITURE WARNING:

- › It is strongly recommended that this product is permanently fixed to the wall.
- › Please seek professional advice if you are in doubt of what fixing device to use.
- › Regularly check that anchors are securely maintained.
- › Stability of tall items may be affected by thick pile carpet or uneven floors.
- › Do not place unanchored televisions on furniture.

Caution: for your safety when attaching the anchor fixings, please note the following:

- › Check any electrical wires or plumbing inside the wall before drilling any holes (if you are unsure please seek professional advice from a qualified tradesperson)