

NAIL DRYER

TB-0889

INSTRUCTION MANUAL

Safety Instructions:

To ensure proper operation of this appliance, please read this instruction manual carefully before using the appliance and save it for further reference.

⚠ WARNING

- Do not use the appliance under the following conditions:
 - Pregnant women or while breastfeeding
 - Persons with allergies
 - If the area of use has wounds, inflammation, lumps or other skin diseases and conditions
- Verify the appliance before you start using it. Do not use this appliance if it has any damage.
- If you feel any discomfort on your skin or body while using the appliance, immediately stop using it and consult a doctor.
- Do not attempt to modify, disassemble, or repair the appliance by yourself to avoid accidents.

 
⚠ CAUTION

- Keep the appliance out of reach of children,
- Regularly clean the appliance to extend its life time,
- This appliance is battery-operated. If you do not use the appliance for a long time, remove the batteries,
- Do not mix use with old and new batteries,
- Do not mix alkaline and standard (carbon-zinc) batteries.

Specifications:


- Name: NAIL DRYER
- Model NO.: TB-0889
- Rated Voltage/Power: 4.5V---/1.8W
- Type of Battery: AAA 1.5V x 3 (not included)
- Size: Ø119mm x 72mm

Product Description (Picture 1):



Operating Instructions:

 ※ Remove the Battery Cover and insert three AAA batteries according to the battery compartment instructions (batteries are not included) (picture 2).




Picture 2

Using Tips

- 1) While using the appliance, slightly adjust your fingers or toes in order to irradiate and dry your nail polish evenly on the front and sides of the nails.
- 2) Do not apply a thick nail polish layer, nail polish does not dry well when the coat is too thick.

Using the Appliance

 - 1) Place your fingers or toes on the Activation Panel and slightly press it to turn on the appliance, the UV Light and fan drying mode automatically start at the same time (picture 3).



Picture 3

- 2) Remove your fingers or toes from the Activation Panel to turn the appliance off after usage.

Cleaning & Maintenance:

- 1) Make sure the appliance is turned off before you start cleaning it.
- 2) Do not immerse the appliance in water.
- 3) Clean the appliance with a dry cloth or with a cloth moistened with water.
- 4) Never use lubricant, detergent, polishing agents or air freshener on this appliance.

2. Trouble Shooting

Problem	Possible Cause	Solution
The appliance does not work	The batteries are out of power	Replace the batteries as guided
	The batteries were installed incorrectly	Install the batteries correctly as guided
Other problems		Contact your local retailer

名称	TB-0889说明书				
尺寸	200(L)x100(H)				
材质	80g书写纸	订单编号	GRC18019	审核	GRC
颜色	单面单黑		单位	日期	2018/06/26
其他	内琴3折后50*100mm(成品)		毫米	设计	杨婷