

anko

Steam Iron User Manual



Model: KB-932E3

IMPORTANT SAFETY INSTRUCTIONS

Read this user manual carefully before first use and use it for future reference.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- This product has been designed for domestic use only. In case of any commercial use, responsibility for use or failure to comply with the instructions, the manufacturer is not responsible, and the guarantee will not apply.
- Before connecting your appliance, check if the mains voltage is the same as the voltage indicated on your appliance, and that the power outlet has an earth connection. If unsure check with an electrician.
- Ensure before each use that the ready-steam or any other parts are not damaged.
- Never touch the steam and/or outlet of each of the steam emitters connected to main steam or coating device.
- Never direct the steam towards persons or animals. Never direct the steam jet towards any other electrical or electronic appliances.
- DO NOT use the iron if it has been dropped. If there are cracks or signs of damage, malfunction or if it is leaking water.

- Always make sure the appliance is switched off, unplugged and cooled down before doing any maintenance work.
- IMPORTANT: This iron must not be left unattended while it is connected to mains power and while it has cooled down. The soleplate of the iron can become extremely hot and may cause burns if touched.**
- Do not empty the appliance by pulling on the cord or on the appliance.
- Never immerse the iron, the stand, the power cord or the plug in water. Never hold them under a water tap.
- Do not allow the supply cord to come in contact with the appliance when the iron is hot.
- If the supply cord is damaged, it must be replaced by qualified electrical person only, as the product must be disposed.
- Disconnect from mains power when filling the reservoir in the iron with water.
- The iron must be used and stored on a flat, stable surface.
- Always place and operate the iron on a flat, stable, clean and dry surface. When placing the iron vertically, ensure that the surface on which the stand is placed is stable.
- For additional protection, this appliance should be connected to a household residual current device (earth leakage) with a rating of no more than 30mA, if unsure consult an electrician for advice.

12 Month Warranty

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Your goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3207 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us

BASIC FIRST USE

Unpack the appliance and check if all parts are there and undamaged. Should this not be the case, return the product to the retailer.

The packaging contains:

- One steam iron
- One filter case

Check carefully before first use. See **Cleaning and Maintenance**.

Heat up the iron to its maximum temperature and iron your piece of damp cloth for several minutes. This will burn off any manufacturing residue from the sole. Smoke and odour may occur for a short period during this process, which is normal.

FEATURES

Your iron has an Auto-Drip system, Anti-Scale system and Auto-Off function.

Auto-Drip system: This is to prevent water from dripping from the soleplate when the iron is switched off. During the auto-drip system may emit a loud 'clicking' sound, particularly when heating up or cooling down. This is normal and indicates that the system is functioning correctly.

Anti-Scale system: The built-in anti-scale cartridge is designed to reduce the build-up of limescale which occurs during steam ironing and is all pointing the working life of your iron. The cartridge cartridge is an integral part of the water tank and does not need to be replaced.

Auto-Off function: This feature automatically switches off the steam iron if it has not been moved for a while.

PARTS



- A. Soleplate
- B. Spray nozzle
- C. Steam filling slot
- D. Variable steam button
- E. Spray button
- F. Steam shut button
- G. Cord locking
- H. Indicator lamp
- I. Temperature dial

OPERATION

Filling the water tank

- Ensure that the iron is cold and not connected to a power supply.
- Open the water filling cover (C), insert the water, using the filter cap.
- Do NOT exceed the max level on the tank.
- Close the water filling cover (C) by pressing down the cap until you hear a 'click'. To avoid steam spillage, ensure that the water tank is properly closed.

NOTE: To avoid steam spillage, see recommended position for the water tank in the next section.

To avoid damage or blockage of your steam iron, do not use any purified water or additives.

Steam-ironing

Your iron is equipped with the Eco Steam System. This feature offers 5 steam levels for optimal ironing: **BOO** (boil-dry amount of steam for energy saving, suitable for most fabric types).

Normal steam (suitable for most fabric types).

Power steam (increased steam output for tough fabric types).

- Fill the water tank with plain water.
- Position the iron vertically on a stand or on a suitable flat stable surface.

Using the spray button

- Press the spray button couple of times to refresh the garment. Before spraying make sure that there is enough water in the water tank.

NOTE: Do not spray water on silk.

Using the steam shut button

- Press the steam shut button to instantly provide a powerful burst of steam to release stubborn wrinkles. Steam shut can be employed when ironing the collar of a shirt or the crease of a skirt.

The steam shut button can also be used when holding the iron in a vertical position. This is useful for removing creases from hanging clothes, curtains, etc.

ATTENTION: To prevent against heat or light to persons, do not iron or steam fabric while being seen on the body. Do not direct steam towards the body when using.

After ironing

- After use, turn the temperature dial (I) to **MIN** and disconnect the iron from mains power outlet.
- Let the iron cool down and empty the water tank.

CLEANING AND MAINTENANCE

Unplug the iron from mains power and allow it to cool down completely before cleaning and storing.

Cleaning

- Clean the upper part of iron with a damp cloth. If necessary, use a mild detergent.
- Do not use alcohol, acetone, benzene, scouring cleaning agents, etc., to clean the iron. Do not use household or medical objects.
- Remove any deposits on the soleplate with a damp cloth. Soiled soiled the soleplate, use a suitable surface to clean the soleplate, and never place the iron on a rough surface.
- To remove stubborn residue from the soleplate, iron over an old cotton rag in high setting.
- Always store the ironed iron horizontally on a stable surface with the soleplate protected by the soleplate.

Self-cleaning function

The self-cleaning function should be used on a regular basis, depending on usage and the hardness of water.

WARNING: Never pour white vinegar or any liquid cleaners into the water tank!

- Fill the water tank. Refer to **OPERATION: Filling the water tank**.
- Position the iron vertically on a stand or a suitable surface.
- Ensure that the steam control (D) is in OFF position.
- Connect the plug to a suitable mains power outlet.
- Let to maximum working temperature.
- Once the maximum temperature is reached, using the iron for 10 minutes.
- Hold the iron vertically on a stand away from your body, positioned behind the steam control (D) at "CALC/CLEAN" position. Boiling water and steam will now exit from the tank in 10 minutes.
- Gently shake the iron forwards and backwards to allow mineral and limescale deposits being expelled with the boiling water and the steam.
- Release the CALC/CLEAN button when the water tank is empty.
- Put the regulator into a steam power outlet socket, set a temperature and allow it to operate for at least two minutes to dry the soleplate.
- Unplug the iron and let the iron cool down fully.

WARNING! DON'T

IMPORTANT! Always check whether a label with ironing instructions is attached to the garment. Always follow the ironing instructions attached to the garment.

- The iron heats up quicker than it cools down, therefore, you should start ironing the articles requiring the lowest temperature such as those made of synthetic fibres.
- If the fabric consists of various kinds of fibres, you must always select the lowest ironing temperature to iron the composition of those fibres.
- Silk and other fabrics that are liable to become dry should always be ironed on the reverse side. To prevent staining, do not spray water straight on silk or other delicate fabrics.
- To prevent staining, do not spray water straight on silk or other delicate fabrics.
- Wool and other fabrics that require steam should be ironed in one direction with light pressure applied. Always keep the iron moving at all times.
- For wool fabrics (220°C) should never be ironed with the iron set to steam position. Preferably not steam fabric to the maximum position and use only shifts between the garment and the iron for protection.
- Do not touch metal buttons with the iron because they may melt.
- Be careful around glasses and other items to prevent the soleplate from smothering.

Symbol	Fabric	Temperature setting	Variable steam	Steam shut	Spray
	Synthetic fibre	MIN	•	•	•
	Wool, silk	•	•	•	•
	Cotton, linen	MAX	•	•	•

Attention! This symbol indicates: **DO NOT IRON!** if possible if not possible

TECHNICAL DATA

Rated power: 2000-2400W
Rated power: 2000-2400W