 New Adventures LLC LTD	2019
	Kmart Au
PRODUCT NAME	Singing Suzie
ITEM #	3011
LANGUAGE	English
SIZE	8.5”(W) x11”(H)
TYPE	IM
COLOR	<div>K</div> PMS185C
DATE	28 November 2018
DESIGNER / ARTIST	Cow
FILE NAME	2019_Kmart Au_Singing Suzie_IM_R5.ai

English
Color: Black

Singing Suzie™

INSTRUCTIONS

HOW TO PLAY:

- 1) Hold both of Suzie's hands with yours, and she sings.
(See Fig. 1)
- 2) You and a friend each hold one hand of Suzie and complete the circle by holding each others hands and Suzie will sing.
(See Fig. 2)

IMPORTANT: ONLY PARENTS / ADULTS SHOULD REPLACE BATTERIES.

WARNING: BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY. DO NOT MIX DIFFERENT TYPES OF BATTERIES OR NEW AND USED BATTERIES. NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED. RECHARGEABLE BATTERIES ARE ONLY TO BE CHARGED UNDER ADULT SUPERVISION. RECHARGEABLE BATTERIES ARE TO BE REMOVED FROM THE TOY BEFORE BEING CHARGED. THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED. REMOVE BATTERIES FROM THE TOY WHEN NOT IN USE FOR EXTENDED TIME OR WHEN BATTERIES BECOME EXHAUSTED. DISPOSE OF BATTERIES RESPONSIBLY. DO NOT DISPOSE OF IN FIRE. CAUTION: BATTERY INSTALLATION BY AN ADULT IS REQUIRED.

BATTERY INSTALLATION :

- 1. Locate the battery compartment on back of the doll.
- 2. Have an adult use a small Phillips® screwdriver to remove the battery compartment top.
- 3. Insert 3 LR44/ AG13 size batteries following polarity markings.(See illustration for specific battery installation)
We recommend using alkaline batteries.

CLEANING THE DOLL:


- 1. Use a damp cloth to wipe off the doll.
- 2. Do not put the doll in a washing machine.

WARNING!




Button cell batteries can cause serious injury or death if swallowed. Dispose of safely! Store batteries out of reach of children! Visit TheBatteryControlled.com.au

BATTERY ILLUSTRATION

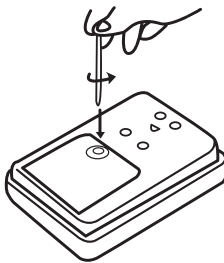

3X1.5V DC AG13/LR44

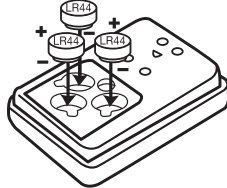

Please keep these instructions for future reference as they contain important information.

CAUTION: All ties or fasteners are not part of this toy and should be removed before giving it to your child.

Colour and product may vary from photo.

- SWALLOWING MAY LEAD TO SERIOUS INJURY OR DEATH IN AS LITTLE AS 2 HOURS DUE TO CHEMICAL BURNS AND POTENTIAL PERFORATION OF THE OESOPHAGUS.
- DISPOSE OF USED BATTERIES IMMEDIATELY AND SAFELY.FLAT BATTERIES CAN STILL BE DANGEROUS.
- EXAMINE DEVICES AND MAKE SURE THE BATTERY COMPARTMENT IS CORRECTLY SECURED. E.G. THAT THE SCREW OR OTHER MECHANICAL FASTENER IS TIGHTENED. DO NOT USE IF COMPARTMENT IS NOT SECURE
- IF YOU SUSPECT YOUR CHILD HAS SWALLOWED OR INSERTED A BUTTON BATTERY, CALL THE 24HOUR POISONS INFORMATION CENTRE IN AUS ON 131126 OR IN NZ 0800 764 766 OR CONTACT YOUR COUNTRY'S EMERGENCY DEPT.

2+Years

P1

Size: 8.5” x 11”