


Mini Jumper Instruction Manual

Keycode 42752325

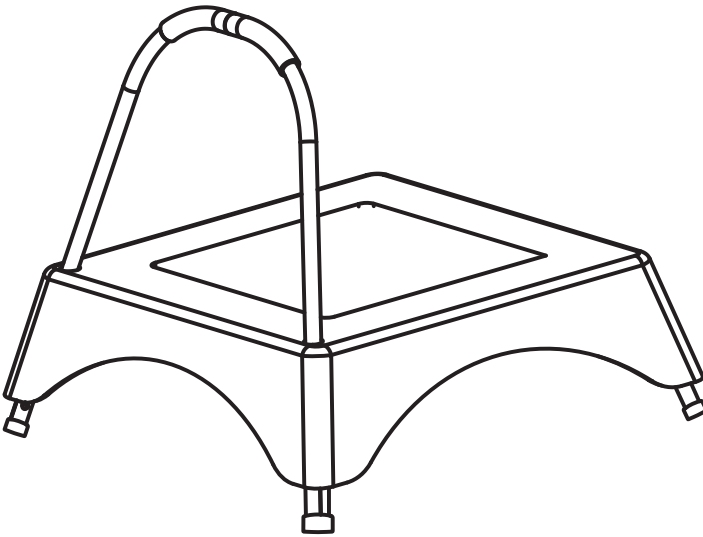

WARNING! Suitable for children 3~6 years. Small parts.
Choking hazard. Maximum user weight 25kg for mini jumper.
For domestic indoor and outdoor use.

Please keep the instruction manual since it contains important information.

Important Warnings

- Only one user at any one time! Multiple users can cause loss of control, collision or falls on the trampoline. This could result in serious injury to legs, arms, back, neck or head.
- Do not jump wearing shoes. Empty pockets and hands before jumping
- Do not eat while jumping
- Always consult your physician before performing any kind of physical activity.
- Do not exit by a jump
- Do not use the mini jumper if you have a medical history of neck or back injuries or mental or physical conditions that could cause injury.
- Do not use if the user has any broken bones (casts) or has recently been in the hospital for extensive treatments (operations, severe wounds, stitches, back injury or concussion).
- Make regular stops based on your own physical conditions
- Do not use the mini jumper during windy conditions or if the user or the trampoline surface is wet. These conditions can cause the user to lose control and fall resulting in serious injury.

**DANGER**



NO SOMERSAULTS OR FLIPS – PARALYSIS OR DEATH can result if you land on your head or neck!



No more than ONE user at a time (maximum weight - 25 kg).



Do not use if in a cast or have previous leg, arm, head, neck or back injury.



Do not allow children less than three (3) years of age to use.



Remove all hard or sharp objects including jewelry, eyeglasses, sunglasses or hairclips before jumping.

Proper Play Conditions:

- Always use the product in a well-lit area. Do not use without lighting during dawn, dusk or in complete darkness!
- The mini jumper must be placed on a surface that is **COMPLETELY FLAT AND LEVEL**. If the ground is uneven, this could cause movement in the frame and could cause stress on the joined sections of the frame that could damage the trampoline and/or can cause serious injury.
- DO NOT install or position this mini jumper on a hard surface such as concrete, tarmac or paving. Suitable surfaces are grass, sand or a play area covered with an appropriate depth of play bark material.
- Maintain clear space on all sides of the product. Make sure that there are no hazardous objects above, below or near the mini jumper. Such objects include walls, fences, tree limbs/trunks, electrical power wiring, rocks, sprinkler heads or other recreational objects (i.e. swing sets, swimming pools). Children can be seriously injured by colliding with such obstacles, put the mini jumper at least 2m from any structure.
- The product must not be used in windy conditions as wind can cause unexpected movement of the product.

Wind can cause the mini jumper to be lifted off the ground and become airborne. This can present a danger to individuals and to property. Winds can be especially strong in open areas, foothills, mountains, locations subject to hurricanes and tornadoes, areas between homes that create wind tunnels and anywhere else where local weather conditions can create high winds. We recommend that you move the product indoors and store it properly during periods of non-use.
- The mini jumper is not intended to be buried into the ground.
- An adult should place the mini jumper in a suitable location according to the instructions.

CONTACT US

Thank you for purchasing from Kmart.

Please contact our customer service centre

JCA Collective

Email: service@jcacollective.com

Phone Number: +61 423 259 751

 


 





 

 
Office Hours: Monday to Friday 9am to 5pm


SAFETY NOTES:

- Always place the mini jumper on a level surface before assembly and use. Place the mini jumper on a Slip - resistant and level surface such as on carpet or on a large rubber mat when used indoors.
- Do not place the mini jumper on smooth or slippery surfaces such as a concrete or tiled floor. Make sure there are no obstructions beneath, above, or around the product.
- Adult assembly required.
- Adult supervision required when product in use.
- For children 3~6 years old.
- For domestic indoor / outdoor use
- The mini jumper must be placed on a level playing surface away from any structure or obstruction, for example; laundry lines, electrical wires, garage, fence.
- Maximum weight should not exceed 25kg
- Children must understand how to use the product safely.
- DO NOT allow children to play around product when in use
- DO NOT allow more than 1 child to use this product at a time.
- All the modifications must be made by the consumer to the original mini jumper(e.g.the adding of an accessory) shall be carried out based on the instruction.
- The mini jumper shall be assembled by an adult in accordance with the assembly instructions and thereafter checked before the first use.
- Only one user. Collision hazard.
- Do not use the mat when it is wet.
- Always jump in the middle of the mat.
- Limit the time of continuous usage (make regular stops).

MAINTENANCE INSTRUCTIONS:

- Checking fixings regularly. Injury may be a result if you fail to do so .
- Checking the nuts and bolts on a regular basis for tightness, sharp edges or deterioration. Tighten or replace when required.
- Check paintwork regularly and if needed touch up with enamel
- Check that all spring-loaded (pit pin) joints are still intact and cannot become dislodged during playing
- In certain countries during winter period, the snow load and the very low temperature can damage the mini jumper, It is recommended to remove the snow and store the mat and the enclosure indoor.
- Check that mat, padding and enclosure without defects
- Make sure that the hook-and-loop fasteners are closed correctly during use of mini jumper.

PART #	PART DESCRIPTION	QTY
1	 Mini jumper Handrail A with handrail protector	1
2	 Mini jumper Handrail B with handrail protector	1
3	 Mini jumper Leg	3
4	 Mini jumper Leg	1
5	 Mini jumper Mat	1
6	 Mini jumper pad	1
7	 Mini jumper Leg protector	4
8	 Mini jumper Spring	24
9	 M6*40mm	8
10	 Wrench	1
11	 7-shape wrench	1
12	 Spring tool	1

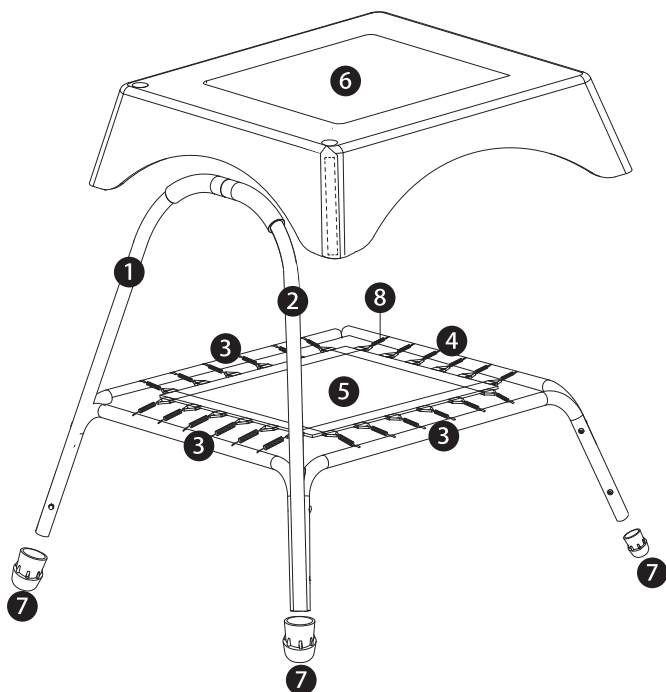

Assembly tips

Do not over-tighten the nuts and bolts initially to allow room for adjustment during installation.



When you have finished assembling the entire unit, go back over each step and fully secure all of the nuts and bolts.

Assemble part

Step1


Insert mini trampoline handrail A and hand rail B as below image shows.

WARNING!
Adult assembly required.

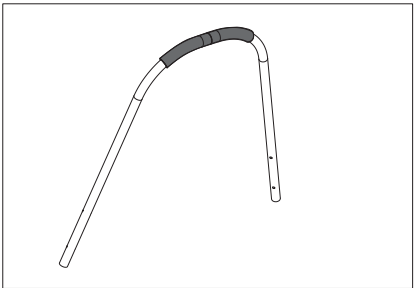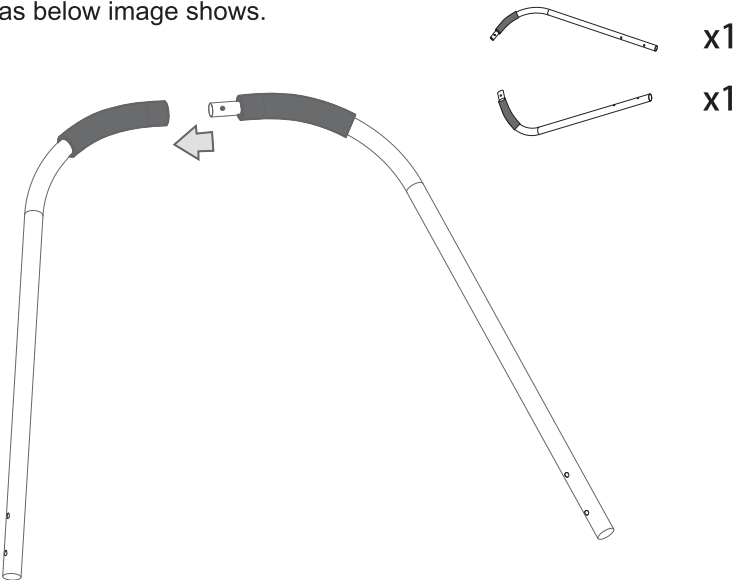



Step 2

Pick up the bolts and nuts from the blister box with type as image below shows.
Assemble mini trampoline leg as below.

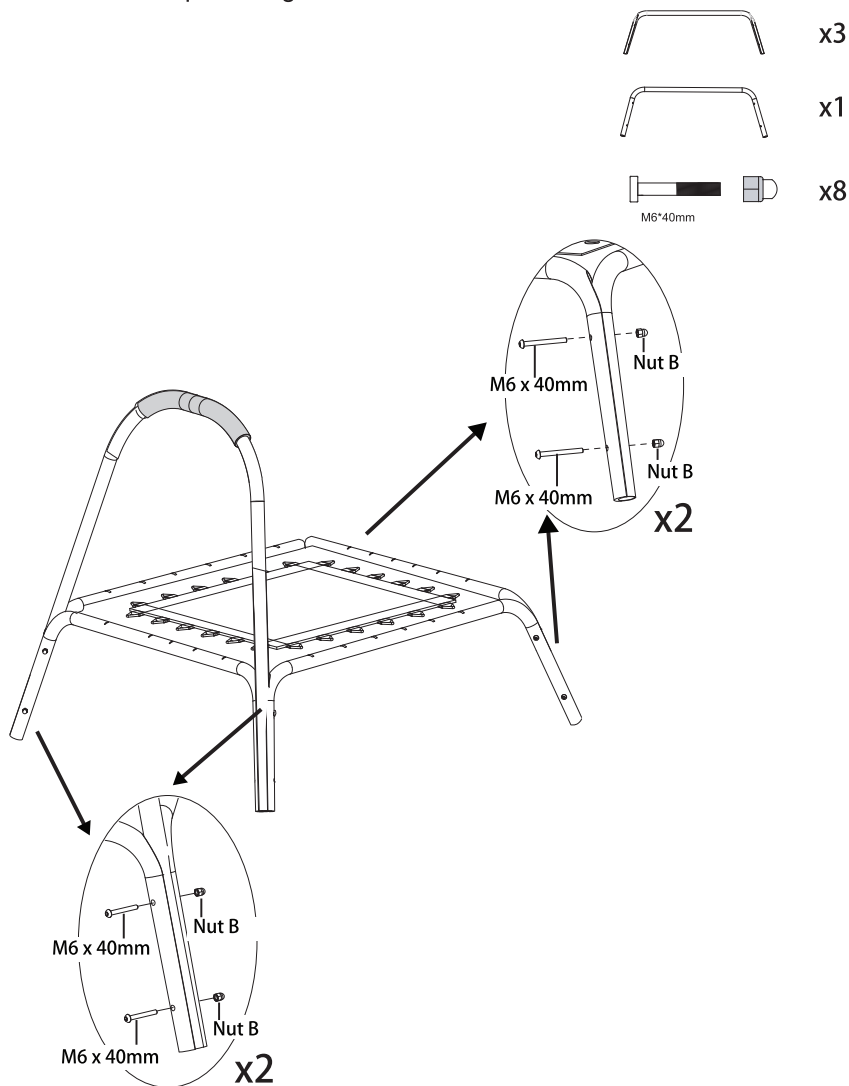




Step 3

Assemble the springs with spring tool as below image shows.

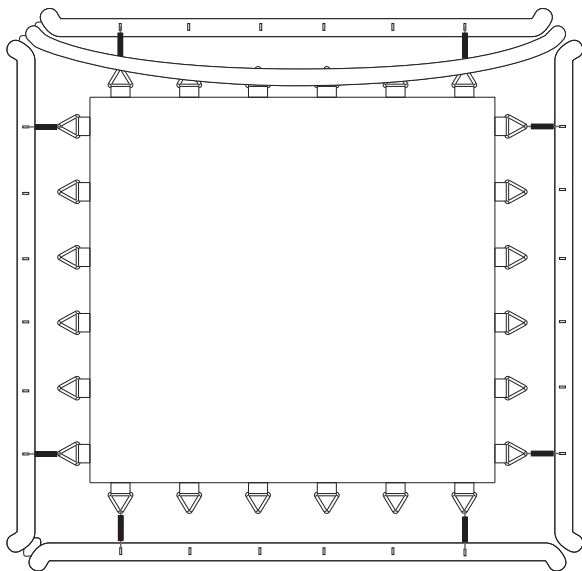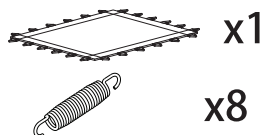

ATTENTION!



When assembling the springs, pls assemble the bigger opening end of the spring on the frame.

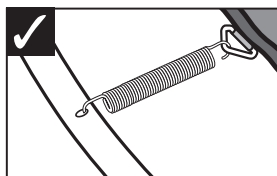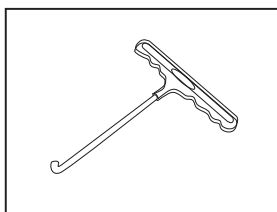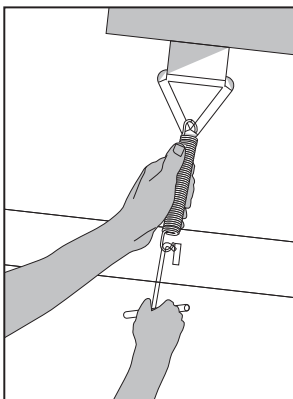

Step 4





x16

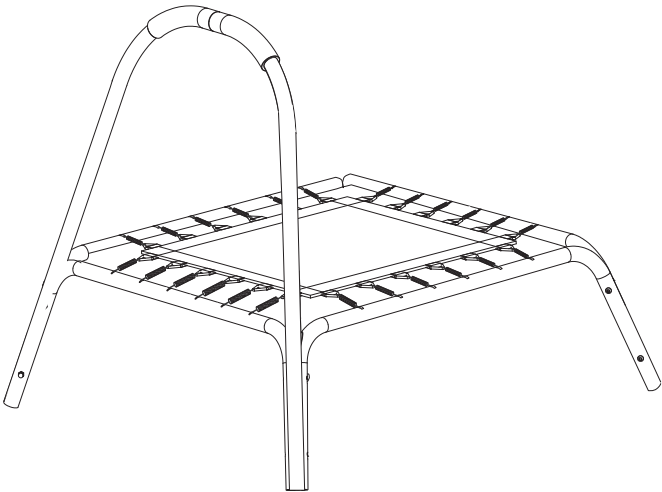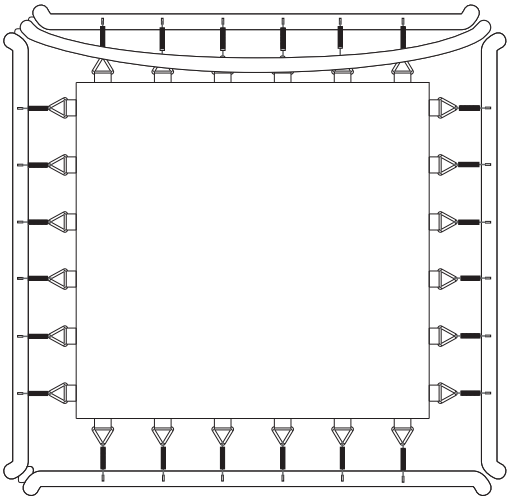

Step 5

Attached the mini trampoline pad and mini trampoline leg protector as below image shows.

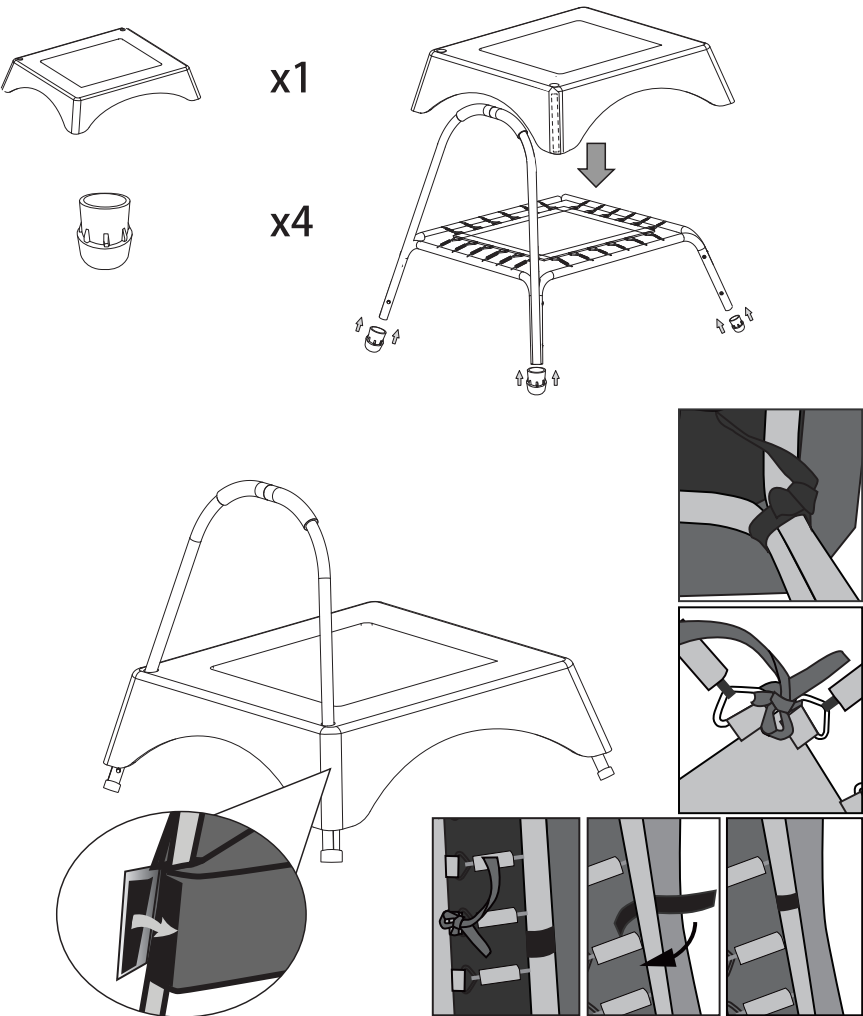

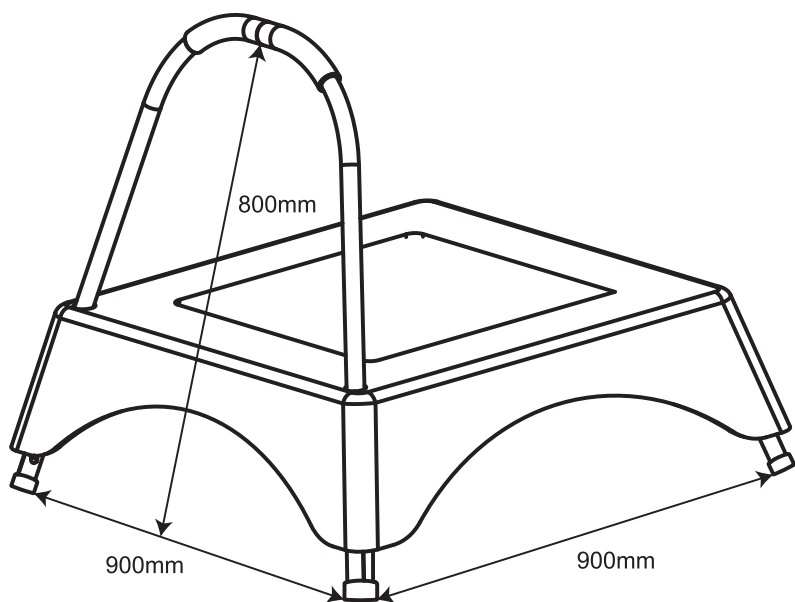

12 Month Warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on

JCA Collective

Email: service@jcacollective.com

Phone Number: +61 423 259 751

Office Hours: Monday to Friday 9am to 5pm

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

The date of purchase:

The components will deteriorate over time.

