


Unicorn Clock Instruction Manual

Print - Black
Size: 210mm x 297mm
12/04/2019

FEATURES

- › Displays day, month, date and time. Time can be selected to be in either 12-hour or 24-hour formats.
- › Alarm and snooze function with 8 difference songs.
- › Displays temperature in either celsius (0 to 55°C) or fahrenheit (32-122°F)
- › 7 colour changing sequences.

OPERATING INSTRUCTIONS

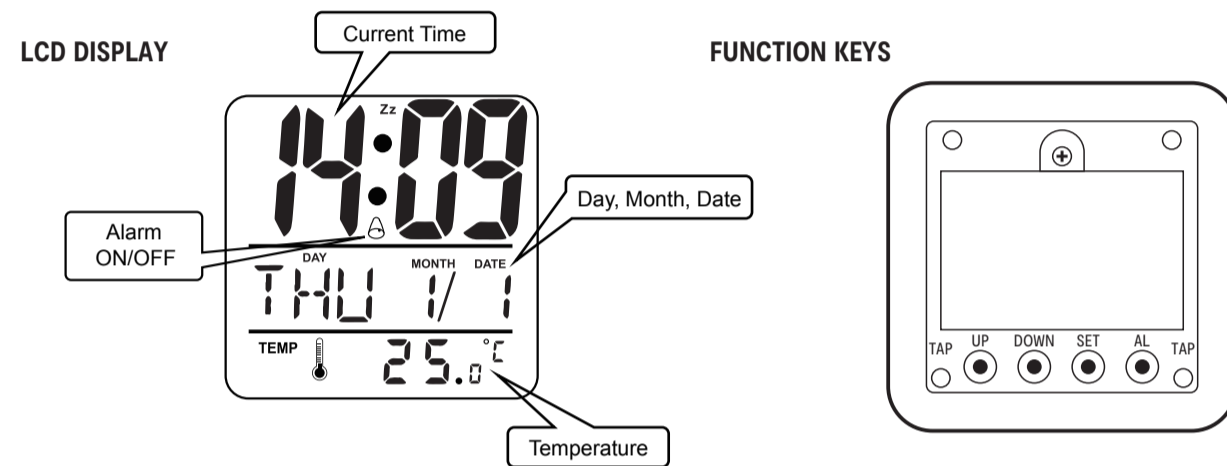

TO SET TIME AND DATE

Press SET to program time and date. Use UP and DOWN to adjust. Press SET again to confirm each setting. The sequence is as following: Hour → Minute → Year → Month → Day → Exit.

The range of settings are: 1-12 or 0-23 for hour, 0-59 for minute, 2000-2099 for year, 1-12 for month, 1-31 for day. The day will change automatically, eg.) from Sun to Mon with the change in date that occurs at 00.01 am.

12/24 HOUR CONVERSION

In normal mode, press UP to convert between 12-hour or 24-hour format.

TO SET ALARM AND SNOOZE

- › Press the AL key in normal display mode.
- › Press SET to program the alarm time. Use UP and DOWN to adjust the time. Press SET again to confirm each setting. The sequence is as follows: Hour → Minute → Snooze delay (from 1 to 60 min.) → Music → exit.

TO ACTIVATE ALARM AND SNOOZE FUNCTION:

Press AL once and then press UP and DOWN to activate alarm and snooze. Press AL again to return to normal display. Repeat this step to turn alarm off. With alarm sound on, press AL, UP or DOWN to enter the snooze mode. The Zz icon will flash. The alarm will repeat again after the interval, set in step 2. Press SET to stop alarm sound.

TEMPERATURE CONVERSION

Press DOWN to convert between Celsius and Fahrenheit temperature.

Item No. 42-754-626

BACK

anko

Unicorn Clock

6+
years



WARNING! Not suitable for children under 3 years due to small parts. Choking hazard. Use with care and only under adult supervision.


ADVICE FOR SUPERVISING ADULTS

1. Read and follow these instructions and the safety rules and keep them for reference.
2. The supervising adult should discuss the warnings and safety information with the child or children before commencing to use this product.

WARNING: INSERT BATTERIES WITH THE CORRECT POLARITY AND ALWAYS FOLLOW THE MANUFACTURER'S INSTRUCTIONS. DO NOT MIX NEW AND USED BATTERIES OR ALKALINE, STANDARD (CARBON-ZINC), OR RECHARGEABLE (NICKEL-CADMIUM) BATTERIES. REMOVE BATTERIES IF THE PRODUCT WILL BE STORED FOR AN EXTENDED PERIOD. DISPOSE OF USED BATTERIES RESPONSIBLY.

CAUTION: BATTERY INSTALLATION BY AN ADULT IS REQUIRED.

Requires 3 x 1.5v AAA batteries (not included).

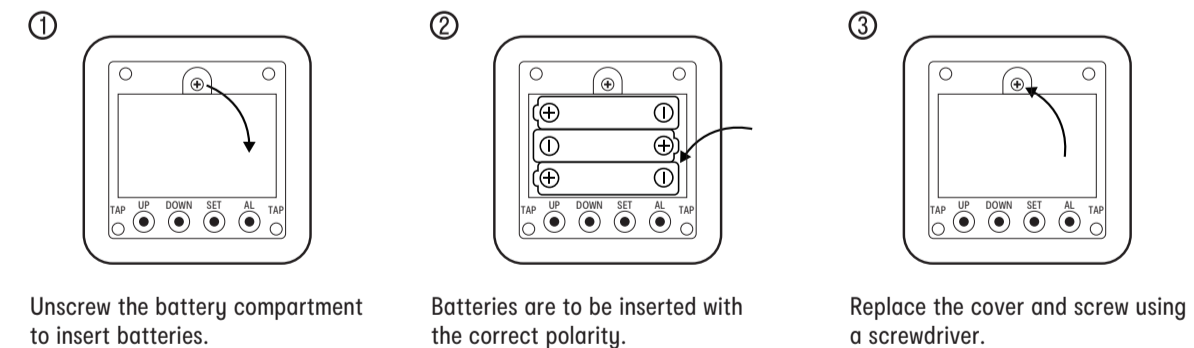

FRONT