

5+
YEARS

 
FLIP CAR

INSTRUCTIONS



Battery installation:

- 1 - Unscrew to open the battery compartment.
- 2 - Insert batteries into the correct + and - polarities.
- 3 - Close the cover.

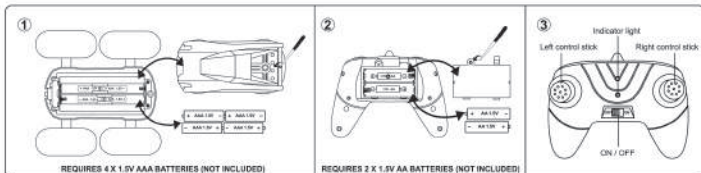


How to use simultaneously:


1. Turn on the vehicle, then turn on the transmitter.
2. When the vehicle is functioning, this means they have matched.
3. If you have more than two vehicles, please proofread one by one. When the second vehicle is proofreading, please always keep the first vehicle and transmitter on.
4. Please turn off both the vehicle and transmitter and re-start all proofreading processes if you are changing to play with another 2.4GHz transmitter.

Start:

 
1. How to move forwards or backwards:
Push both control sticks up at the same time, the car will move forwards.
Pull both control sticks down at the same time, the car will move backwards.

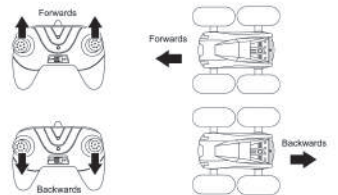

 2. How to spin:
Push the left control stick all the way up or pull the right control stick all the way down, the car will spin clockwise.
Pull the left control stick all the way down or push the right control stick all the way up, the car will spin anticlockwise.

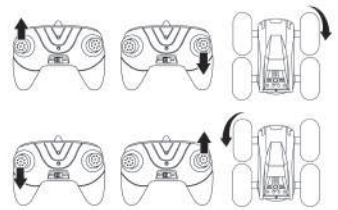

 3. How to spin rapidly:
Push the left control stick all the way up and pull the right control stick all the way down at the same time, the car will spin clockwise rapidly.
Pull the left control stick all the way down and push the right control stick all the way up at the same time, the car will spin anticlockwise rapidly.

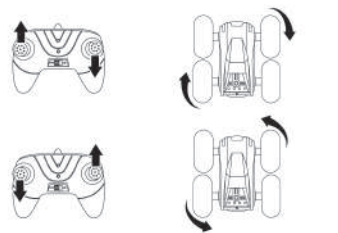

4. How to flip over:
Push both control stick up or pull both control stick down, when the car hits an obstacle at high speed, the car will flip over.
Push both control sticks up, when the car runs in high speed, then quickly pull both control sticks down for the car to flip over.

Note: It is not recommended to drive the car on carpet when you perform the flip function or spin function.

WARNING:

Batteries are to be inserted with the correct polarity (+ and -). Do not mix different types of batteries or new and used batteries. Non-rechargeable batteries are not to be recharged. Rechargeable batteries are only to be charged under adult supervision. The supply terminals are not to be short-circuited. Remove batteries from the toy when not in use for extended time or when batteries become exhausted. Battery installation by an adult is required. Dispose of batteries responsibly. Do not dispose of in fire.

2.4GHz



ZS16

KEYCODE: 42872832

MADE IN CHINA
FOR AU / NZ: IMPORTED FOR Kmart
STORES IN AUSTRALIA AND NEW ZEALAND.
FOR USA: IMPORTED BY ANKO RETAIL INC.
1900 ALDERWOOD MALL PARKWAY
LYNNWOOD WA 98036 USA.

= PRODUCT MAY VARY SLIGHTLY FROM IMAGE SHOWN.
= PLEASE KEEP THE PACKAGING FOR FUTURE REFERENCE.
= PERFORMANCE TIPS: DO NOT DRIVE THE VEHICLE ON GRASS
OR THROUGH WATER. DO NOT DRIVE THE VEHICLE INTO ANY
HARD OBJECT.
= READ THE INSTRUCTIONS BEFORE OPERATING THIS PRODUCT.