

Cleaning:

Wash, rinse and dry the teapot before using it for the first time. The teapot is dishwasher safe however the lid and insert should be washed by hand. Do not use steel wool or abrasives to clean the teapot as this may scratch the glass.

How to use the teapot:

Place the strainer into the teapot and fill with the desired amount of loose tea. Pour hot water through the strainer to make your perfect cup of tea. You can also use the teapot with teabags. The teapot is not safe to use in the oven, on a hot plate, gas ring or ceramic hob.

IMPORTANT!

The teapot should not be exposed to variations in temperature, as glass could crack. Never pour hot water into a teapot that is taken directly from a fridge or freezer or place a hot teapot on a cold or wet surface.