

REMOTE CONTROL ROBOT MANUAL

AGES 4+ YEARS



PACKAGE CONTENTS

 
• Robot • Remote Control • 9 Foam Discs

IMPORTANT SAFETY PRECAUTIONS


READ ALL INSTRUCTIONS BEFORE USING YOUR ROBOT.

1. Do not use your robot near water. Clean using a soft cloth or paper towel.
2. Do not place your robot on any wet surfaces.
3. Do not allow children under age four to play with your robot without adult supervision.
4. Do not expose your robot to excessive heat, flames or fire.
5. Always press all buttons or switches carefully.
6. Do not use in extremely dry environments, as this can lead to static discharge during usage.
7. Do not expose your robot to temperatures above 40°C. Keep out of direct sunlight.
8. Do not drop, puncture or expose your robot to excessive trauma.
9. Your robot is not intended for commercial use.

ROBOT

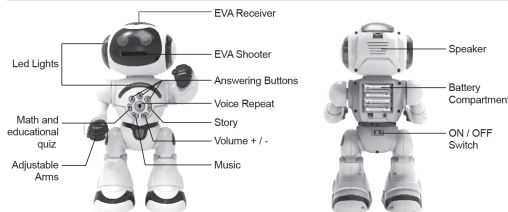

REMOTE CONTROL

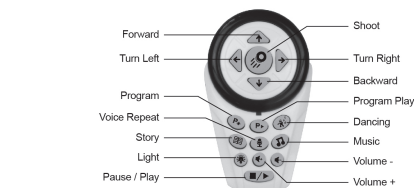 

(Press the pause button, the robot will enter pause mode and have no function until you press the play button again to resume activity.)

 
-1-

INSERTING BATTERIES

Robot

1. Unscrew to open battery cover, insert 4 x 1.5V AAA batteries.
2. Replace battery cover.


Attention: remove batteries after you have finished using your product.

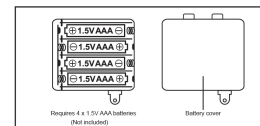

Remote control

1. Unscrew to open battery cover, insert 2 x 1.5V AA batteries.
2. Replace battery cover.

 Attention: remove batteries after you have finished using your product.

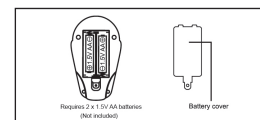

POWERING ON YOUR ROBOT

Once you have inserted batteries into your robot and remote control, you can go ahead and power on your robot.

To do so, slide the ON/OFF switch located on the rear of the robot to the ON position.

When you have finished playing with your robot, slide the ON/OFF switch to the OFF position.

NOTE: When your robot is running low on power, it will emit an audible tone and power down. Once the batteries are completely depleted, replace the batteries as soon as possible to continue use.

MOVING YOUR ROBOT

You can use your remote control to move your robot around in different directions.

By pressing the left and right arrow buttons, your robot will turn left or right.



By pressing the forward/backward button once, the robot will walk forward/backward for a distance. By pressing the forward/backward button twice, the robot will slide forward/backward for a distance. By pressing the forward/backward button twice and keep pressing, the robot will slide forward/backward all the time.



-2-

 
PROGRAMMING YOUR ROBOT

Press the program button and your robot will enter program mode. Once in program mode, you can press the directional buttons or shoot button a series of times to create a movement program. Press the program play button to have your robot carry out the movement program that you created.

EVA SHOOTING

Load an EVA disc into the EVA receiver of your robot.

Press the shoot button on your remote control and your robot will fire the EVA disc.

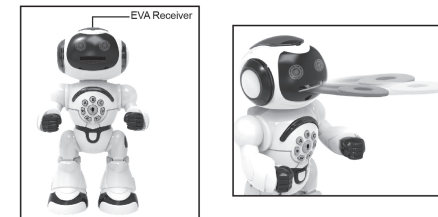

VOICE REPEAT

When you press the voice repeat button, the robot will enter voice repeat mode and repeats what you say.

Attention: For better use, please keep away from infrared products, strong lights and signal sources when using this product.

Keycode : 42887164

WARNING: BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY (+ AND -). DO NOT MIX DIFFERENT TYPES OF BATTERIES OR NEW AND USED BATTERIES. NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED. RECHARGEABLE BATTERIES ARE ONLY TO BE CHARGED UNDER ADULT SUPERVISION. RECHARGEABLE BATTERIES ARE TO BE REMOVED FROM THE TOY BEFORE BEING CHARGED. THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED. REMOVE BATTERIES FROM THE TOY WHEN NOT IN USE FOR EXTENDED TIME OR WHEN BATTERIES BECOME EXHAUSTED. BATTERY INSTALLATION BY AN ADULT IS REQUIRED. DISPOSE OF BATTERIES RESPONSIBLY. DO NOT DISPOSE OF IN FIRE.

WARNING: DO NOT AIM AT EYES OR FACE. DO NOT USE PROJECTILES OTHER THAN THOSE SUPPLIED BY THE MANUFACTURER.

* PRODUCT MAY VARY SLIGHTLY FROM IMAGE SHOWN.
* READ THE INSTRUCTIONS BEFORE OPERATING THE PRODUCT.
* PLEASE KEEP THE PACKAGING FOR FUTURE REFERENCE.

WARNING: CHOKING HAZARD
SMALL PARTS. NOT FOR CHILDREN UNDER 3 YEARS.

WARNING: FOR SAFETY REASONS, REMOVE ALL TAGS, LABELS AND PLASTIC FASTENERS BEFORE GIVING THIS TOY TO YOUR CHILD.

WARNING: THIS TOY PRODUCES FLASHES THAT MAY TRIGGER EPILEPSY IN SENSITISED INDIVIDUALS.

-3-