14.5X21CM

CAUTION: DO NOT FOLD OR UNFOLD THIS PRODUCT NEARBY CHILDREN, PEOPLE OR OBSTACLES.

SETUP

- 1. REMOVE THE PRODUCT FROM THE PACKAGING AND CAREFULLY UNFOLD IT AT ARMS LENGTH. **CAUTION! THE PRODUCT MAY SPRING** OPEN QUICKLY.
- 2. SIT THE STRUCTURE UPRIGHT, OPEN ONE SIDE OF THE PANEL LIKE YOU WOULD WITH A BOOK.



3. REACH INTO THE INSIDE CORNER AND PULL IT TOWARDS YOU. THIS WILL FORM THE CUBE STRUCTURE.

 


4. YOUR PLAY TENT IS NOW READY TO ENJOY.




FOLDAWAY

1. TAKE THE STRUCTURE AND PUSH CORNER [A] INTO THE OPPOSITE CORNER [C].




 2. BRING CORNERS [B] AND [D] TOGETHER. THE STRUCTURE SHOULD NOW BE FLAT.




3. MAKE SURE THE PANELS OF YOUR STRUCTURE LAY FLAT AND THE EDGES JOIN UP AS MUCH AS POSSIBLE OR IT WILL MAKE THE FOLDING DIFFICULT. NOW YOU ARE READY TO FOLD.


IT IS RECOMMENDED TO STORE THE PRODUCT FLAT. HOWEVER FOR PORTABILITY, CONTINUE TO FOLD.

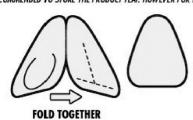

 4. HOLD THE FLATTENED TENT UPRIGHT WITH ONE HAND ON EITHER SIDE.



 5. REVERSE ONE HAND AND TWIST THE FLATTENED TENT INTO ITSELF. THIS WILL FORM THREE LOOPS IN A FLATTENED DISC.



6. BRING THE LOOPS TOGETHER AND STORE THE COMPACTED PLAY TENT CAREFULLY IN ITS CARRY BAG. CAUTION! IT MAY SPRING OPEN AGAIN SUDDENLY.

⚠ **CAUTION:** THIS PRODUCT WILL SPRING OPEN QUICKLY! CHILDREN SHOULD NOT BE ALLOWED TO FOLD OR UNFOLD THIS PRODUCT WITHOUT ADULT SUPERVISION. DISCARD IF STEEL LOOP IS BROKEN. PLEASE THOROUGHLY READ INTRUCTIONS BEFORE USING THIS PRODUCT. COLOURS AND SPECIFICATIONS OF PRODUCT MAY DIFFER FROM PHOTOS SHOWN. YOUR TENT SHOULD NOT BE LEFT IN DIRECT SUNLIGHT OR OUTDOORS FOR LONG PERIODS OF TIME.

🗥 WARNING: KEEP AWAY FROM FIRE. ITEM IS NOT FIREPROOF. KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS PRODUCT.

CHOKING HAZARD - SMALL PARTS. NOT SUITABLE FOR CHILDREN UNDER 3 YEARS.

TROUBLESHOOT: IF YOUR STRUCTURE DOES NOT STAND PROPERLY OR YOU NOTICE THAT THE PANELS ARE BOWING (CURVING), IT MAY BE DIFFICULT FOR YOU TO FOLD YOUR PRODUCT. IF THIS IS THE CASE, YOU MAY HAVE A TWISTED INNER SPRING LOOP. TO FIX THIS PROBLEM, SIMPLY RUN YOUR FINGERS AROUND THE EDGE (BINDING) OF THE PRODUCT WHERE THE SPRING LOOP IS LOCATED. WHEN YOU FEEL A TWIST, PUT YOUR HANDS ON EITHER SIDE OF IT AND PEDAL THEM BACKWARDS ON FORWARDS LIKE YOU WOULD A BICYCLE. THIS WILL UNTWIST YOUR LOOP AND ALLOW FOR EASIER OPENING AND FOLDING.

DUE TO CONTINUAL CHANGES AND IMPROVEMENTS TO OUR PRODUCTS, THE COLOURS AND SPECIFICATIONS OF OUR PRODUCTS MAY VARY. PRODUCT MAY DIFFER FROM PHOTOS SHOWN.