


ASSEMBLY INSTRUCTIONS

Please read instructions carefully. Remove all wrapping material, staples and packing straps from the carton. See Hardware and Furniture Parts List for guidance. Be sure you have all parts before you start assembling. Place all furniture parts on a clean and flat soft surface, such as carpet or rug to prevent from being scratched.



PARTS INCLUDED

- | | |
|--------------|-------|
| 1. Top | : 1pc |
| 2. Leg frame | : 1pc |
| 3. Mattress | : 1pc |

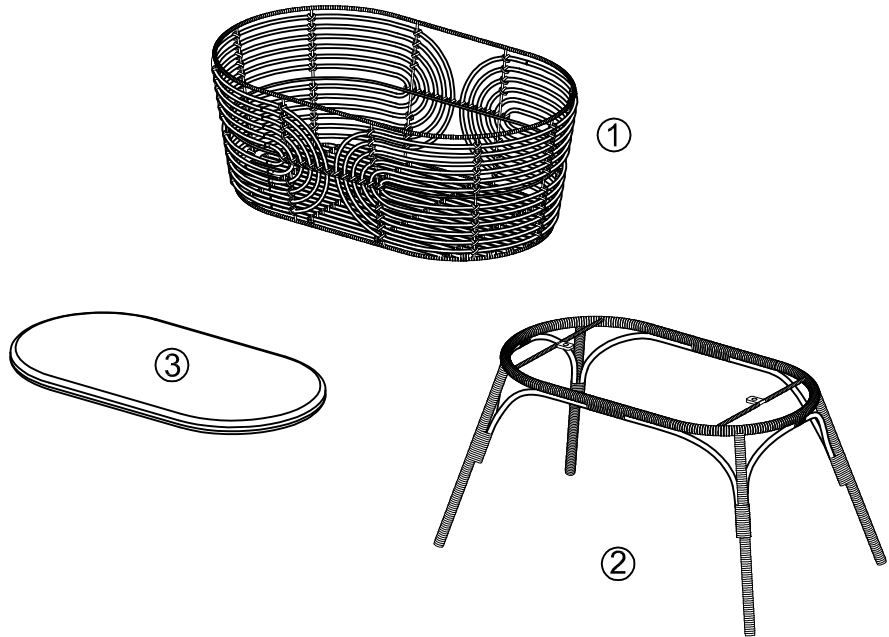

HARDWARE LIST

- | | |
|------------|--------|
| A. Bolt | : 2pcs |
| B. Washer | : 2pcs |
| C. Hex key | : 1pc |

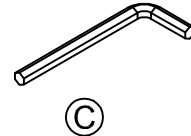 

WARNING:

Adult assembly is required.

Unassembled parts contain screws and with functional sharp points, please keep unassembled parts away from small children.

CAUTION:

This item is a toy and should only be used with dolls. Not suitable for babies, children or pets. Adult supervision is recommended.

Do not play with this item near stairs, slopes etc.,.


PLEASE CHECK CONDITION OF ITEM REGULARLY, AS SCREWS MAY LOOSEN WITH USE OVER TIME. TIGHTEN SCREW FITTINGS IF NECESSARY.

FOR ASSEMBLY


- First, check the contents to make sure that nothing is missing.
- Sort out the parts and fittings as shown, assemble product step by step.
- It is preferable to rest the product on a soft surface to avoid damage during assembly.
- Do not overtighten screws and fittings.
- Re-tighten all screws and fittings periodically.

ASSEMBLY INSTRUCTIONS

STEP 1

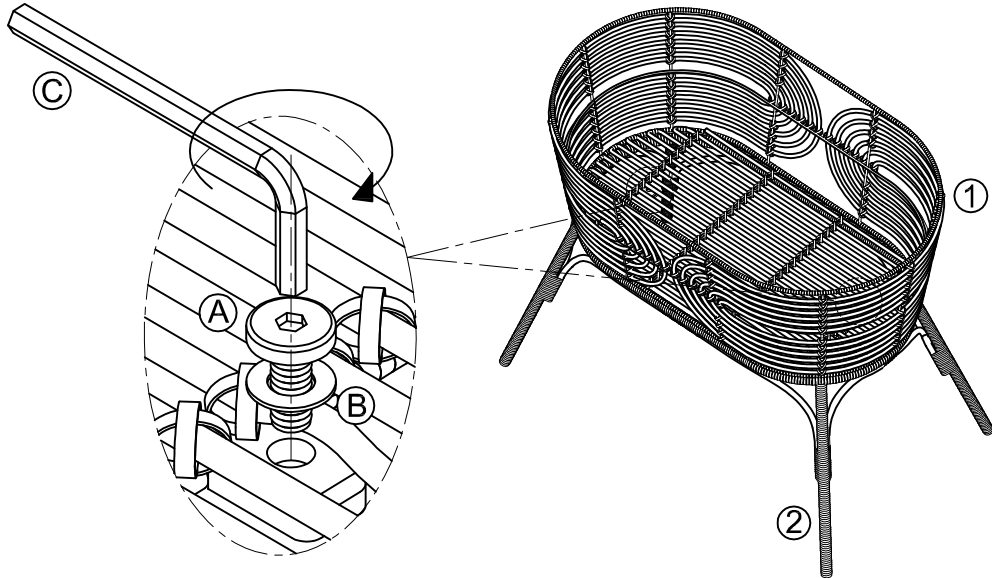

STEP 2

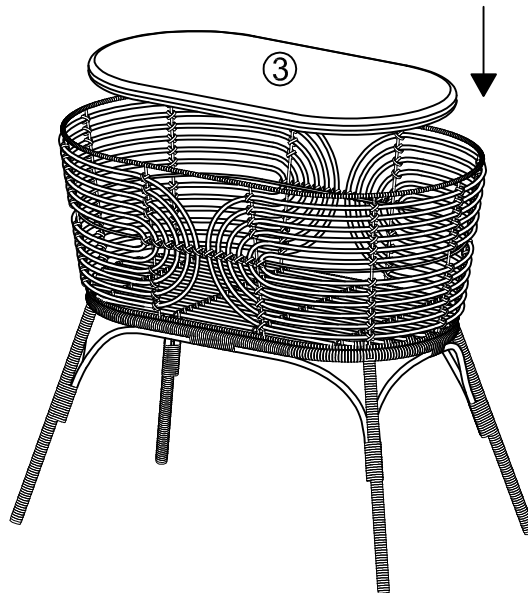

STEP 3

