 


anko

Instant Hot Water Dispenser

WH-169-6

User Manual

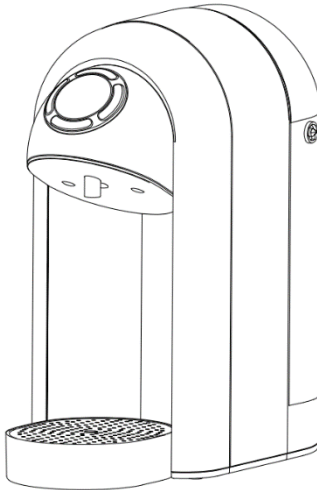

**PLEASE READ AND SAVE THESE
INSTRUCTIONS FOR FUTURE REFERENCE**

BEFORE FIRST USE

WARNING!

Read and understand all instructions before using this product and follow all warnings and cautions in the manual.

- To protect against risk of electrical hazards, do not immerse the appliance, power cord or plug in water or any other liquids.
- If the supply cord is damaged, it must be replaced by a qualified electrician in order to avoid a hazard, or the product must be disposed.
- Place the cord in such a way that pulling or tripping over it is not possible.
- Always place and operate the appliance on a flat, solid, clean, dry and heat-resistance surface.
- The power socket must be readily accessible so that the appliance can be unplugged in an emergency.
- This appliance is intended to be used indoors in household and similar applications such as: staff kitchen areas in shops, offices and other working environments, farmhouses, by clients in hotels, motels and other residential type environments, bed and breakfast type environments.
- The appliance is intended for household use only. Do not use outdoors or for commercial purpose. Any other use will void the warranty.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision


or instructions concerning use of the appliance by a person responsible for their safety.

- Children should be supervised to ensure that they do not play with the appliance.
- Do not operate the appliance if damaged or malfunctions.
- Do not place on or near a hot gas or electric burner, or in a heater oven.
- Do not use an extension cord with this appliance.
- Switch OFF the mains power outlet and remove the plug before cleaning or when not in use. To unplug, grasp the plug and pull from the power outlet. Never pull the cord. Never carry the appliance by the cord.
- Do not allow the cord to hang over the edge of a table or counter or come in contact with hot surfaces.
- Do not dismantle and repair the appliance by yourself. **DANGER OF AN ELECTRIC SHOCK AND/OR FIRE!**
- Do not allow this appliance to touch curtains, wall coverings, clothing, dish towels or other flammable materials during use.
- The use of attachments or accessories not recommended or sold by the manufacturer can cause fire, electric shock and/or injury.
- This appliance was designed to heat fresh water only.
- Do not over-fill or under-fill. Always fill water volume between MIN and MAX level marked on the water tank.
- Avoid contact with steam and water outlet. The temperature of the water outlet may be high when the appliance is operating.

- Extreme caution is necessary when moving any appliance containing water. Unplug the appliance before moving it.
- Do not operate your appliance inside cabinet or under a wall cabinet. When storing in a cabinet, always unplug the unit from mains power.
- This appliance is not intended to be operated by means of an external timer or separate remote-control system.
- To prevent damage to the appliance, do not use alkaline cleaning agents when cleaning, use a soft cloth and a mild detergent.
- Do not fill water to the water tank or remove the water tank when the appliance is connected to mains power.
- **WARNING: Potential injury from misuse.**

**SAVE THESE INSTRUCTIONS
FOR HOUSEHOLD USE ONLY**

KNOW YOUR APPLIANCE

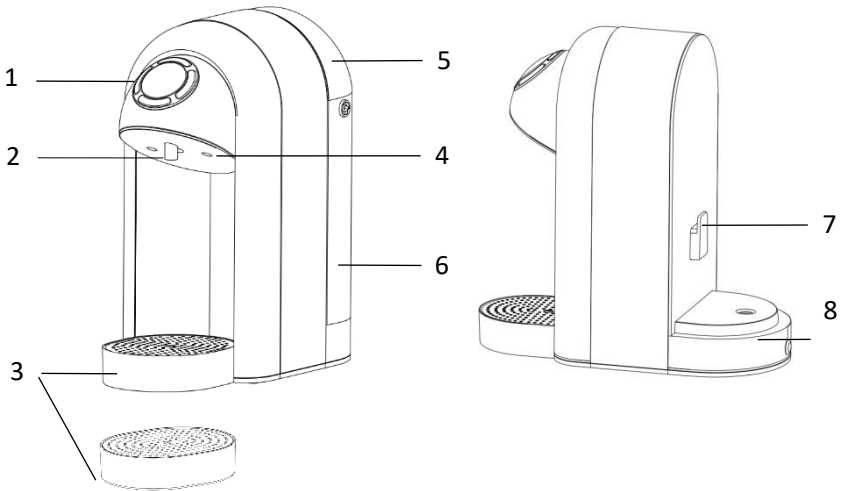

1. Control panel

2. Water outlet

3. Drip tray x 2

4. Water dispense indicator light

5. Water tank cover

6. Water tank

7. Water tank clip

8. Water inlet

HOW TO USE THE CONTROL PANEL

1, Temperature

- Press “Temperature” button to choose the desired water temperature.
- The available temperatures are 98°C, 85°C, 70°C and 25°C. The set temperature will be displayed in orange colour.



2, Volume

- Press “Volume” button to choose the right volume of water you need.
- The available volumes are small amount(150ml), half cup (230ml) and full cup (300ml). The selected water volume will be displayed in orange colour cup symbol.

3, Unlock

- Press “Unlock” button to unlock the appliance, this will enable the water dispense function.
- The appliance will automatically go into safety lock mode after 5 seconds if no function is selected on the appliance. The Unlock symbol is shown in red.

4, Dispense

- Press the “Dispense” button to get water.
- **IMPORTANT!** The “Dispense” button will not work without unlocking the appliance first. Note: press the Unlock button and then press the Dispense button within 5 seconds to get hot water.

- You can stop dispensing water at any time by pressing on the “Dispense” button the second time.

Note:

1. The display panel goes dark (standby mode) automatically if no function is selected after 1 minute.
2. Press any button to illuminate the display panel.

BEFORE FIRST USE


IMPORTANT! Always place and operate the appliance on a flat, solid, clean, dry and heat-resistance surface.

1. Unpack the appliance and check if all parts are included and undamaged. In case of shipping damage or incomplete package, return the product to Kmart.
2. Clean the appliance with a damp cloth or sponge. Wipe dry with a soft dry cloth.



WARNING! Do not immerse the appliance in water or any other liquids to clean.

3. Wash the water tank thoroughly with warm water and rinse. Dry all components thoroughly before use.
4. Fill the water tank with water volume between “MIN” and “MAX” mark. Load the water tank on the appliance with the clip lock in place. Cover the water tank.
5. Plug the appliance into a mains power outlet.

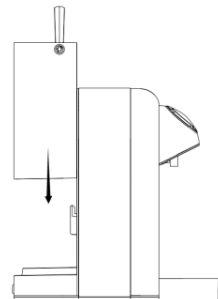

6. Dispense two cups of water to clean out the water dispenser. The first cup of water will be at 25°C even if the temperature set is to 98°C. This is normal.

WARNING! The water outlet may get very hot during use.

7. Now it is ready for use.

OPERATION


1. Place the appliance on a flat, solid, clean, dry and heat-resistance surface.
2. Make sure the water level is between “MIN” and “MAX” marks.
3. **IMPORTANT!** use only fresh water at room temperature without any additive, otherwise this can damage the appliance.
4. Connect the appliance into a mains power outlet.
5. Place a cup on the drip tray below the water outlet.
6. Press any key to illuminate the display panel.
7. Select the desired water temperature and volume that you need.
8. Unlock the appliance and dispense water. The water dispense indicator light will illuminate when dispensing water.

Note: The red alarm symbol will illuminate when the water in the tank is lower than the “MIN” mark or when the tank is not correctly fitted.

Note: The water dispensed may have a 5°C temperature difference due to small amount of cold water left in the heating chamber.

Note: A few drops of water after use from the outlet is normal.

Tip: The water may splash out when the cup used is too short. Use the second drip tray as shown to reduce the height from the water outlet on the dispenser.

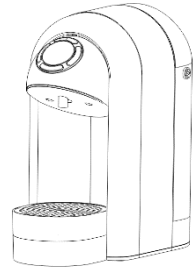

CLEANING & MAINTENANCE

CAUTION: Do not immerse the appliance in water or any other liquids!

IMPORTANT! Always disconnect the appliance from mains power when not in use. Empty the water tank and pour out the water in the appliance by turning the appliance upside down if the appliance is not used for a long time.

1. Always unplug the appliance from the mains power outlet before attempting any cleaning or maintenance.
2. Ensure that your appliance has completely cooled down before cleaning, as it may get very hot during and immediately after use.
3. Clean the appliance with a damp cloth or sponge. Wipe dry with a soft dry cloth. Do not use anything abrasive that can scratch or damage the appliance.
4. Wash the water tank and cover, drip tray with warm water.
5. Dry thoroughly.

STORAGE

1. Unplug the appliance from the mains power outlet.
2. Allow the appliance to cool down completely.
3. Empty the water tank and pour out the water in the appliance by turning the appliance upside down.
4. Clean and dry the appliance thoroughly.

WARNING! Do not wrap the power cord around the appliance.

5. Store the appliance in a cool dry location and out of the reach of children.

TECHNICAL SPECIFICATIONS

Voltage: 220-240Va.c. 50/60Hz

Power: 2000-2400W

Water tank capacity: 2.0L

TROUBLESHOOTING

Problem	Possible cause	Solution
The appliance does not work	The appliance is not plugged in.	Plug in the appliance into mains power.
	The appliance is locked.	Unlock the appliance by pressing “Unlock” key.
The appliance doesn't dispense water.	The water tank is not properly loaded.	Lock the water tank in place. Refer to instructions under the heading “BEFORE FIRST USE”.
	The appliance is locked.	Unlock the appliance by pressing “Unlock” key.
Rate of the dispenser is slow.	Impurities blocked the water inlet.	Clean the water inlet with a soft brush.
The temperature of hot water is low.	This is normal for the 1 st use.	Dispense 2 cups of water and discard. The water dispensed will be at the set temperature.
Alarm symbol shown.	There's not enough water in the tank	Add water to the water tank no higher than MAX level mark.
	The water temperature in the tank is too high or too low.	Use cold water at room temperature in the water tank.
Abnormal smell of water	Stale/additive water used.	Clean the water tank and water path with citric acid water following instructions under “CLEANING AND MAINTANENCE” then refill with fresh water at room temperature.

12 M12 MONTH WARRANTY

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at Kmart.com.au for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.