


Wooden Coffee Shop

PARTS LIST

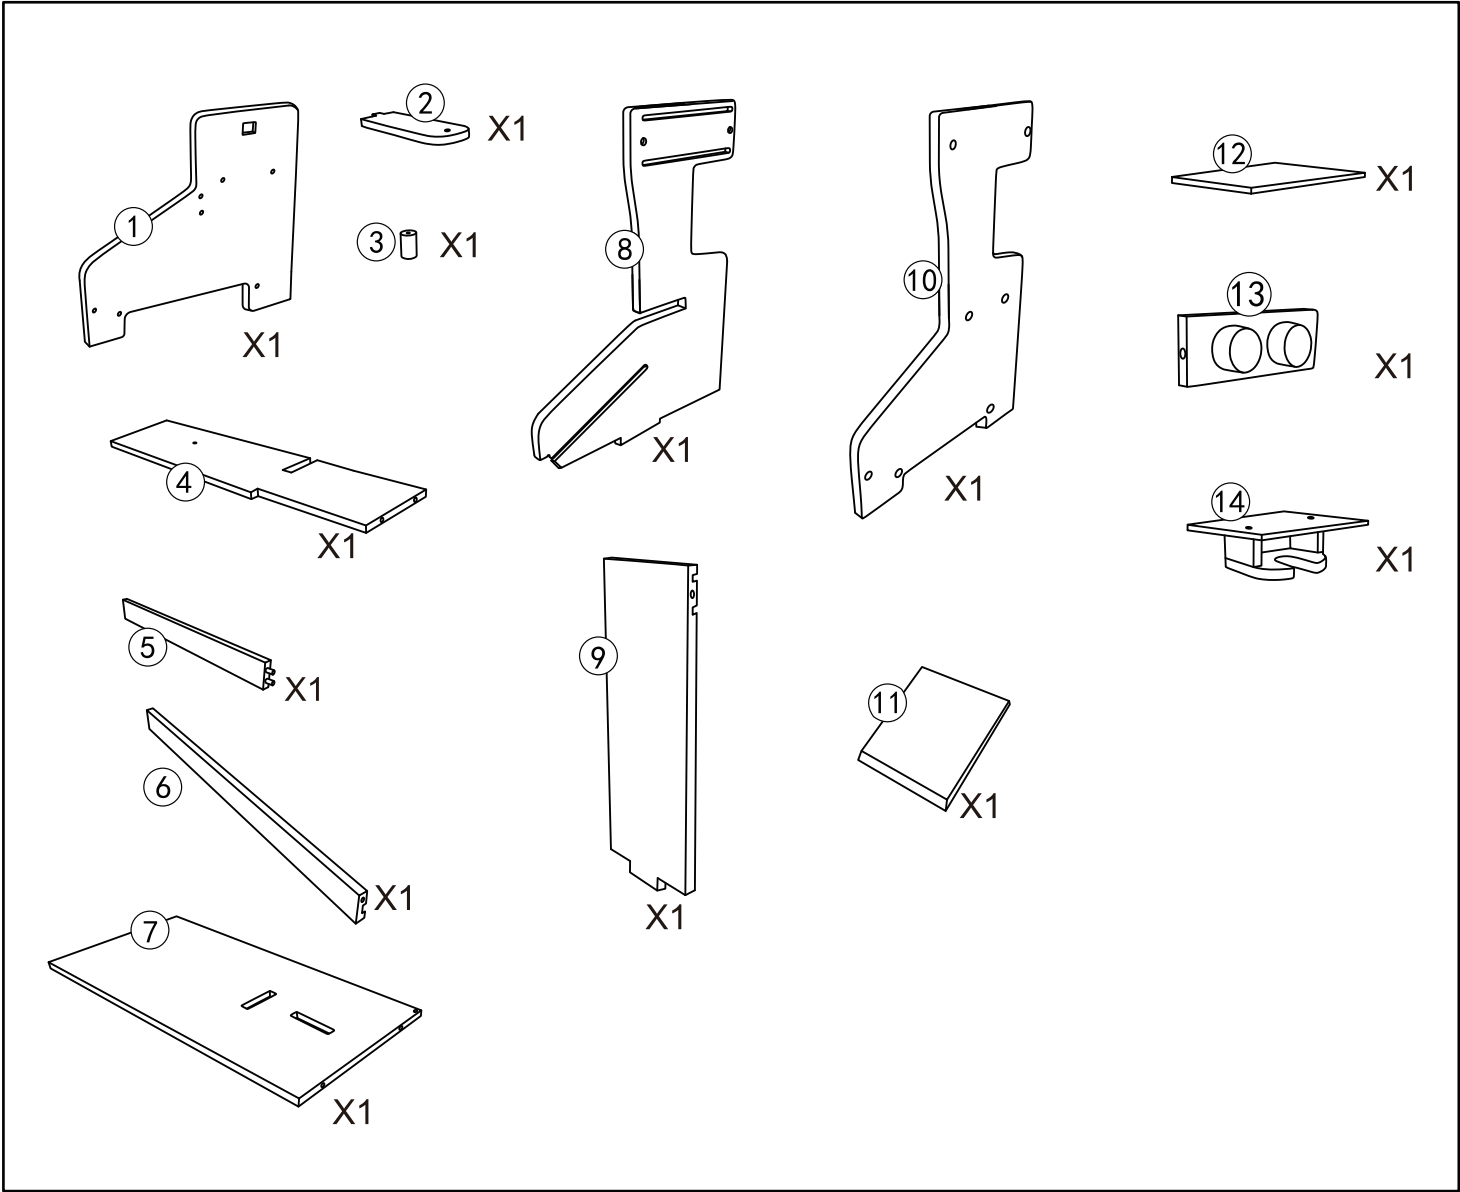


HARDWARE

A  X2


B  X14

Cross screwdriver
(not included) 


STEP 1

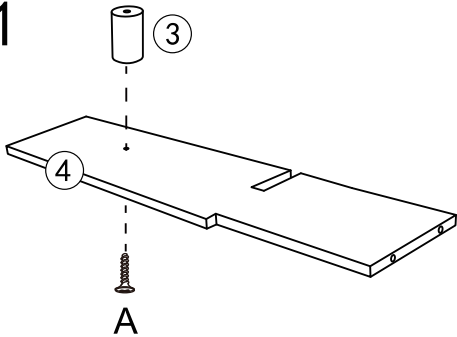


STEP 2

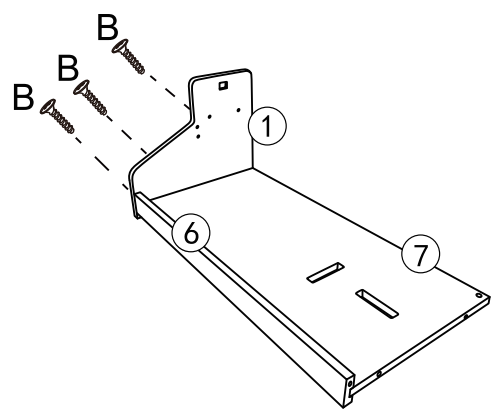


STEP 3

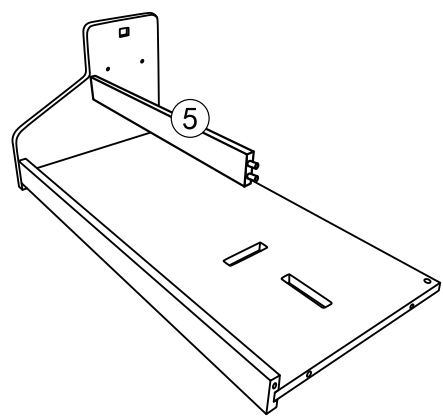


STEP 4

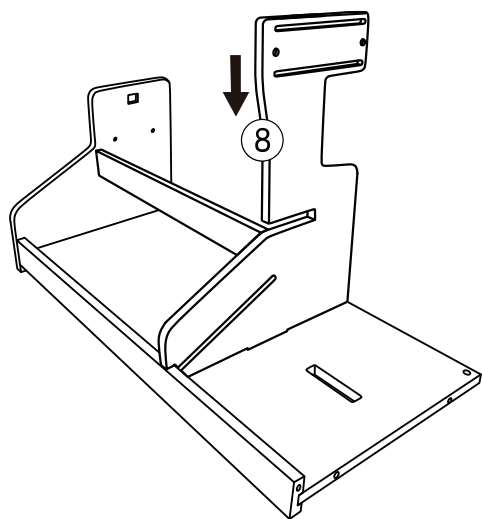


STEP 5

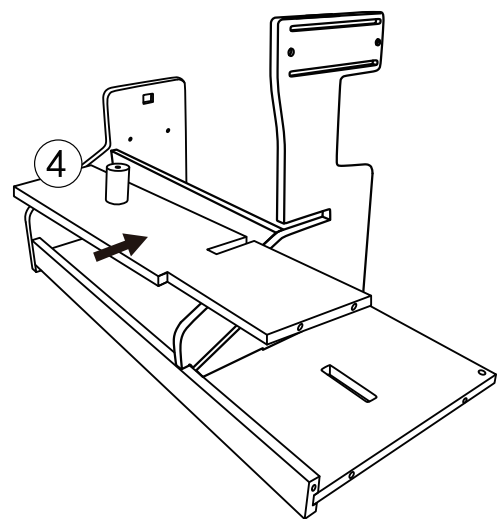


STEP 6

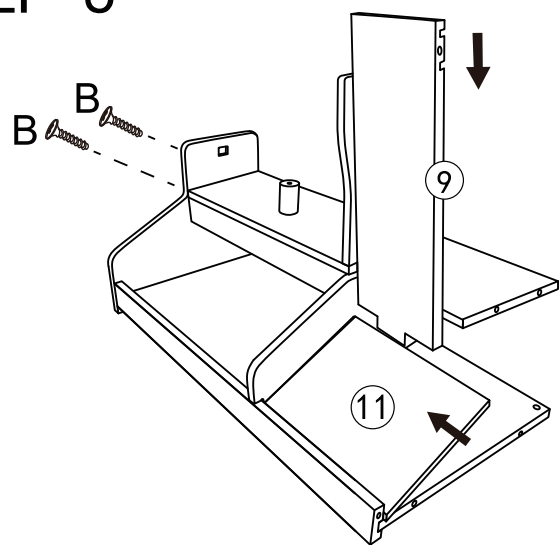


STEP 7

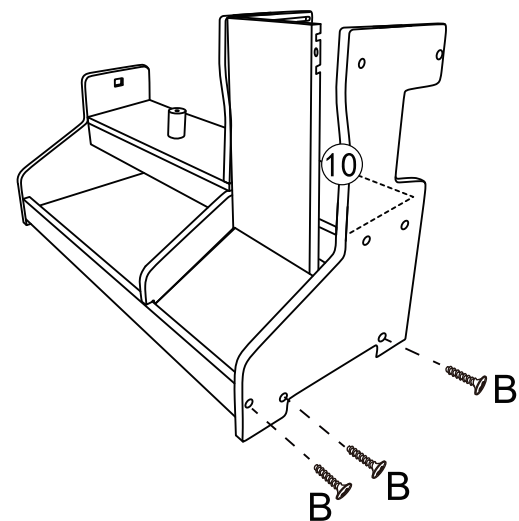



STEP 8

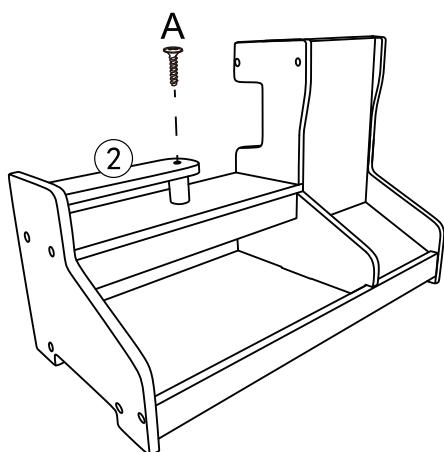

STEP 9

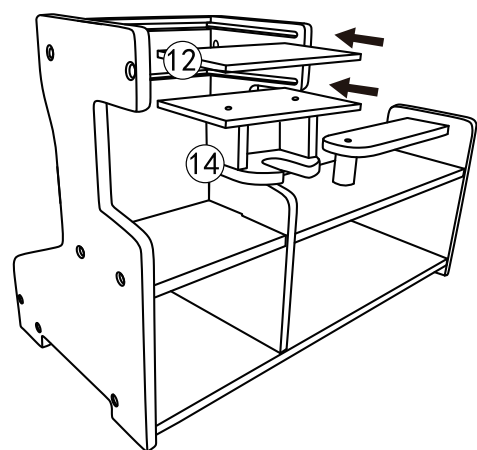

STEP 10

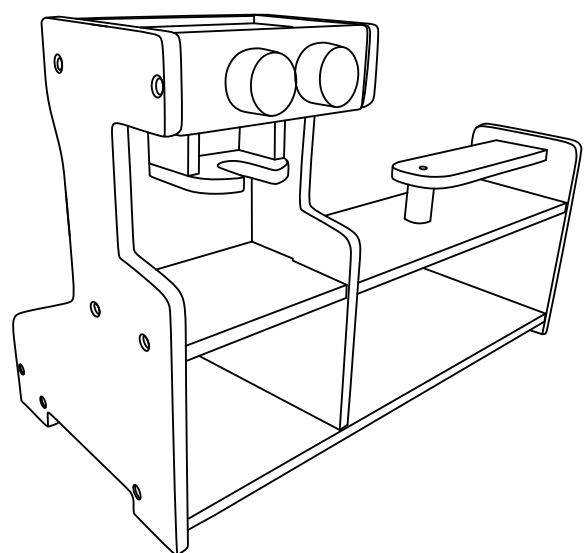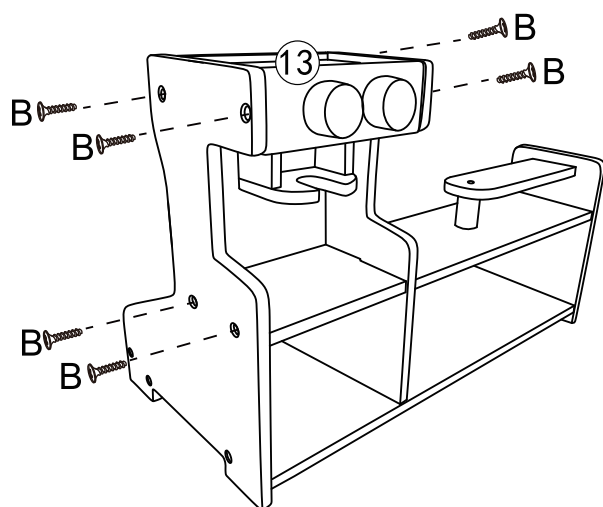

Assembly Instructions

- Check all components are present before assembling.
 - The toy requires adult assembly.
 - In unassembled state, product contains hardware with sharp points.
- Keep unassembled parts out of reach of small children.
Cross screwdriver(not included) is required for assembly.
Dispose of all packing materials carefully after assembly.

Maintenance

- Inspect the product before assembly and periodically during use.
Never use this product if there is any loose or missing fasteners, points or broken parts.
Regularly check that all fittings remain tight.Tighten if required.

Keycode: 42903369
MADE IN CHINA
© KMART AUSTRALIA LIMITED