

 
风琴折 成型尺寸: 120x120mm 材质: 128g双铜双面印刷



# Instruction Manual



**42959588**  
**GAMING KEYBOARD W ARMREST**

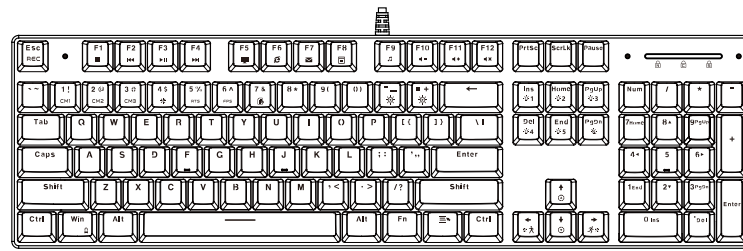

### Keyboard Specification:

Interface Type: USB  
Size: 433\*124.5\*35mm  
Operating Voltage: 5V  
Operating Current: 400mA  
Cable length: 1500mm  
Supports Windows Vista/7/8/10

 
Arm rest

Ultra-large wrist rest, easy to disassemble which can give you a comfortable support and DIY the keyboard.


## How to install arm rest



Step 1: First to insert the pin into the hole in one side

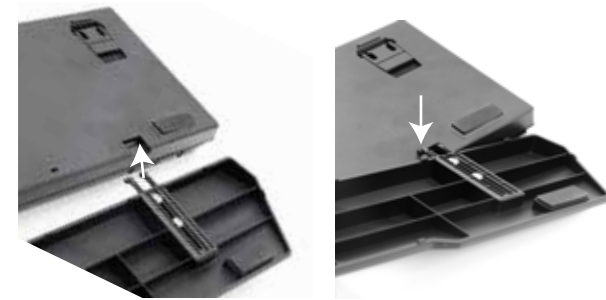

 Step 2: Pinch the pin then insert it into the hole to complete the installation

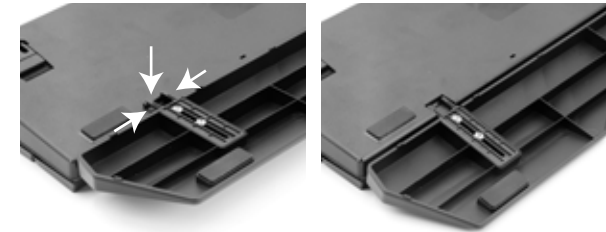

Step 3: Press arm rest downward in the direction of the arrow to remove it










## How to use


1. Turn on your computer.
2. Insert the USB interface of keyboard into a USB port of your computer (better choose the USB port locating on the back of the chassis instead of those on the front)
3. Wait for 1 minute, and your keyboard will automatically read by your computer with no extra driver needed.

(Note: This is a plug & play keyboard no need of any driver.)

Status Indicator: "Caps Lock", "WIN"

### LED Backlit Adjustment:

- 1.FN+  :4 Lighting modes switch
- 2.FN+  :4 Lighting modes switch
- 3.FN+  :4 Lighting modes switch
- 4.FN+  :4 Lighting modes switch
- 5.FN+  :4 Lighting modes switch
- 6.FN+  :Turn on/off the backlight
- 7.FN+  :Turn on the backlight mode

FN+  : Backlit brightness increasing, there are 5 grades of backlight brightness.

FN+ : Backlit brightness decreasing, there are 5 grades of backlight brightness include 1 grade to turn it off.

FN+ : Backlit movement speed increasing, there are 5 grades of backlight movement speeds.

FN+: Backlit movement speed decreasing, there are 5 grades of backlight movement speeds.

Reset Mode: Press FN+  first, then press , , 


### Backlight recording

FN+  /  /  : Three groups of custom backlights

A.Backlight recording method is as follows:

Press FN+  to start the backlight definition for CM1 and press FN+  to enter recording

mode, the "Win" key will keep flashing, then you can choose the key you want to light. When

finishing, press FN+  to save recording, and the other two groups operate similarly.

B. When in recording mode, the keyboard can not be used for other functions

C. The two function lights of Caps Lock、Windows can not be recorded

## Office mode:













Press “FN+  ”light up backlit of the keys--Q W E R T Y U I O P A S D F G H J K L Z X C V B N M.

Gaming mode:

A: Game mode 1: (RTS) - Press “FN+  ” light up backlit of the keys --Q W E R A S D F B CTRL-L 1 2 3 4 5 6.

B: Game mode 2:(FPS)- Press “FN+  ” light up backlit of the keys--A S D W “↑” “↓” “←” “→”.

### Keyboard lock function

FN+  : Stop	FN+  : Previous Song	FN+  : Play/Pause
FN+  : Next Song	FN+  : My computer	FN+  : Web/Home
FN+  : Email	FN+  : Calculator	FN+  : Music player
FN+  : Volume -	FN+  : Volume +	FN+  : Mute

### Keyboard lock function

FN +  Lock the WIN key during playing game (The WIN key lights out after locking).

Troubleshooting steps:

1. Insert the USB cable into another USB port of the computer.
2. If you were using a USB hub, try to connect the keyboard directly with your computer.
3. It would be better to plug it into USB ports locating on the back of the chassis instead of those on the front
4. Check USB hub for foreign objects or dust
5. Unplug and reinsert the USB connector
6. Restart the computer.