

FACIAL CLEANSER MODEL: TB-1766

USER MANUAL



PLEASE READ AND SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE

SAFETY INSTRUCTIONS

To ensure proper operation of this device, please read this instruction manual carefully before using the device and keep it for further reference.

♠ WARNING!

- This device is not a toy, keep out of reach of children.
- Please ensure the product is not damaged before use. Do not use if there is any damage.
- Please keep the USB cable and the device charging port clean and dry.
- IMPORTNT! Do not use the device while charging.
- IMPORTANT! The following persons should not use this device: pregnant women or while nursing; persons with allergies; persons with facial nerve disorders; persons who have fractures or implants with metal, silicone, or plastic; persons with open wounds, chapped or swollen skin on the area of use; persons with severe skin diseases on the face, etc. If unsure, please seek medical advice prior to use of this product.
- This device is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the device by a person responsible for their safety.
- Immediately stop using the device and consult a doctor if you feel any discomfort.
- Keep the device out of reach of children.
- Regularly clean the device and the accessories to extend its lifetime.
- Do not share the same device with others.
- Do not attempt to disassemble, repair or modify the device by yourself to avoid accidents.
- Remove any jewelry/accessories and tie your hair when using the device, to prevent hair and jewelry from interfering with the device.
- This device has a lithium battery. Do not place or store the device for long periods in hot or humid environment. If you do not intend to use the device for a long time, store it after it is fully charged. Do not throw the


device into a fire or put it in the general household waste. Please dispose of the device responsibly at your local recycling facility.

- WARNING: Do not recharge non-rechargeable h batteries.
- WARNING: For electrical safety, before charging the product make sure your hands are dry.

SPECIFICATIONS

Input: 5V === /0.5A Type of Battery: Li-ion 3.7V 800mAh Charging time: 4hrs

Working time: 2hrs

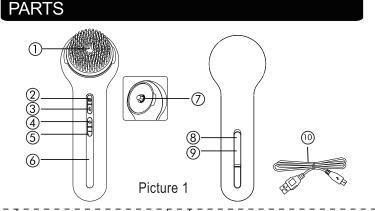

1 Cleansing brush	¦ 6	Charging indicator/ Speed indicator
2 ON/OFF switch	. 7 . 7	Brush connecting shaft
3 Direction button	8 ا	Silicone cover
4 Speed increase button +	9	Charging port (under cover)
5 Speed decrease button -	10	USB charging cable

CHARGING THE DEVICE

Charge the device before use.

- Make sure the device is turned OFF.
- Insert the USB cable into the USB charging port, then connected the • USB charging cable into a USB power source (DC 5V 500mA power

While charging, the charging indicator lights up in a cycle. When the battery is fully charged, all the charging indicator levels light up.

• Charging the device takes approximately 4 hours. When the battery is fully charged, the device can be used consecutively for approximately 120 minutes.

FEATURES

Turn ON and OFF the device: Press the ON/OFF switch to turn ON the device, press again to turn OFF the device.

Change Rotation Direction: With the device turned ON, press the direction rotation button to switch the cleansing brush direction to clockwise or counter-clockwise.

 
Adjust the Speed Intensity: Press the speed increase or decrease button to adjust the speed intensity. This device has a total of 6-speed settings.

 
Note: This device has a memory function. When you turn on the device, it automatically turns on the speed intensity used in the last session.

HOW TO USE

Attach Brush head

- To install the brush: Align the brush with the connection shaft on the device body and firmly press it until it locks the position with a click.
- **To remove:** Hold the device and gently pull it from the device body.





Picture 2

- · Cleansing Brush is made of soft bristles, it gently cleanses the skin. Suitable for normal, dry, and sensitive skin.
- Worn brushes may cause irritation on your skin; for better cleaning and a safer effect, it is recommended to replace the brush regularly (depending on use and wear and tear on the brush).

Cleaning the face

- Install the brush. Moisten the face and brush with water.
- Apply cleansing gel/cream to the palm of one hand, wet it with water, with the other hand hold the device and rub the brush on the cleansing gel/cream to form a foam.
- Apply the foam to the face, press the power button to turn on the device. Gently move the brush in a circular motion from inside to outside of the face. Do not press the brush hard against your skin.
- Recommended cleaning area, order and using time: T-zone (forehead, nose) 15s \rightarrow left and right cheeks 15s each (total 30s) \rightarrow chin 15s \rightarrow neck 20s. (refer to Picture 3)
- This device features an 80s auto-off function. After you turn on the device, it will pause for 0.5s at 15s-30s-45s-60s to remind you to change the cleaning area.







Picture 3

- After your cleansing routine is complete, turn off the device, rinse your face with water, and apply your daily skincare products.
- After each use, wash the brush and the device's surface.

CLEANGIN AND MAINTENANCE

Before and after each single use, please clean the device body and

- brush to ensure best performance from the device. Turn off device before you start cleaning.
- Clean the device under running water and dry it with a clean cloth. You can also clean the surface of the device with a clean slightly

Do not immerse the device in water

☆ ├ When cleaning the brush, do not immerse it in water that is higher than 40°C to avoid brush deformation.

BATTERY DISPOSAL

If the facial cleaner is to be disposed the batteries should be removed from the appliance before it is scrapped. The device must be disconnected from USB power when removing the battery. The battery should be disposed safely. Used batteries should be taken to a recycling facility and not disposed with normal household waste.

IMPORTANT: Always fully discharge the batteries before removal and ensure the USB charging cable is disconnected from power.

TROUBLE SHOOTING

Problem	Possible Cause	Solution		
The device does not work properly.	The battery is running low or out of power.	Charge the device for 4 hours.		
Abnormal Noise.	The brush not installed incorrectly.	Turn OFF the device and install the brush correctly.		
The charging indicator does not light up.	The USB cable is not plugged correctly.	Insert the USB cable correctly into a suitable USB power source.		

Note: If the device still does not work properly after going through the above solutions, please stop using the device and contact Kmart for replacement or refund

12 Month Warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at Kmart.com.au for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

名称	TB-1733 说明书		XX		
下只	460*170mm	TO	UCH Beauty	审核	GRC
材质	80G书写纸	订单包材			
工艺	无	订单编号	GRC200310303	日期	2020/10/28
颜色	双面单黑印刷		单位	设计	杨 婷
其他	风琴3折 成品尺寸:115*170MM		毫米	料号	64.17330.0009