

INSTRUCTION MANUAL

42976592

Black

[KMT081]

5107_MAN_42976592_M9 Speaker_v14

Artwork Proof Date: 03.12.2020

PAPER:

80gsm

Bright white uncoated paper

PRINT COLOURS:

BLACK

C:0 M:0
Y:0 K:100

PRINT FINISH:

Double sided

Folded in the centre



CHANGE LOG CREST INTERNAL USE ONLY

ARTWORK SHOULD NOT BE AMENDED WITHOUT PRIOR AGREEMENT FROM CREST.
ALL ARTWORK MUST BE APPROVED BY CREST PRIOR TO MASS PRODUCTION.

IF THERE ARE QUERIES ABOUT THIS ARTWORK PLEASE CONTACT:
EMAIL: design@crest.com.au

THANK-YOU.

anko

Bluetooth® Portable Pro Mini Speaker Operating Instructions



- Includes:
- ▶ Bluetooth® portable pro mini speaker
 - ▶ charging cable (micro USB cable)
 - ▶ audio cable (3.5mm AUX cable)
 - ▶ hand strap
 - ▶ user manual



42-976-592

Bluetooth name is KM42976592

12 month warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with the accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on **1800 124 125 (Australia)** or **0800 945 995 (New Zealand)** or alternatively, via Customer Help at **kmart.com.au** for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.


For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

WARNING Do not dispose of unit in fire or water. ▶ Never attempt to disassemble and reassemble. ▶ Waste electrical products should not be disposed of with household waste, please recycle where facilities exist. ▶ Check with your local authority for recycle advice. ▶ Keep your device and all accessories out of the reach of children and animals. ▶ Small parts may cause choking or serious injury if swallowed. ▶ Avoid exposing your device to very cold or very hot temperatures (below 0°C or above 45°C). ▶ Extreme temperatures can cause deforming of the device and reduce the charging capacity and life of your device. ▶ Do not allow your device to get wet—liquids can cause serious damage. ▶ Do not handle your device with wet hands.

148.5mm

This product shall be supplied by a power source not exceeding PS1 only. ▶ This Bluetooth Speaker shall be charged by the supplied charging unit only.
CAUTION ▶ The batteries in this product are not replaceable. ▶ During Use, Storage or Transportation the battery should not be subjected to extremely low temperatures, or low air pressure at high altitude. ▶ If the battery is exposed to extremely high temperatures it could result in an explosion or the leaking of flammable liquid or gas. ▶ Please take care when disposing of the unit; disposal in a fire, oven, mechanically crushing or cutting machine could result in the battery exploding.

Function overview:

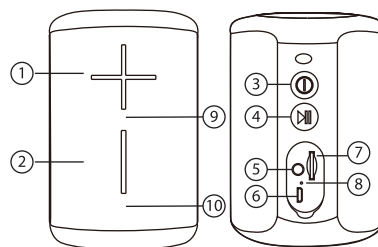

1. Volume Up/Next Song
2. Volume Down/Previous Song
3. Power ON/OFF or TWS Mode
4. Play/Pause
5. AUX-IN Port
6. Micro USB Charging Port
7. TF Card Slot
8. Charging Indicator
9. Microphone
10. LED Indicator

How to use this speaker:

Function Operation

Pause Press ▶|| button

Play Press ▶|| button

Next Song Press and hold + key once to skip the track.

Previous Song Press and hold - key once to skip the track.

Volume Up Press + key to increase the volume

Volume Down Press - to decrease the volume

Power ON/OFF Press and hold ⏻ button

TWS Pairing Double press ⏻ button

Bluetooth Pairing

▶ Press and hold the Power button until the LED indicator flashes rapidly, indicating it is ready to pair with a Bluetooth device.

▶ In the Bluetooth menu on your device, search for "KM42976592" and connect. Type Password "0000" or "1234" if password is requested.

▶ Once the Speaker is successfully paired and connected, the indicator will remain on and you can now play music through the speaker. When playing music, the indicator will flash slowly.

AUX Function

▶ Use a 3.5mm audio cable to connect your device through the AUX-IN port. Choose the music from your media device and play.

TF Card Play

▶ Insert a TF Card into the TF Card slot, the speaker will play music automatically from the TF card.

Receiving and Ending Calls

▶ When there is an incoming call, the unit will pause the playback and ring to alert you of the call. To answer/hang up the call, press the Play/Pause button. To reject the call, press and hold the Play/Pause button.

Specifications:

Model No:
42976592

Version:
V5.0 Multimedia Bluetooth chipset

Working Distance:
10 Meters

Output:
2 x 6W

Music Time:
2.5 hours at 100% volume

5 hours at 50% volume

Talk Time:
4.5 Hours

Standby Time:
10 Hours

Charging Voltage:
5V d.c.

Charge Time:
1 Hour

Splash Proof:
IPX5

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth® SIG, Inc., and any use of such marks by KMART AUSTRALIA is under licence.



105mm