

# TEE PEE PLAY TENT ASSEMBLY INSTRUCTIONS


---

A. Top pole 4 pcs




A

D. Tee Pee fabric 1pce.

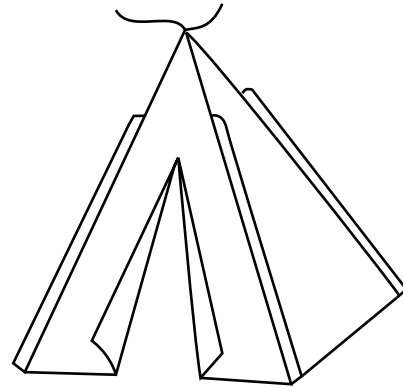

D

 B/C. Bottom pole with Plastic connectors 4 pcs



B

C

E. String cord 1pce.



E


PLEASE READ ALL INSTRUCTIONS CAREFULLY. ENSURE YOU HAVE ALL PARTS BEFORE STARTING TO ASSEMBLE THE TEE PEE PLAY TENT.

WARNING: KEEP AWAY FROM ALL FLAME AND HEAT SOURCES.  
NOT INTENDED TO BE USED AS A RECREATIONAL TENT.  
FOR PLAY PURPOSES ONLY.  
ADULT SUPERVISION RECOMMENDED FOR YOUNG CHILDREN.


- 1) Insert the Top Pole (A) into the plastic connectors (B) like below.




- 4) Pull the string taut. With the string attached to the tent, tie this around the white pole in between the second and third pole.

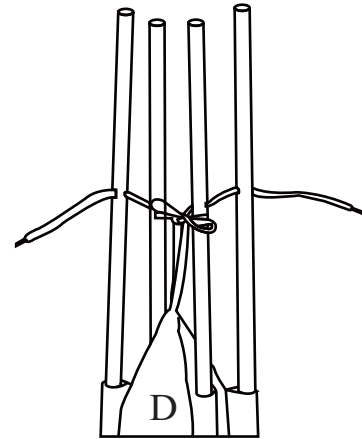


- 2) Slide poles into sleeves of the teepee fabric, one by one making sure that the holes are positioned at the top of the teepee.

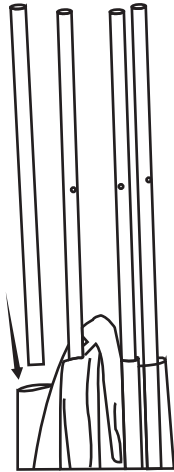


- 5) Spread the bottom corners out until they are fully extended.

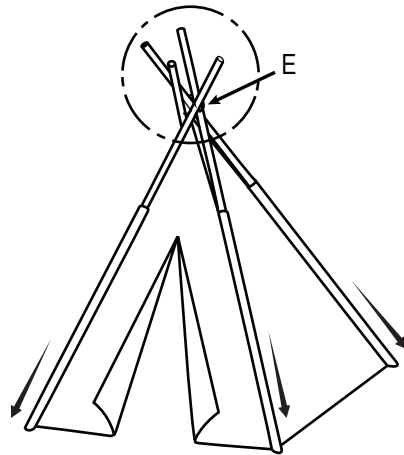

- 3) With the white loose string, loop through each holes in order.

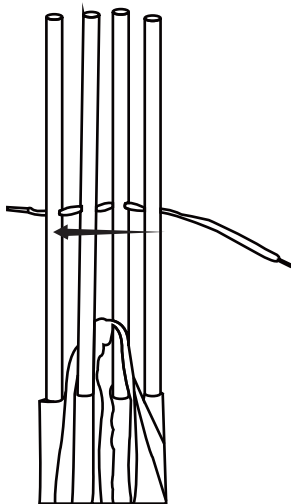

- 6) Last tie the white string into a knot to secure poles.

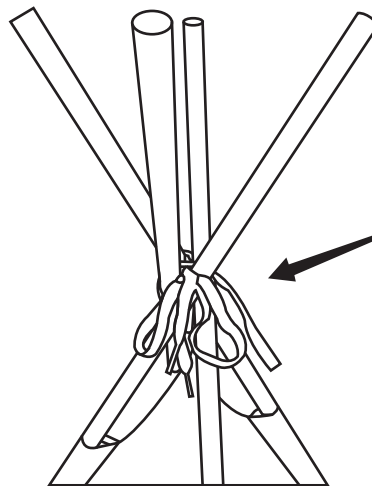

- ①. Pinch a bow on left and right side.
- ②. Pull the 2 bow cross.
- ③. Pull and Pluck. Pull the long side over the bow and then pluck both sides of the bow together.
- ④. Tie tension in avoid the bow loosen.

