











Assembly Instructions


42983682 Sport Storage Unit

PART LISTS

 <p>AX2</p>	 <p>BX2</p>	 <p>CX2</p>	 <p>DX2</p> <p> J (washer) x4</p>	 <p>G</p>
			 <p>EX 10</p>	 <p>H</p>
			 <p>F X 2</p>	 <p>I X28</p>


ASSEMBLY

Step 1, connect Part A with Part B, Part C

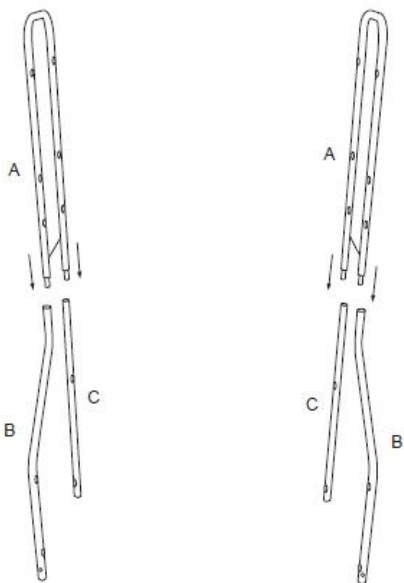


1.

Step 2, insert E tube into Part G, H.

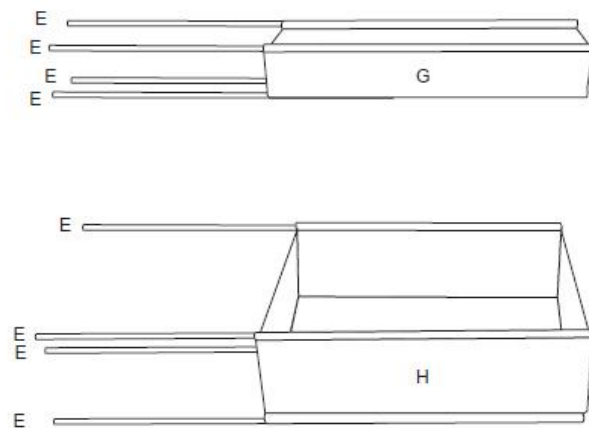

2.

Step 3, use screw I to connect Tube E, F to Part A, B, C. Use Screw I and Washer J to connect tube D and F. Washer J applies to outside of Tube D. **IMPORTANT: DO NOT FULLY TIGHTEN SCREWS UNTILL ALL TUBES CONNECTED.**

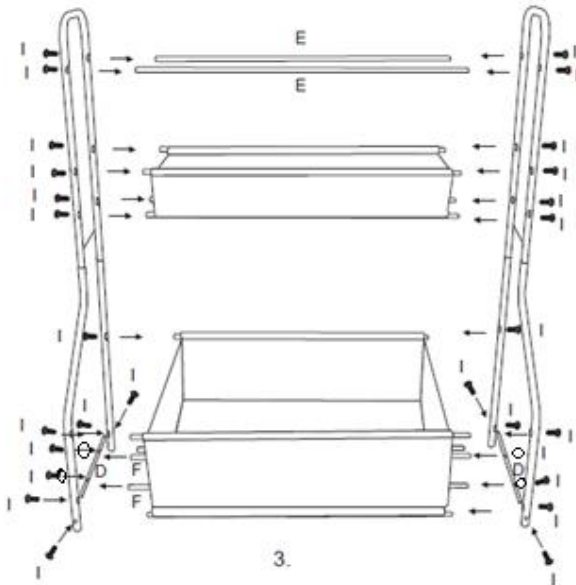

WARNING: DO NOT STAND OR SIT ON THIS CUBE UNIT. DO NOT CLIMB. DO NOT USE UNTIL ALL JOINTS ARE FIRMLY SECURED. USE ONLY ON A FLAT SURFACE. DO NOT DRAG WHEN MOVING THE PRODUCT TO AVOID DAMAGING THE JOINTS. MAXIMUM SAFE LOAD WEIGHT -TOP SHELF 3kg. MIDDLE COMPARTMENT 5kg. BOTTOM COMPARTMENT 10kg.