



Instruction manual



42991014

Gaming Desktop PC Soundbar with RGB

Please read the instruction manual before using this device and follow all the safety instructions to avoid damage caused by improper use.

1. Keep the instruction manual for future reference. Should this device be given to a third party, then this instruction manual must also be handed over.
2. Use this device solely for its intended purpose.
3. Only use this appliance indoors.
4. Keep the appliance away from all hot surfaces and naked flames.
5. Always put the appliance on a level, stable, clean, dry surface. Protect the appliance from extreme heat and cold, dust, direct sunlight, humidity and drops or jets of water.
6. Do not immerse the appliance in water or in other liquids.
7. Do not open the housing under any circumstances.
8. Do not introduce any objects into the interior of the housing.
9. Should the device malfunction due to electrostatic discharge or a short power surge, disconnect it from your computer and then reconnect it again.


Production structure

Audio Jack

USB connector

Volume knob

Light Touch-control

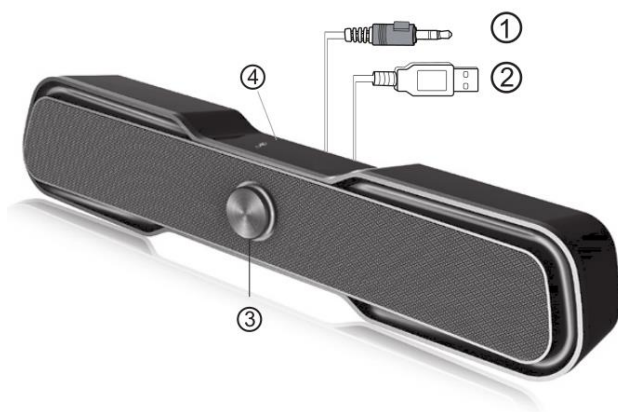

Specifications

Output power: 3W*2

Speaker: 2inch*2

Frequency response: 300Hz-20KHz

Impedance: 4Ω

Power input: DC 5V/1A


Size: 440*83*88mm

Cable length: 1.2m

Connectors: 3.5mm (Audio) & USB(Power)

How to use:

- Connect the audio jack (1.) to the line-out connector on the sound card.
- Insert the USB connector (2.) into a USB port on your PC
- Turn the volume knob (3) to turn on / increase / decrease the volume.
- Touch the top of the speaker to enable or disable the backlight. (4)

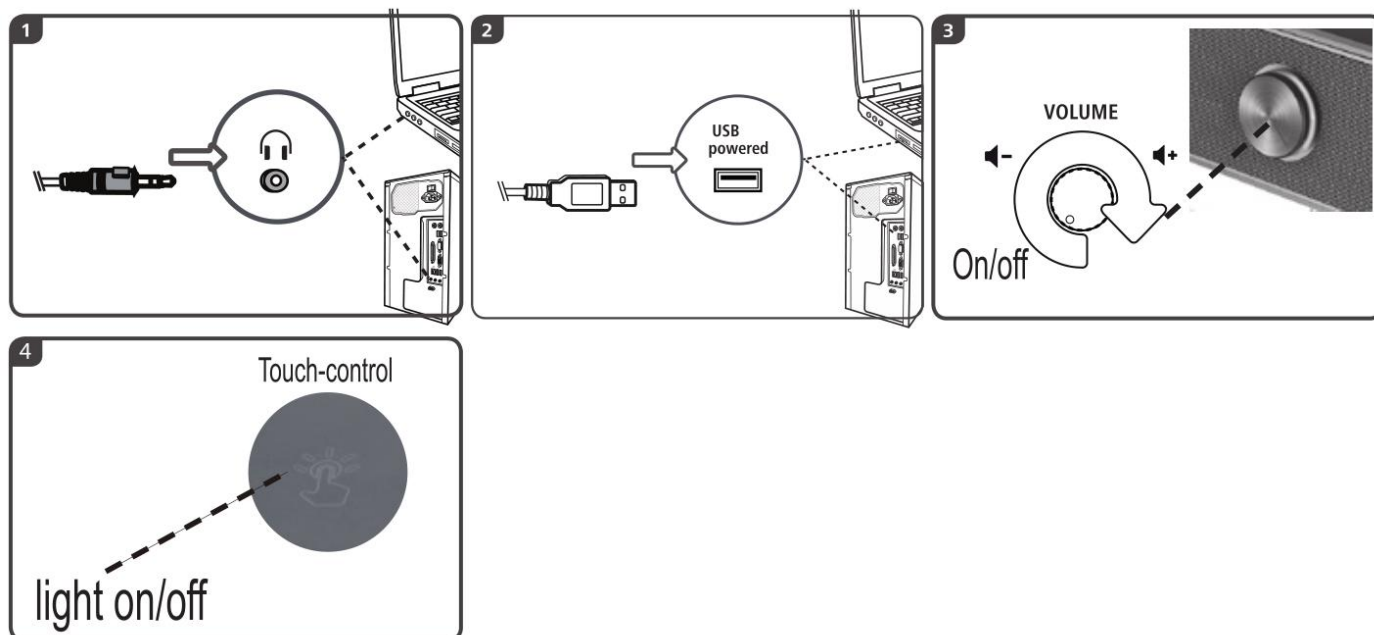

12 Month Warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or

instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at [Kmart.com.au](https://www.kmart.com.au) for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.