

INSTRUCTIONS:

1. UNSCREW THE LID OF YOUR WATER BRUSH PEN.
2. FILL WITH WATER AND SCREW THE LID ON TIGHTLY.
3. PRESS THE WATER PEN DOWN ON YOUR SELECTED WATER ART SCENE TO RELEASE THE WATER.
4. MOVE THE WATER BRUSH PEN OVER THE SCENE AND COLOUR USING THE WATER. YOUR SCENE WILL NOW APPEAR.

