

anko

Mini Dehumidifier User Manual

Read and Save These Instructions



Note: The specifications and/or components of this appliance are subject to change without prior notice

Model No.: EPI608J
Rev 3

1	Safety Instructions	3
2	Features	5
3	Components	5
4	Preparation	6
5	Operation	7
5.1	ON / OFF	7
5.2	Water Collection Tank Full	8
6	Care and Cleaning	9
6.1	Water Collection Tank.....	9
6.2	Main Unit	9
7	Storage	9
8	Specification	10
9	Warranty Against Defect	11

1 Safety Instructions

When using electrical appliances, basic safety precautions should always be followed, including the following:



- Carefully read this instruction manual before using the appliance.
- Keep the appliance out of reach of young children.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Ensure children and babies do not play with plastic bags or any packaging materials.
- Do Not disassemble the appliance. There are no user-serviceable parts inside.
- **VERY IMPORTANT:**
Ensure that the appliance does not get wet (water splashes etc.). Do not use the appliance with wet hands.
- Do not immerse the appliance in water or other liquids or use near sinks, baths or showers.
- This appliance is not intended for use in bathrooms, laundry rooms or any other areas where the appliance may get wet or splashed with water or liquids.
- Always operate the appliance from a power source of the same voltage, frequency and rating as indicated on the product identification plate.
- Position the power supply lead properly so that they will not be walked on or pinched by items placed on or against them.
- Use the appliance only for its intended use. The appliance is intended for household use only and not for commercial or industrial use.
- Do not use the appliance if it has been dropped or any part of the appliance (including cord or plug) has been damaged. Take the appliance to your nearest authorised service centre or qualified dealer for inspection or repair.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons to avoid a hazard.
- Use only accessories supplied with the product. The use of accessories not intended for use with this appliance may cause injuries to the user or damage to the appliance.
- Do not install the unit on other appliances, on uneven surfaces or where it could be subject to heat sources (e.g., radiators or stoves), direct sunlight, excessive dust or mechanical vibrations.
- Appliance should not be used outdoors, placed near a hot gas or electrical burner or placed in a heated oven.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus that produce heat.

- Do not operate the appliance underneath or near flammable or combustible materials (e.g., curtains). Keep at least 300mm clearance around the sides, back, front and top.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Do not block any ventilation openings.
- Unplug the appliance before filling or cleaning.
- Any repairs to the product must be carried out by a qualified electrical person only or the product must be disposed of. There are no user-serviceable parts in this appliance.
- If this appliance is used by a third party, please supply the instruction manual with it.
- Do not misuse the cord. Never carry the appliance by the cord or pull it to disconnect it from the outlet. Instead, grasp the plug and pull to disconnect.
- Do not insert or allow foreign objects to enter the grille openings as this may cause damage to the appliance and/or injury to the user.
- Be sure the unit is placed on a stable surface when operating.
- Turn off and unplug the unit before moving. Move the unit slowly and carefully.
- Turn off, unplug and empty the water from the unit if you are not going to use it for a long time.
- No liability can be accepted for any damage caused by non-compliance with these instructions or any other improper use or mishandling of the appliance.

Additional Safety Instructions

WARNING



Only use the Power Supply which was supplied with this appliance.

Model No. GQ48-120500-E3, 100–240V~ 50/60Hz 1.5A Max, Output: 12.0V === 5A

If using an extension cord:


- The technical specifications of the extension cord must match or exceed the technical specifications of this appliance.
- Do not allow the cord to hang over the edge of the work surface or to come into contact with stoves or other hot surfaces.
- If the cord or plugs are worn or damaged, do not use them.
- Unplug from the power socket by grasping the plug body - Do Not pull on the cord.

Read and Save These Instructions

2 Features

- For use in small rooms only.
- Cooling created by Thermo-electric Peltier module (no compressor).
- Coloured LED Indicator Lights.
- Easy operation, automatically switches off when the tank is full.
- Silent operation.
- Compact size, light and portable.
- DC 12V adaptor for power supply.
- Removable Water Collection Tank.

3 Components

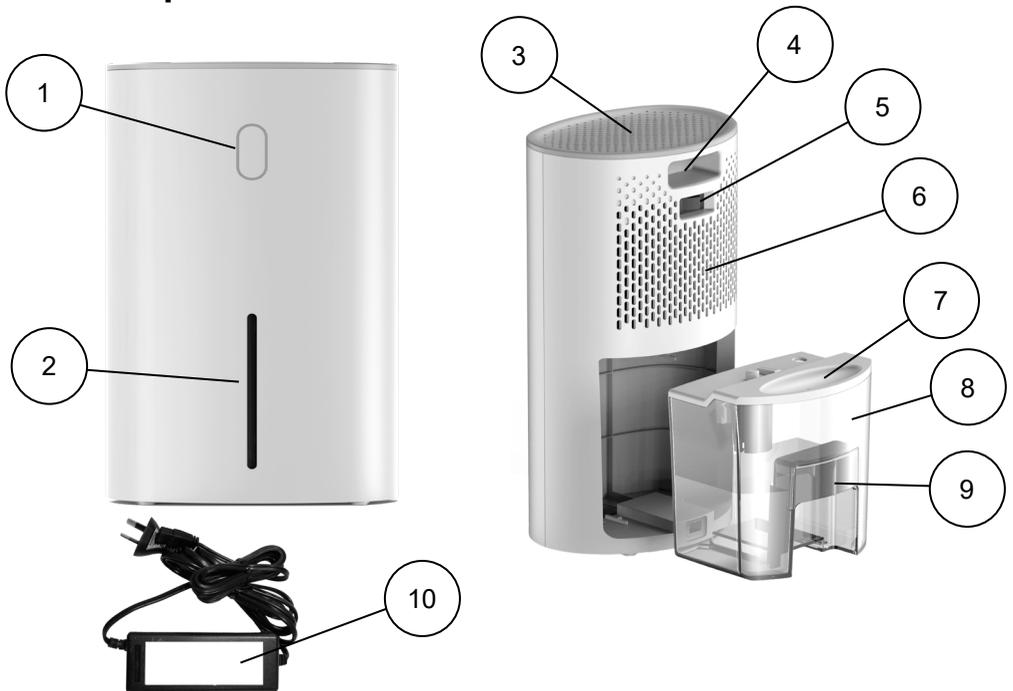


1	LED Indicator Light	6	Rear Vent
2	Water Level Window	7	Water Collection Tank Lid
3	Top Vent	8	Water Collection Tank
4	Carry Handle	9	Water Collection Tank Handle
5	On / Off Switch	10	Power Supply: GQ48-120500-E3

4 Preparation

- Before using the Dehumidifier, please set it up as follows:
- Fully unravel the power supply cords.
- Plug the small (low voltage side) plug into the back of the dehumidifier and push in hard as shown.



- Fit the Lid to the Water Collection Tank and slide into the back of the unit.

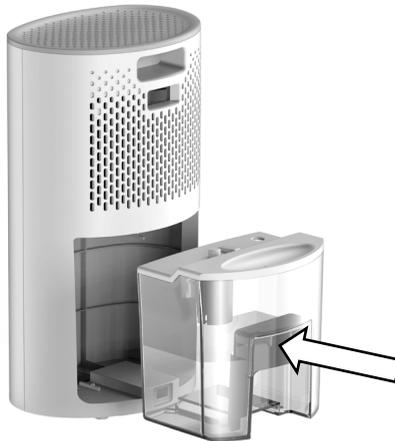

Note: Unless the water collection tank lid is fitted to the water collection tank, and the water collection tank is fitted correctly to the unit, the appliance will not turn on.


5 Operation

Important: Refer to the Section “Preparation” before Operation.

- Plug the Power Supply into the Power Point and switch on.


5.1 ON / OFF

- Located at the back of the appliance, just below the carry handle is the On / Off switch.
- Switch to the On “-“ Position and the unit will start to work.

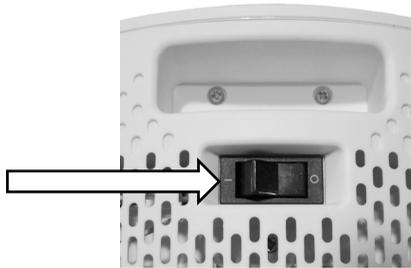


Note: Switch is shown in the Off “O” position.

- This will be indicated by the indicator light on the front of the unit illuminating Green.

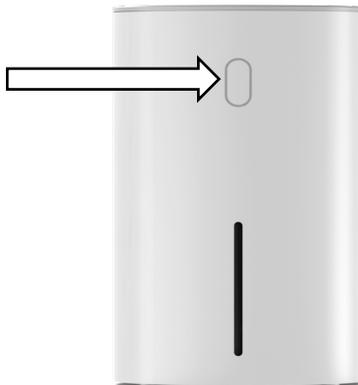

Note: If the water tank is full of water, the indicator light will illuminate Red, and the appliance will no longer function until the tank is emptied.

To turn the unit off, switch the On / Off switch to the “O” off position.

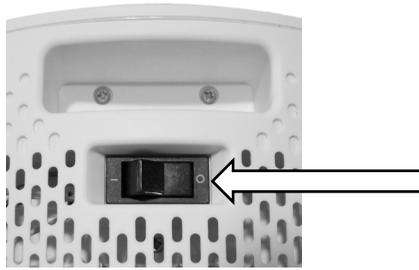

5.2 Water Collection Tank Full

Note: The Water Level Window in the front of the unit is for easy viewing of the water level in the collection tank.

- When the water level reaches close to the top, it is time to empty the tank, or, if you allow the water collection tank to fill up, the water level switch will activate preventing the unit from producing more water, and the indicator light on the front of the unit will illuminate Red.
- To empty the Water Collection Tank, first switch off the unit at the back, then switch off and unplug the power supply from the power point.
- Grasp the Water collection tank handle and slide straight out, taking care not to spill the water.



- Take to your sink and pour out, then refit the tank.

6 Care and Cleaning

- Turn off and unplug the unit from mains power before cleaning.

6.1 Water Collection Tank

- Remove the Water Collection Tank and lid, and wash in clean lukewarm soapy water and rinse thoroughly.
- Allow to fully dry before reusing.
- Do Not place in a Dishwasher.

6.2 Main Unit

IMPORTANT: Never spray with liquids or submerge the unit in water or any other liquid.

Do Not use flammable liquids, chemicals, abrasive creams, steel wool or scouring pads for cleaning.

- Wipe the unit over with a damp (not wet) cloth with fresh clean lukewarm water and mild detergent.
- Wipe over again to remove any detergent residue and thoroughly dry before reusing.
- Do not let the power socket in the back get wet or splashed. Ensure the socket is perfectly dry before inserting the power supply plug.
- If the Vent holes are dusty, you can use a vacuum cleaner with a “non-rotating” brush attachment to gently vacuum the dust away.

Important: Do Not poke any objects into the vent holes

7 Storage

- Switch off and unplug the unit from the mains power and from the back of the unit.
- Ensure all water is removed from the water tank and is perfectly dry.
- Coil the power supply cord loosely and place it next to the unit.
- Store in a dry well-ventilated area.

Read and Save These Instructions

8 Specification

Specifications				
Power supply	Power consumption	Tank Capacity	Dehumidifying rate	Coverage
Power Supply: GQ48-120500-E3 100-240V ~ 50-60Hz	60W ± 10%	1.3L	320ml / day ± 20% @ 30°C, 80%RH	Approximately 4-6m ²

9 Warranty Against Defect

12 Month Warranty

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expenses incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre, 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd. C/- Customer Service Centre, 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us

IMPORTANT! For all technical queries or difficulties in operating the product and for spare parts, contact H.E. Group customer service 1300 105 888 (Australia) and 09 8870 447 (New Zealand).

