
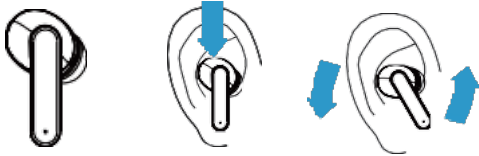
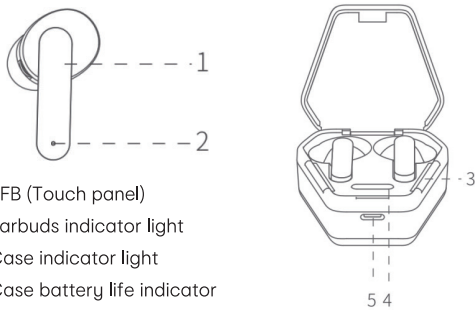


<div><div>anko</div><div><div>Gaming True Wireless Earphones</div><div>Instruction Manual</div></div><div></div><div><p>Please read all the information carefully before you use the product and keep the manual for future reference. Please make sure the product is fully charged before using first time.</p><p>43-030-576</p></div></div>	<div><div>How to wear comfortably:</div><div><div><div>1. Take 2 earbuds out of the charging case.</div><div>2. Insert the correct earbuds into your ears.</div><div>3. Twist and lock the earbuds in your comfortable place to make sure to hear clearly.</div></div><div></div></div><div><div>Specifications:</div><div><div>1. Bluetooth version: V5.0</div><div>2. Earbud : fully charged in about 1.5 hours</div><div>3. Play time: up to 5 hours (50% volume)</div><div>4. Talk time: 4 hours</div><div>5. Standby time: 90 hours</div></div></div><div>1</div></div>	<div><div>Description of product structure :</div><div></div><div><div>Basic function</div><div>Charging:</div><div>Put 2 earbuds into the charging case, use the USB-C cable to connect the charging case.</div><div>(1)Charging case:</div><div>Being charged: Indicator light flashes green.</div><div>Fully charged: The light keeps green or indicate 100%.</div></div><div>2</div></div>	<div><div>12 Month Warranty</div><div>Thank you for your purchase from Kmart.</div><div>Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.</div><div>Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.</div><div>Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at Kmart.com.au for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.</div><div>Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.</div><div>For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.</div></div>
--	---	---	---

<div><div>(2)Earbuds:</div><div>Being charged: Close the charging case, earbuds start to charge.</div><div>(Open the charging case, it stops charging)</div><div>Fully charged: The light keeps blue for 1 second and then goes off.</div></div> <div><div>If there doesn't have indicator light on the earbuds, please use alcohol to wipe both earbuds charging port and charging case charging pin to make sure the pins are completely touched.</div></div> <div><div>Bluetooth connection</div><div>(1)Power on</div><div><div>1. After opening the charging case, two earbuds will turn on and connect with each other automatically.</div><div>2. Indicator light of two earbuds flash for around 2 seconds, then one earbud indicator light will keep flashing with blue and red light alternately, the earbuds are ready for pair.</div><div>3. Activate the Bluetooth function on your devices, search and click the model KM43030576 to connect. If the earbuds indicator light flashes blue, the connection is successful.</div></div><div><div>If you have used Bluetooth connection before, when you open the case, it will start searching for the device last connected. When the device is found, it will re-connect automatically.</div></div><div>3</div></div>	<div><div>If you want to switch between devices, you have to turn off Bluetooth on the device last connected.</div><div>NOTE: Only one Bluetooth device can be connected to the earphone at one time.</div></div> <div><div>(2)Power off:</div><div>Method 1: Put 2 earbuds back into the charging case and close the cover, then will automatically shut off.</div><div>Method 2: Touch and hold one side MFB for 5 seconds to turn off.</div></div> <div><div>Music playing:</div><div><div>1. Play/Pause: Tap the left or right MFB once.</div><div>2. Touch and hold left MFB for 2 seconds to switch to the previous song.</div><div>3. Touch and hold right MFB for 2 seconds to switch to the next song.</div></div><div><div>Answer/End a call</div><div>Tap left or right MFB to answer/end the call.</div></div><div><div>Reject incoming calls</div><div>Touch and hold the left or right MFB for 2 seconds to reject a call.</div></div><div><div>Gaming mode-Low latency mode</div><div>In standby/music mode, tap twice one side MFB to enter game mode.</div><div>Tap twice one side MFB to quit the gaming mode.</div></div><div>4</div></div>	<div><div>Activate Siri</div><div>Quite click 3 times of any Earbud</div></div> <div><div>Mono mode</div><div>Take out any earbud as a unilateral Bluetooth earbud.</div><div>(Note: Mono mode only needs to remove one of earbuds form the charging box; If two earbuds are removed before connection, the earbuds will be used in TWS mode by default.)</div><div><div>1. After taking out one of the earbud from charging case, the earbud will automatically turn on and connect to previously connected devices.</div><div>2. Switch from one earbud to the other when playing music, taking out the other earbud from the charging case and these two earbuds will connect and play music automatically.</div><div>3. Please refer to the TWS mode for more functions.</div></div><div><div>Reset</div><div>If the earbuds cannot pair or disconnect frequently, please put the earbuds back to the charging case and open again, the reset completed.</div></div><div><div>Keep clean of the earbuds:</div><div>A: Clean the charge contacts weekly with an alcohol pad for reliable charging.</div><div>B: Clean the mesh weekly with an alcohol pad to optimize sound performance.</div></div><div>5</div></div>	<div><div>Warning:</div><div><div>·Operating temperature: -20 ℃ ~ 60 ℃ .</div><div>·This Bluetooth earbuds shall be charged by the supplied charging unit only.</div><div>·Battery cannot be subjected to high or low extreme temperatures, low air pressure at high altitude during use, storage or transportation.</div><div>·Replacement of a battery with an incorrect type that can result in an explosion or the leakage of flammable liquid or gas.</div><div>·Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, this can result in an explosion.</div><div>·Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.</div><div>·A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.</div></div></div> <div>6</div>
---	--	---	---