

FRONT

anko


Bluetooth® Floating Speaker
USER GUIDE

Warning: This item is not a flotation device. Adult supervision is required when using.


READ THE FOLLOWING LEAFLET CAREFULLY BEFORE FIRST USE.
IMPORTANT, RETAIN FOR FUTURE REFERENCE. Please check all parts are included before assembly commences

IMPORT: To ensure that the Bluetooth® Floating Speaker is waterproof, please remove all cable connections and tightly close the cap; exposing the Bluetooth® Floating Speaker to liquids without doing so may result in permanent damage to the speaker. And do not expose Bluetooth® Floating Speaker to water while charging, as doing so may result in permanent damage to the speaker or power source. If the speaker will not be used for a long period of time, please recharge the battery at least once every 3 months. Battery life will vary due to usage patterns and environmental conditions.

PACKAGE CONTENTS:

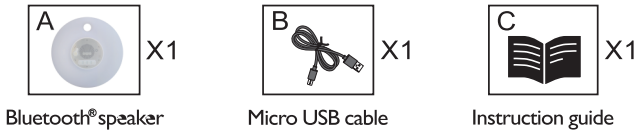

FAMILIARISE YOUR PRODUCT:

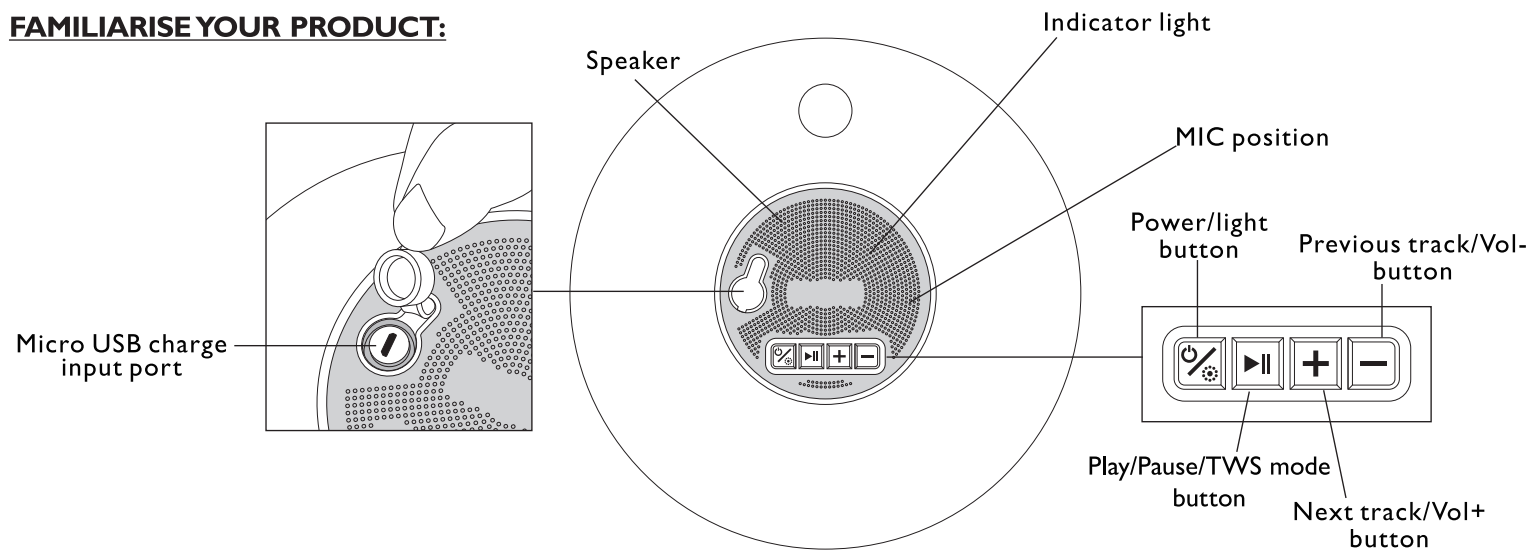

210 mm

176mm

BACK

PORT PARTY SPKR FLOATING FLAT PACK
USER GUIDE

OPERATION INSTRUCTIONS:

NOTE: Before first use, ensure to charge the battery for 5 hours and you will need to pair the Bluetooth® speaker to your smart device.

	Micro USB charge input port: Before first use, ensure to charge the battery using the provided micro USB cable for 5 hours. During normal use, when the speaker is low or flat on battery, connect the micro USB cable to the micro USB charge input port for charging. NOTE: During charge, the indicator light will be red. When device is fully charged, the indicator light will be off. Always close the USB cover tightly after use.
	Power/Light button: This button is the ON/OFF button as well as controlling the light operation. When device is powered ON, the indicator light will be blue. *To turn speaker ON, press this button once. A voice prompt "Power ON" will be heard and different colour lights will rotate slowly. *If the speaker is already connected to your Bluetooth® smart device, a voice prompt "Bluetooth® connected" will be heard. *If Bluetooth® pairing is required, turn speaker ON, then turn on the Bluetooth® mode on your smart device and select the pairing name "43032945". Follow the prompt on your smart device to complete the connection. *Press this button twice, the different colour lights will rotate at a faster speed. *Continue to press this button will allow individual colour lights to be selected. *To turn speaker OFF, long press this button.
	Play/Pause/TWS mode button: This button is used to playback or pause audio media. If your smart device has an incoming call, you can answer the call by pressing this button and speak into the MIC position. Press this button again to hang up call. Long press this button to enter TWS mode. Two machine will be paired and connected automatically, and then paired with smart device. After the pairing is successful, you can enjoy music, and then long press this button to exit TWS mode.
	Next track/Volume + button: Short press this button will playback next track. Long press this button will increase the volume.
	Previous track/Volume - button: Short press this button will playback previous track. Long press this button will decrease the volume.

CAUTIONS:

- Do not disassemble this device.
- Ensure the USB cover is always tightly closed after use.
- This device is not a toy.
Use extra caution while children are using this device.
- Do not store the device inside a car during hot weather.
- Device should not be exposed to excessive heat such as sunshine, fire, high voltage equipment or similar.
Recommended operating ambient temperature: 0-38°C
- Rechargeable batteries may contain combustible materials. If not handled properly, rechargeable batteries may leak, overheat, ignite or even explode, which can result in damage to the device and your health.
- BATTERY CAUTIONS :
 - Battery cannot be subjected to high or low extreme temperatures, low air pressure at high altitude during use, storage or transportation.
 - Replacement of a battery with an incorrect type that can result in an explosion or the leakage of flammable liquid or gas.
 - Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
 - Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.
 - A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.
- The apparatus shall not be mounted at a height higher than 2 meters from ground.
- The marking label is located at the bottom enclosure.

210 mm

176mm