

anko

Bluetooth Clock Radio Wireless Charger



Introduction

The clock radio wireless charger elevates the bedside alarm clock radio to the next level, providing many great features that will help you wake up feeling refreshed.

These features include an up to 10W charging for any compatible device and additional charging via the 2x USB ports. The independent dual alarms offer weekday options and a choice of radio, tone or natural sounds to wake you. As well as listening to stereo FM radio over the 5W speakers you can playback your favourite tunes via Bluetooth.

The clock radio wireless charger combines impressive stereo sound with a modern, stylish design which will compliment any bedroom décor, making it the perfect bedside partner.





Caring for your Alarm Clock

Important Safety Information

Important - Please read these instructions fully before installing or operating your speaker.

Keep away from flame sources such as lighted candles.

Do not expose to dripping or splashed fluids.

The unit should not be exposed to direct sunlight, very high or low temperature, moisture, vibrations, strong magnetic fields, high frequencies and dusty environments.

Do not place the unit in enclosed bookcases or racks without proper ventilation. Ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.

Never attempt to insert wires, pins or other such objects into the vents or openings of the unit.

Do not disassemble or modify the speaker, there are no user serviceable parts.

If the speaker is damaged in anyway or malfunctions do not use. Consult a qualified service engineer.

Do not use abrasives, benzene, thinner or other solvents to clean the surface of the unit. To clean, wipe with clean soft cloth and a mild detergent solution.

This product uses batteries and both product and batteries should be disposed of appropriately. Do not dispose of them with household waste at the end of their life cycle; take them to a collection centre for the recycling of electrical, electronic appliances and batteries. Please check with your Local Authority for recycling advice.



Use only the supplied power adaptor:

Manufacturer: Shenzhen Cenwell Technology Co.,Ltd

Model no.: CWO903500AU

Battery cannot be subjected to high or low extreme temperatures, low air pressure at high altitude during use, storage or transportation. Replacement of a battery with an incorrect type that can result in an explosion or the leakage of flammable liquid or gas.

Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.

Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.

A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

CAUTION. Risk of explosion if the battery is replaced by an incorrect type.

The socket-outlet for the power adaptor shall be easily accessible.



Contents

1. Safety information

Safety information	3
--------------------	---

2. Getting to know your alarm clock

Box contents	5
Control & features	5-6

3. Getting started

 
Setting the clock	7
Setting the alarm(s)	7-9
Enabling/Disabling the alarm	9
Snoozing the alarm(s)	10
Controlling the dimmer	10
Bluetooth connection/operation	11
FM Radio operation/presets	12
Sleep mode	13
Nature sound tracks	13
AUX In mode	13
Headphone jack	13
Wireless charging	14
USB Charging	15

4. Other Information


Specifications	15
----------------	----



Box Contents

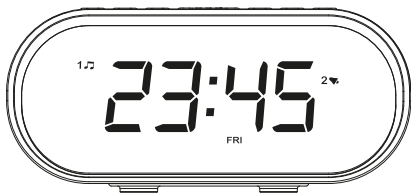

Clock radio wireless charger

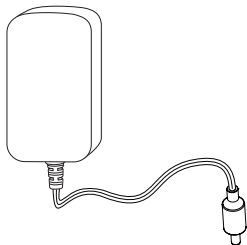 


DC power adaptor (CW0903500AU)



Getting to know your alarm clock

 Before you get started please be sure to read through the safety information on pages 2-3.

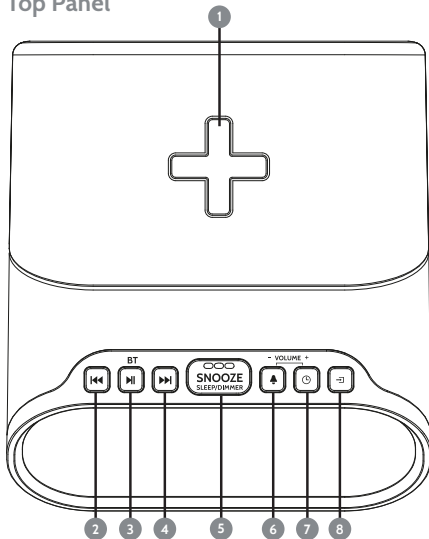
Top Panel



Controls & Features

1. Wireless charging location
2. Previous song/Down button
3. Play/Pause
4. Next song/Up button
5. Snooze/Sleep/Dimmer
6. Volume down/Alarm set
7. Volume up/Clock set
8. Stand mode (long press  >2s) / Function key (short press )

 
Back Panel

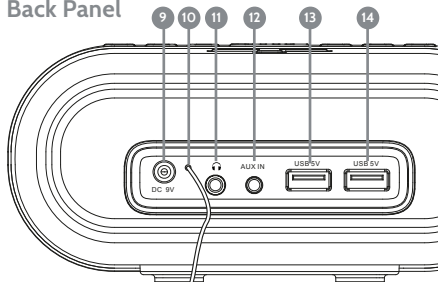

Connections


- 9. DC adapter jack
- 10. Wire antenna
- 11. Headphone socket
- 12. AUX In
- 13. USB Charging port 1
- 14. USB Charging port 2

 Bottom Panel

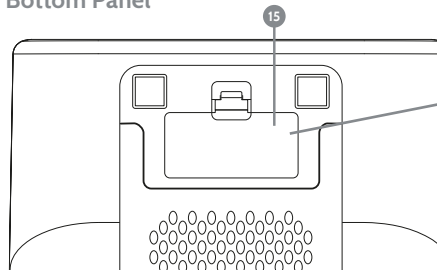


Features

 - 15. Back up battery compartment door



Please Note: These batteries are for backup only and will not power your alarm clock just save time, date and alarm settings when mains power is disconnected.

 Display

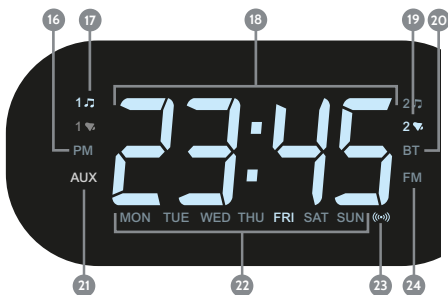


Features & Indicators

- 16. PM Indicator
- 17. Alarm 1 (Radio/Sound)
- 18. Time/Frequency/Nature Sound/Mode
- 19. Alarm 2 (Beep)
- 20. Bluetooth Indicator
- 21. AUX Indicator
- 22. Day
- 23. Wireless charging indicator
- 24. FM Radio Indicator

Before getting started

Before setup or making connections please unwind the wire antenna 10 fully.

 To power your clock radio wireless charger connect the power adapter supplied to an electrical outlet and the power socket 9 on the back panel. Your alarm clock will power up in standby mode.

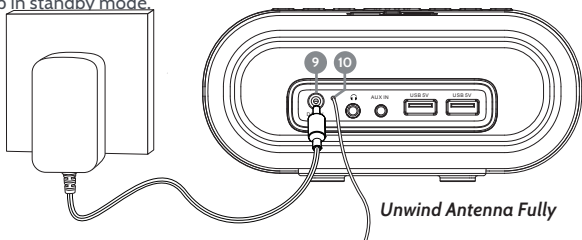

Setting the clock, Date and Time (In Standby mode)

Setting 24 Hour / 12 Hour display

First decide if you prefer a 24 hour (military time / 1pm to 12pm appear as 13-24) or a 12 hour AM/PM display. Press the function key 8 then long press the clock key 7 to start, the default setting is 24hr press the clock key 7 to confirm or press the forward key 4 and then the clock key 7 to select 12 hour display.



Year - Press the previous and next keys 2 & 4 to select the year then the clock key 7 to confirm (e.g. 2020). The following examples set the time and date to:

12:23pm, November 22nd 2020.



Month - Press the previous and next keys 2 & 4 to select the month then the clock key 7 to confirm (e.g. November).



Day - Press the previous and next keys ② & ④ to select the day of the month then the clock key ⑦ to confirm (e.g. 22nd).



Hour - Press the previous and next keys ② & ④ to select the hour then the clock key ⑦ to confirm (e.g. 12).

 


Minute - Press the previous and next keys ② & ④ to select the minutes then the clock key ⑦ to confirm (e.g. 23).



Setting Alarm 1 (In Standby mode)

Time - Long press the alarm key ⑥ to enter alarm setting mode. Use the previous and next keys ② & ④ to select the hour then the alarm key ⑥ to confirm. Use the previous and next keys ② & ④ to select the minutes then the alarm key ⑥ to confirm.



Sound - You now need to set the sounds that will wake you: electronic alarm beep (*bp*), radio (*FM*) or one of the 4 nature sounds (*П1-П4*). Use the next key ④ to scroll through the options then the alarm key ⑥ to confirm.

N.B. The radio alarm will be set to the last station listened to before setting the alarm.



Days - Select All Days (1-7) to set alarm 1 for the same time every day of the week. Select Week Days-Monday to Friday (1-5) to set alarm 1 for the same time on week days only. Select Weekend (6-7) to set alarm 1 for Saturday & Sunday only. Use the next key 4 to scroll through the options then the alarm key 6 to confirm.




To exit the alarm setting mode without setting Alarm 2 press the alarm key 6.

Setting Alarm 2 (In Standby mode)


Alarm 2 - Setting Time



 Alarm 2 - Setting Sound



Alarm 2 Setting Days

 

Alarm enable/disable (In Standby mode)

You can have up to 2 alarms set at one time for instance if you and your partner want to wake at different times or you want to set one alarm for weekdays and another for weekends. The different available combinations are selected by pressing the alarm key once, twice, 3 or 4 times when in standby mode.



Alarm Stop / Snooze

When the alarm sounds you can press the Snooze key to delay it by 9 minutes or press the function key to stop it.

Snooze



Stop

 


When the electronic (Beep), FM radio and Nature sound alarms are activated they will start quietly and gradually increase in volume. FM radio and Nature sound alarms will increase in volume from 0 to volume 7 over 40 seconds. You can then use the Volume +/- keys 7 & 6 to adjust the volume of the radio or nature track.





Dimmer

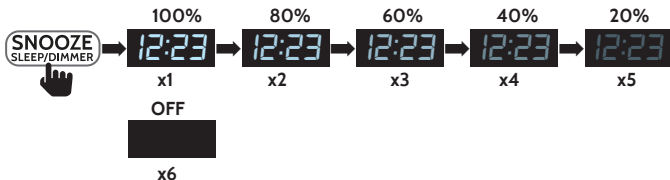When the alarm clock is in the following modes: Standby, FM, Bluetooth, Nature sound and AUX IN, you can press the SNOOZE/SLEEP/ DIMMER key 5 to adjust the brightness of the display in steps (from 100% to Off).




Select mode

 
Your alarm clock is ideal for use as a speaker for music playback from your smartphone and other mobile devices either via the AUX IN socket or Bluetooth. It can also be used as an FM radio or to play a range of pre-loaded Nature Sound Tracks.

To access these functions use the  function key .




Bluetooth

1. Use the function key  to select Bluetooth make sure your device is in Bluetooth mode. The clock will search for the last connected device and the Bluetooth icon will flash.
2. If the last connected device is not available. The clock will search for other devices and will appear in your device's Bluetooth menu as "43032983".
3. Select the clock and the "BT" icon will appear in the clock's display when connection is successful.

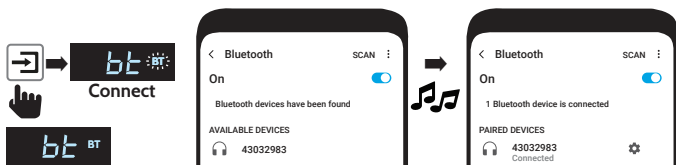

 
Play audio on your Bluetooth device, see below for playback options on your clock.

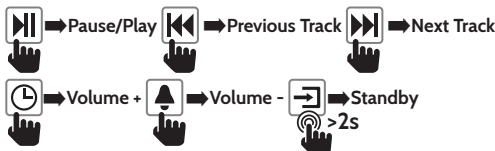

To disconnect your device press and hold down the play key for 2 seconds.



FM Radio

Use the  function key **8** to select FM mode

Long press the previous and next keys to tune to FM stations short press the same keys to fine tune once you have tuned to a station you can then store it to one of the 10 preset positions as shown below.



Use the Volume +/- keys **7** & **6** to adjust volume. Long press the function key **8** to switch of the radio and go to Standby



FM Radio saving presets

Long press the Play/Pause key **3** to enter preset saving mode. Press the previous and next keys **2** & **4** to scroll through the 10 preset positions. To save to the position selected press the Play/Pause key **3**.



FM Radio play preset (In radio mode)

 
Short press the Play/Pause key **3** to enter preset store. Press the previous and next keys **2** & **4** to scroll through the 10 preset positions. To play the selected preset press the Play/Pause key **3**.





Sleep function (In FM/Bluetooth/nature sound track mode)

This function is ideal if you want to listen to the radio, your Bluetooth device or one of the nature sound tracks while you drift off to sleep. You can set your alarm clock to switch off automatically after the selected time (in minutes) has elapsed.

Play the FM radio, your Bluetooth device or select and play a nature sound track then follow the settings below:



Playing the Nature sound tracks




Ideal for bedtime listening, choose one of four soothing tracks recorded from nature press the  function key  four times to access this mode:

N1: Wind chimes


N2: Birdsong N3: Thunderstorm N4: Campfire



AUX IN

Connect any audio device to the 3.5mm socket  on the back of your alarm clock press the  function key  once to access this mode:

 Select and play audio on the device, see below for playback options on your alarm clock.



Headphone Jack

 
For private listening to any audio output from the alarm clock connect your headphones to the 3.5mm jack socket  on the back panel.

Wireless charging

If your phone has wireless charging capability you can use the charging panel on the top of the alarm clock to charge it.

Please Note: Wireless charging is likely to interfere with radio reception therefore we advise you not to try listening to FM radio during charging.

1. Centre* your smartphone on the cross in the middle of the charging panel (1).
2. The ((∞)) wireless charging icon will be displayed in the bottom right corner of the LCD panel while your phone is charging and the battery charge status can be seen on your phone's display.

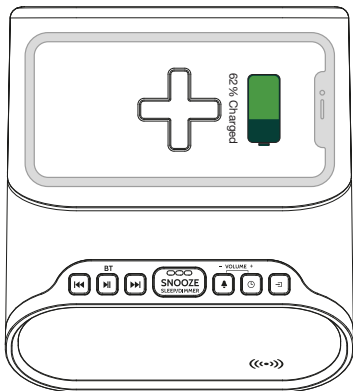

Please Note: Your phone will not charge when the alarm clock is in backup mode (not being powered by the power adapter).

If problems occur when charging or if charging does not start:

- *Normally your smartphone should be centred on the charging pad as shown. However some phones may need to be placed slightly off centre. As the built-in wireless receiver may not be centred inside the phone. This varies by brand/model.
- Remove your smartphone from its case if the thickness of the case exceeds 5mm or if it contains metal.
- The charging time varies depending on the charging capacity of the battery and its current residual capacity.
- The components may heat up during the charging process. They will slowly cool down again after the charging process.

USB charging ports

1. You can charge two external devices by connecting them to the USB charging ports (13 & 14) on the back of the your alarm clock.
2. Your devices battery charge status will usually be shown on it's display.
 - There may be some radio interference while charging.
 - Please charge devices using one charging method at a time (wireless or USB).
 - Please do not try to charge the same device using the wireless charging function and one of the USB charging ports (13 or 14) at the same time.

Backup batteries

Please Note: These batteries are for backup only and will not power your alarm clock just save the time, date and alarm settings when mains power is cut or disconnected.

The alarm clock has a backup battery feature. Please insert 2x AAA batteries (not supplied) into the battery compartment on the underside of your alarm clock (see page 6). This will ensure that time and alarm settings are remembered if the alarm clock is unplugged or there is a power cut.

Specifications	
Power Adapter Input:	100-240V~50/60Hz
Power Adapter Output:	9V \approx 3.5A, 31.5W (CW0903500AU)
Wireless Charging:	Up to 10W
USB Outputs:	2x 5V \approx 2.1A (Total)
Speaker Output	2x 5W
FM Frequency Range:	87.5 - 108MHz
FM Presets:	x10
Backup Battery Requirement:	2x AAA 1.5V

Remarks:

1. The marking label is located at the bottom enclosure.
2. The wireless charging will only reach 10W when the USB port is not in use.

12 months warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at Kmart.com.au for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.