

# anko

## Instruction manual

Clock Radio Wood

Keycode: 43056002



### Safety instructions:

Please read all safety instruction warnings carefully before using this product. Improper use of this product may result in damage to this products. To ensure the production works well, please never use this in the following conditions:

1. Moist or underwater conditions.
2. Near heater or high temperature service.
3. direct and strong sunshine.
4. Do not use chemical solvent on cleaning this product.

### Packing contents:


Clock radio x 1  
5V 1A adapter x 1  
DC cable x 1  
User manual x 1

### Charging the clock.



- A. Insert 3 x AAA batteries into the battery compartment inside the back of the clock, ensure the polarity of the batteries match the polarity inside the battery compartment.
- B. Plug in DC cable (included) with a DC 5V 1A USB adapter (included).

**NOTE: Once power off, all setting will back to default data.**

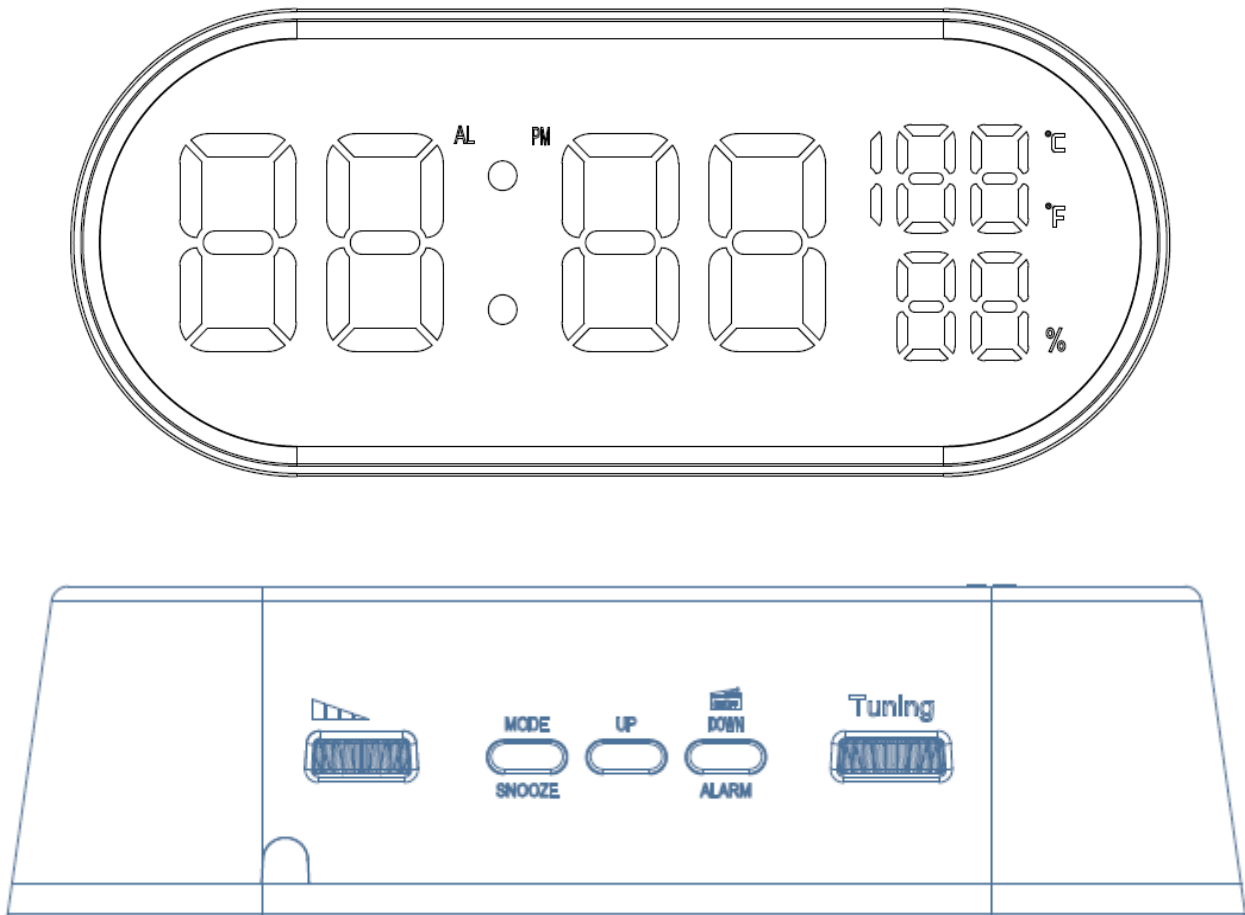



## Product Overview:



### TIME SETTING:



1. Long press  for 2 seconds to enter into time setting mode. The setting article will flash, press **UP** Button or **DOWN** Button to set, Once confirmed, press . The setting sequence: 12/24H -> Hour -> Minute -> °C/°F selectable -> Quit
2. The setting will be confirmed and exited without any operation in 10 seconds.

### ALARM SETTING:

1. Short press  to enter into alarm mode.
2. Long press  for 2 seconds to enter into alarm setting mode.  icon and setting article will flash, press **UP** Button or **DOWN** Button to set the time. Once confirmed, press . The setting sequence: Alarm hour -> Alarm minute -> Snooze interval time (5-60min) -> Alarm ring choose (bU=buzzer alarm; rd=radio alarm) -> Quit.
3. The setting will be confirmed and exited without any operation in 10 seconds.

**NOTE:** To deactivate the alarm, short press **DOWN** button,  icon will disappears from display.

## SNOOZE Function:




When the alarm ringing, press , the alarm will stop and ring again every 5 minutes (default), press any other button (except ) to stop the alarm.

## LIGHT SENSOR Function:

1. Long press **UP** Button for 2 seconds to turn on/off light sensor function, ON/OFF will display on LED screen.  
If the sensor mode is selection not working, please refer to the “Night mode” section to switch off the Night mode.
2. When light sensor is OFF, short press **UP** Button to change the LED display luminance level (High - Medium - Low).
3. When light sensor is ON, the LED display will automatically adjust the screen brightness according to the light in the surrounding area.



**NOTE: If use AAA batteries only, the LED display will automatically turn off after 10 seconds. Press any button to turn on LED display again. If need LED display always on, connect the DC cable with adapter.**

## NIGHT MODE Function:

1. Ensure light sensor is OFF, press  twice to enter into night mode interface. ON/OFF will display on LED screen. press **UP** or **DOWN** Button to turn on/off night mode function.
2. When LED display shows ON, long press  to enter into night mode setting. The setting sequence: Start hour -> Start minute -> Stop hour -> Stop minute -> Quit. Press **UP** Button or **DOWN** Button to set the time. Once confirmed, press . The setting will be confirmed and exited without any operation in 10 seconds.
3. The default night mode period is from 18:00 to 6:00.

**NOTE: Night mode means the LED display will automatically dim the luminance during night time, If light sensor is ON, there is no night mode function!**

## FM RADIO:

1. Long press  for 2 seconds to turn on/off FM radio.
2. Rotate  knob to decrease or increase the volume,
3. Rotate **TUNING** knob to increase or decrease radio channel by 0.1MHz

## USB PORT PHONE CHARGING

To charge mobile phone, ensure the clock is connected with supplier USB adapter DC 5V 2A USB adapter. Plug your charging cable to clock's USB output port.

**Note: When the clock is powered by internal batteries, it does not support USB Port charging.**

## 12 Month Warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at [Kmart.com.au](https://www.kmart.com.au) for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.