

anko

**Steam Iron
SL-2077A-20
User Manual**



**PLEASE READ AND SAVE THESE
INSTRUCTIONS FOR FUTURE REFERENCE**

IMPORTANT SAFE INSTRUCTIONS

When using any electrical product, always follow these basic safety precautions:



READ ALL INSTRUCTIONS BEFORE USE.

Read this user manual carefully before first use and save it for future reference.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- This product has been designed for domestic use only. In case of any commercial use, inappropriate use or failure to comply with the instructions, the guarantee will not apply.
- Before connecting your appliance, check if the mains voltage is the same as the voltage indicated on your appliance and that the power outlet has an earth connection. If unsure check with an electrician.
- Before each use ensure that the electric cord or any other parts on the iron is not damaged. If any damage is evident, do not use.
- If the supply cord is damaged, it must be replaced by qualified electrical person only.
- Keep the iron and its cord out of reach of children when it is connected to mains power or when cooling down.
- Never direct the steam towards persons or animals. Never direct the steam jet towards any other electrical or/and electronic appliances.
- **DO NOT use** the iron if it has been dropped, if there are visible signs of damage, malfunction or if it is leaking.
- Always make sure the appliance is switched OFF, unplugged and cooled down before cleaning.
- **IMPORTANT! The iron must not be left unattended whilst connected to mains power and before it has cooled down. The soleplate of the iron can become extremely hot and may cause burns if touched.**
- Do not unplug the appliance by pulling on the cord or on the appliance. Always disconnect from mains power by pulling on the plug.
- Never immerse the iron, the stand, the power cord or the plug in water or other liquid. Never wash them under a water tap.
- The plug must be removed from the socket-outlet before filling the water reservoir with water.
- The iron must be used and rested on a flat, stable surface.
- When placing the iron on its stand, ensure that the surface on which the stand is placed is stable.
- For additional electrical safety, this appliance should be connected to a household residual current device (RCD/safety switch) with a rating of no more than 30mA. If unsure consult your electrician for advice.

**SAVE THESE INSTRUCTIONS
FOR HOUSEHOLD USE ONLY**

BEFORE FIRST USE

Unpack the appliance and check if all parts are there and undamaged. Should this not be the case, return the product to Kmart for replacement.


The packaging contains:

- One steam iron
- One water measuring cup

Clean all parts before first use. See ***Cleaning and Maintenance***

Heat up the iron to its maximum temperature and iron over a piece of damp cloth for several minutes. This will burn-off any manufacturing residue from the iron. Smoke and odour may occur for a short period during this process, which is normal.

KNOW YOUR STEAM IRON

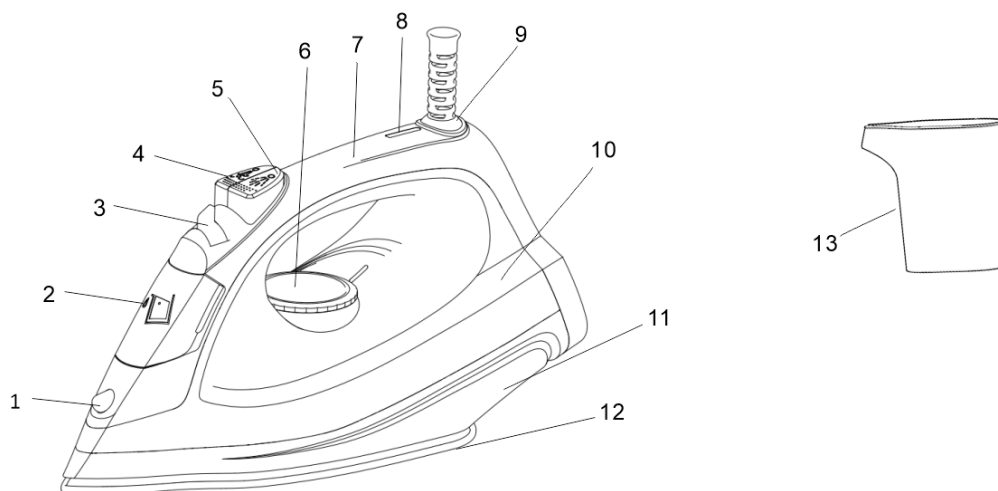

- | | | | |
|---|---------------------------------|----|----------------|
| 1 | Spray nozzle | 8 | Indicator lamp |
| 2 | Water filling inlet | 9 | Cord bushing |
| 3 | Steam control/Self-clean button | 10 | Water tank |
| 4 | Steam shot button | 11 | Skirt |
| 5 | Spray button | 12 | Soleplate |
| 6 | Temperature dial | 13 | Measuring cup |
| 7 | Handle | | |

OPERATION



Filling the water tank

- Ensure that the iron is cold and not connected to the mains power outlet socket.
- Open the water filling inlet (2) by lifting the cap.
- Hold the iron in a tilted position and fill the water tank with plain water, using the measuring cup. CAUTION! DO NOT exceed the max level on the water tank.
- Close the water filling inlet (2) by pressing down the cap until you hear a click. Ensure the water tank is properly closed to avoid water spillage.
- NOTE: To avoid calcium deposits which can cause staining on clothing, we recommend using distilled water to fill the water tank when using the steam function.

IMPORTANT! To avoid damage or blockage of the steam iron, do not use any scented water or additives.

Steam ironing

- Fill the water tank as described above.
- Position the iron vertically on its stand on a suitable flat stable surface.
- Ensure that the steam control (3) is on OFF position
- Connect the plug to a suitable mains power outlet.

- Turn the temperature dial (6) to a setting within the steam range  • • • MAX .
- The indicator lamp (8) will light up. The light will turn off as soon as the selected temperature is reached.
- Turn on the steam control  and begin ironing.

NOTE: Always follow the recommended ironing instructions found on the garment. If there is no ironing instructions on the garment, use the heat settings in the table as reference.

Dry Ironing

- Position the iron vertically on its stand on a suitable flat stable surface.
- Ensure that the steam control (3) is set to OFF position
- Connect the power cord plug into a suitable mains power outlet socket.
- Turn the temperature dial (6) to a desired heat setting.
- The indicator lamp (8) will light up. The light will turn off as soon as the selected temperature is reached.
- Now dry ironing can begin.

Using Spray button

- Set the temperature dial (6) at MAX position, When the indicator lamp goes off, Press the spray button (5) a couple of times to moisten the garment. Before spraying make sure that there is enough water in the water tank.

NOTE: Do not spray water on silk.

Using Steam Shot button

- Set the temperature dial (6) at MAX position, When the indicator goes off, Press the steam shot button (4) to instantly provide a powerful burst of steam to eliminate stubborn wrinkles.
- The steam shot button can also be used when holding the iron in a vertical position. This is useful for removing creases from hung clothes, curtains, etc.

ATTENTION: To protect against burns or injury to persons, do not iron or steam fabrics while being worn on the body. Do not direct steam towards the body when ironing.

After ironing

- After use, rotate the temperature dial (6) to OFF position and disconnect the iron from the mains power outlet socket.
- Let the iron cool down and empty the water tank to prevent built up of any residue in the water tank.

CLEANING AND MAINTENANCE

IMPORTANT! Unplug the iron from mains power and allow it to cool down completely before cleaning and storing.

- Clean the upper part of the iron with a damp cloth. Use a mild detergent if necessary.
- Do not use alcohol, acetone, benzene, scouring cleaning agents etc., to clean the iron. Do not use hard brushes or metallic objects.
- Remove any deposits on the soleplate with a damp cloth. To avoid scratching the finishing, never use a metallic pad to clean the soleplate, and never place the iron on a rough surface.
- To remove synthetic residue from the soleplate, iron over an old cotton rag in high heat setting.
- Always store the emptied iron horizontally on a stable surface with a cloth protecting the soleplate.

Self-clean function

The self-cleaning function should be used on a regular basis, depending on usage and the hardness of water used.





WARNING: Never pour white vinegar or any liquid cleaners into the water tank!

- Fill the water tank. **Refer to OPERATION: Filling the water tank.**
- Position the iron vertically on its stand on a suitable surface.
- Ensure the steam control (3) is in OFF position.
- Connect the supply cord plug to a suitable power outlet socket.
- Set to maximum ironing temperature.
- Once the soleplate temperature is reached, unplug the iron from mains power.
- Hold the iron over a sink (away from your body), press and hold the self-clean button (3). Boiling water and steam will now emit from the steam holes on the soleplate.
- Carefully shake the iron forwards and backwards to allow any scale and other deposits to expel with boiling water and steam.
- Release the self-clean button (3) when the water tank is empty.
- Plug the appliance into a mains power outlet socket, set a temperature and leave in operation for at least two minutes to dry the soleplate.
- Unplug the iron and let the iron cool down completely.

IRONING TIPS

IMPORTANT! always check whether a label with ironing instructions is attached to the garment. Always follow the ironing instructions attached to the garment.

- The iron heats up quicker than it cools down, therefore, you should start ironing the articles first requiring the lowest temperature such as those made of synthetic fibre/material.
- If the fabric consists of various kinds of fibres, you must always select the lowest ironing temperature to iron the composition of those fibres.
- Silk and other fabrics that are likely to become shiny should always be ironed on the inner side.
- To prevent staining do not spray water straight on silk or other delicate fabrics.
- Velvet and other textures that rapidly become shiny should be ironed in one direction with light pressure applied. Always keep the iron moving at all times.
- Pure wool fabrics (100% wool) may be ironed with the iron set to steam position. Preferably set the steam button to the maximum position and use a dry cloth between the garment and the iron for protection.
- Do not touch plastic buttons on the garment with a hot iron because they may melt.
- Be careful around zippers and similar items to prevent the soleplate from scratching.

Symbol	Fabric	Temperature setting	Variable steam	Steam shot	Spray
	Nylon, silk	MIN ●	✗	✗	✓
	Wool	● ●	✗	✗	✓
	Cotton, Linen	● ● ● MAX	✓	✓	✓
	Attention! This symbol indicates: DO NOT IRON!				✓ possible ✗ not possible

TECHNICAL SPECIFICATION

Voltage: 220-240V~ 50-60Hz

Power: 1600-2000W

12 MONTH WARRANTY

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us