
 
 


FACIAL CLEANSING BRUSH



INSTRUCTION MANUAL

How to Use:

1. Rinse face under water
2. Apply your facial cleanser to your face or silicone pad.
3. Turn unit on by pressing the power button . Use up/down button  to adjust speed. Begin by massaging your chin, and use gentle upward motions, as you slowly move massager along your jawline to your ears and out towards your cheeks.
4. Repeat on other side of face and along forehead and nose.
5. Rinse face with warm water and pat dry.
6. To turn unit OFF, press power button  again.
7. Wash the brush and place upright to air dry.

Operating Instruction:

1. Insert two AAA batteries according to the battery compartment instructions, make sure the polarity is correct and put the battery cover back on (batteries are not included)
2. Make sure your hands and the appliance are dry when replacing the batteries

Specifications:

- Rated Voltage: 3.0V
- Type of Battery: AAA 1.5V x 2 (not included)
- Working time: 4 hours
- Model Number: BCM-1438

Safety Instructions:

To ensure proper operation of this appliance, please read this instruction manual carefully before using the appliance and keep it for future reference.

WARNING:

- Immediately stop using if your skin becomes irritated or you become unwell and seek medical assistance
- Do not use if you are allergic to silicone
- Do not use the massager for more than 3 minutes at a time.
- Always clean device after use with water and mild soap and rinse clean. Pat dry with lint-free cloth/towel.
- Avoid leaving in direct sunlight. Do not expose to extreme heat.
- Do not submerge in water.
- Do not use on eyelids.
This appliance should not be used by persons with reduced physical, sensory or mental abilities (including children), unless under supervision.
- This appliance is for household use only.
- Always switch the appliance off after use.
- Do not place the appliance in a hot or humid environment for a prolonged period of time.
- This appliance is battery-operated. If you do not use the appliance for long time, remove the batteries.