

# **anko**

## **Sandwich Maker FS-8032 User Manual**




**PLEASE READ AND SAVE THESE  
INSTRUCTIONS FOR FUTURE REFERENCE**

# IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:


## READ ALL INSTRUCTIONS

1. To protect against electric shock do not immerse the appliance, power cord, plugs in water or other liquids.
2. Close supervision is necessary when any appliance is used by or near children.
3. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
4. If the supply cord is damaged do not use. For electrical safety, the supply cord must be replaced by a qualified electrician in order to avoid a hazard, or the product must be disposed of.
5. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
6. The appliance is intended for household use only. Do not use outdoors or for commercial purposes.
7. This appliance is intended to be used indoors in household and similar applications such as: staff kitchen areas in shops, offices and other working environments, farmhouse, by clients in hotels, motels and other residential type environments, bed and breakfast type environments.
8. Do not let cord hang over edge of table or counter, or touch hot surfaces.
9. Do not place on or near a hot gas or electric burner, or in a heated oven.
10. Do not touch hot surfaces on the appliance. Only use the handle provided.
11. Extreme caution must be used when moving an appliance containing hot oil, food or other liquids.
12. Do not use appliance for other than intended use.
13. The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the appliance by a person responsible for their safety.
14. Children should be supervised to ensure that they do not play with the appliance.
15. The appliances are not intended to be operated by means of an external timer or separate remote-control system
16. Do not use an extension cord with this appliance.
17. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved .Children shall not play with the appliance .Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of young children.
18. Always operate the appliance on an even surface. Make sure that there is enough ventilation, so that hot steam can be released safely during use.
19. To avoid the danger of fire, never leave the appliance unattended. And never use the appliance near flammable material or near items sensitive to heat, such like curtain or wall cabinet...etc., risk of burning and/or heat damage.
20. Before connecting the appliance to a mains power outlet, the heating plates must be in closed position.
21. Use only heat-proof synthetic or wooden utensils to prevent damage to the non-stick coating on the heating plates. Make sure that the utensils are not pointed or have sharp edges.

22.  **Caution, hot surface. Care must be taken. The surface is liable to get hot during use.**
23. For cleaning cooking surface, please refer to section “Cleaning and Maintenance”.

**SAVE THESE INSTRUCTIONS  
FOR HOUSEHOLD USE ONLY**

## PARTS DESCRIPTION

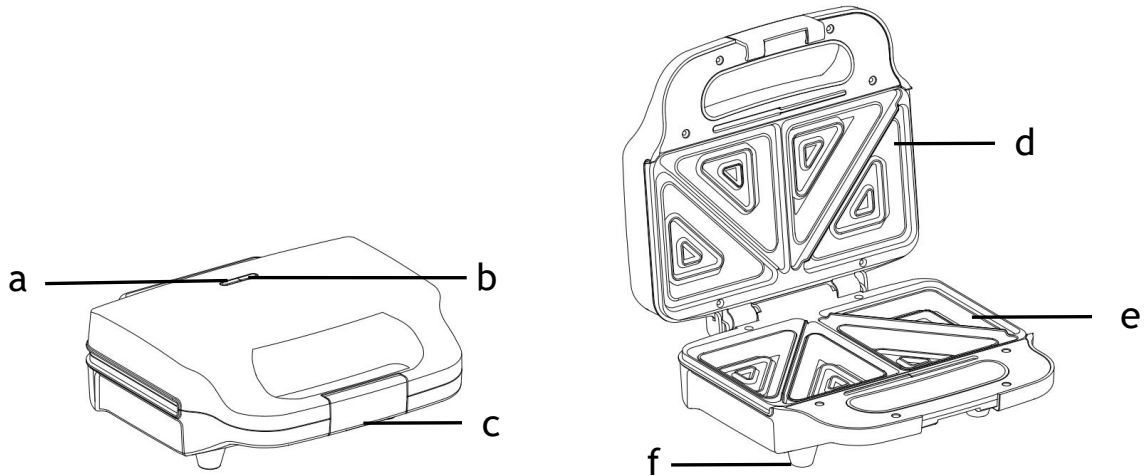

- a. Red power light
- b. Green heating light
- c. Locking clip
- d. Top baking plate
- e. Bottom baking plate
- f. Rubber feet

## BEFORE FIRST USE

The appliance has been packaged carefully to ensure the product reaches you in good condition. If the product has been damaged, dropped, has a malfunction in any way, or if the supply cord is damaged, do not use. Return the product to Kmart for replacement.

Carefully unpack your appliance. Make sure you do not discard any packaging material until all parts of the appliance have been found.

Carefully wipe the exterior of the appliance to remove any dust that may have accumulated during production. Dry with a dry towel. Do not use harsh abrasive cleaners.

## **OPERATION**

1. Brush or wipe the toasting grids with a small amount of vegetable oil.
2. Close the appliance and plug the appliance into the wall socket. The red power light and green heating light will be illuminated, and the appliance will begin heating. The red light will remain ON until the appliance is disconnected from mains power.
3. The grids will reach baking temperature in approx. 3 minutes, the green heating light go OFF to indicate the appliance had reached cooking temperature. The green heating light will continue to cycle ON and OFF during the cooking process. This is normal.
4. Open the appliance and place the two sets of prepared fillings on the bottom baking plate.
5. Close the appliance and press the top baking plate to lock with the locking clip.
6. It will take approx. 3-5 minutes to make the sandwich and this will depend on different fillings and requirements.
7. Unlock the clip and open the appliance and take out the sandwich.
8. Repeat the above operation if more sandwiches are needed.
9. Remove the plug from the wall socket after use.

## **CAUTION:**

1. Depending on the thickness of your food, it may take approx. 3 - 5 minutes to make a sandwich.
2. The first heating process should take place without any foodstuffs. Let it heat for about 10 minutes. You may notice slight smoke and/or odour from the appliance when the heating element is heating up. This is normal and harmless! After dry heating for a few minutes, it should disappear.
3. When the appliance is connected to mains power, the red power indicator light will be constantly lit, the green light will cycle ON and OFF during use. This is normal.
4. If too much mixture is inserted into the appliance, the sandwich maker cannot be closed. Never close it with undue force as this could damage the appliance.
5. Never use sharp forks or knives to remove food from the sandwich maker, as this would damage the non-stick coating on the cooking surface. Use heat-resistant wood or plastic utensils only.
6. Always unplug the appliance from the power socket when not in use.

## **CLEANING AND MAINTENANCE**

This appliance should be cleaned after every use.

**CAUTION: Make sure the appliance is unplugged from mains power and allow the appliance to cool down completely before cleaning.**

**CAUTION: Never immerse the sandwich maker in water, other liquids or in a dishwasher!**

1. Wipe the cooking surface with a soft damp cloth every time after use. If it is difficult to remove residues, use a little oil to soften it.
2. Do not use any metal objects for cleaning as they would damage the non-stick coating.

## **STORAGE**

1. Ensure the Sandwich Maker is disconnected from mains power.
2. Allow the appliance to cool down completely.
3. Do not wrap the power cord around the appliance.
4. Store the appliance in a dry location and out of the reach of children.

## **TECHNICAL DATA**

Voltage : 220-240V~ 50-60Hz

Power : 680-850W

## **RECIPE**

### **Bacon, Lettuce and Tomato**

4 slices white bread  
1 tomato, sliced  
Few pieces of lettuce  
4 thin slices bacon  
Softened butter

Spread one side of the bread with softened butter. Put 2 slices on the sandwich maker, buttered side down. Arrange the tomato, chopped lettuce and grilled bacon on top. Cover with the other slice of bread, buttered side up.

### **Scrambled Eggs and Bacon**

4 thin slices bacon  
4 slices white bread  
Softened butter  
2 tablespoons milk  
Salt and pepper  
1 large egg  
1/2 Oz butter

Grill the bacon and cut into pieces. Scramble the egg with butter, milk and seasoning until lightly set. Spread one side of the bread with softened butter. Put two slices on the sandwich maker, buttered side down. Arrange the scrambled egg and bacon on top and cover with the other slices of bread, buttered side up.

## 12 Month Warranty

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at <a href="http://kmart.com.au">kmart.com.au</a>	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at <a href="http://target.com.au/help/contact-us">target.com.au/help/contact-us</a>