## 157g双铜, 420x208mm, 4C, 折页, 切正

## 正面

# Pet Water Fountain SPECIFICATIONS Model: Pet water founts Power requirements: Inpu Out Usage TIPS When being introduced this new source of water this new source of water

## ① Top cover ② Filter ③ Filter holder ④ Pump bracket ⑤ Fix board ⑥ Pump ⑦ Plastic elbow ⑧ Silicone tube ⑨ Water reservoir tank

## SPECIFICATIONS Model: Pet water fountain Power requirements: Input 100-240V~50/60Hz 0.3A MAX Output: 12V == 200mA Use provided power adaptor model CW1200200AU only

The drinking fountain can be simply disassembled to allow for an optimal clean. The filter holder and pump bracket can be easily washed by hand. The top cover and water reservoir tank are suitable for dishwashers.

When being introduced to this drinking fountain, your pet may be cautious about this new source of water. After putting the fountain into operation, allow your pet to get used to it at his or her own pace.

Some pets take a few days or sometimes a little longer to begin using it.

Your pet may prefer the fountain to be placed away from their normal feeding area.

 
our per may prefer the fountain to be placed away from their normal reeding area.


DO NOT RUN DRY!

 
## OPERATING INSTRUCTIONS FOR YOUR DRINKING FOUNTAIN

## STEP 1

Put the filter into the filter holder, and insert the filter holder into the designated area on the back side of the top cover.




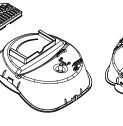




## STEP 2


Insert the pump bracket at the designated area on the back side of the top cover, and then insert the fix board.

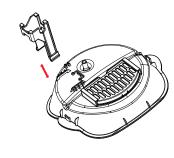

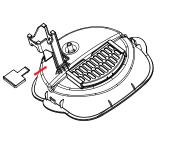

## STEP 3


Put the pump into the pump bracket with correct direction as shown in the below image.

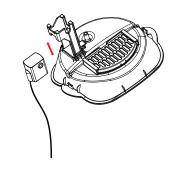

## 背面

## STEP 4

Insert the plastic elbow to the hole on the pump.
Using the plastic elbow connect the silicone tube to the top cover.

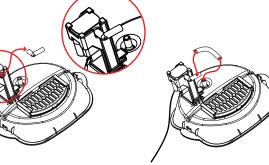

## TEP 5

Clip the electrical cord in the fixing slot.



## STEP 6

Fill the tank with water until reaching the Max mark on the side water reservoir tank; DO NOT OVERFLOW;

Put the top cover on top of the water reservoir tank, and press down until the cover is secure; Make sure the electrical cord is held snugly in the notch in the back of the cover;





## WARNING

When using electrical appliances, basic precautions should always be followed, including the following:
- Read the instructions thoroughly before using the appliance.

- Read the instructions thoroughly before using the appliance.
   To reduce the risk of injury, close supervision is necessary when an appliance
- is used near children.
- Only use attachments recommended or sold by the manufacturer.Do not use outdoors. FOR INDOOR USE ONLY.
- Do not use outdoors. FOR INDOOR USE ONLY.Do not unplug by pulling on the power cord. To unplug, grasp the plug, not the
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or is dropped or damaged in any way.

## FOR PORTABLE APPLIANCES

- To reduce the risk of electrical shock, do not place or store the appliance where it can fall or be pulled into a tub or sink.
  Always unplug any appliance when not in use, before putting on or taking off parts.
- Always unpling any appliance when not in use, before putting on or taking off parts, and before cleaning.
- Never pull the power cord to remove the plug from the outlet.

## SAFETY INSTRUCTIONS - INSTRUCTIONS PERTAINING TO RISK OF FIRE,

- Do not allow pets or children to chew on or swallow any fountain parts. If you
  are concerned about the power cord, purchase a cord conduit or cord cover at
  any home improvement or hardware store.
- Do not attempt repairs on the motor yourself.
   If the plug of this device gets wet, turn off the electricity to that outlet. Do not
- attempt to unplug it. - To avoid the possibility of the plug or outlet getting wet, the outlet should always
- be above the level of the fountain.
   Examine this appliance after installation. It should not be plugged in if there is
- water on the cord or plug.

   If an extension cord is necessary, a cord with a proper rating should be used.

This product is not intended for use by persons (incl. children) with reduced physical, sensory or mental capabilities or with a lack of experience and/or knowledge without a person responsible for their safety present who can supervise this person and make sure that they are operating the device according to the directions. Make sure that children do not play with this device. Keep children away from the packaging material. Choking hazard if swallowed. Ensure that nobody puts the packaging bag over their head.

## DANGER OF INJURY AND MATERIAL DAMAGE

Protect the device against heat and cold , Maximum ambient temperature: 0°C/+30°C. Protect the device from mechanical influences , such as an impact or fall. Do not use any scratching or abrasive cleaning products which could damage the surface. Check the condition of the product before use. Do not operate any defective devices.

## ELECTRICAL HAZARD

In order to prevent short circuits and therefore electric shocks, never use the device with any other power supply than that intended. Stop using the

product, if it has fallen into water. Do not use the device if it is damaged or has been dropped on the floor .In order to prevent danger, only have repairs carried out on the product by a service workshop.

## DISPOSAL OF THE DEVICE

Old devices may not be disposed of in domestic waste. If the device will no longer be used, every consumer is required by law to dispose of old devices separately from domestic waste, e.g. at a collection point in his community/ neighborhood; Doing so will ensure that old devices are recycled correctly and negative effects on the environment are prevented. This is why electrical devices are labelled with the image shown.

WARNING: FOR PET USE ONLY. SUPERVISE YOUR PET DURING USE. FOR YOUR PET SAFETY, INSPECT REGULARLY AND REMOVE IF DAMAGED. PLACE THE PRODUCT ON A FLAT SURFACE BEFORE TURNING ON.