

anko

12 month warranty

Thank you for your purchase from Kmart.  
Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with the accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on **1800 124 125 (Australia)** or **0800 945 995 (New Zealand)** or alternatively, via Customer Help at **kmart.com.au** for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

**WARNING** Do not dispose of unit in fire or water. > Never attempt to disassemble and reassemble. > Waste electrical products should not be disposed of with household waste, please recycle where facilities exist. > Check with your local authority for recycle advice. > Keep your device and all accessories out of the reach of children and animals. > Small parts may cause choking or serious injury if swallowed. > Avoid exposing your device to very cold or very hot temperatures (below 0°C or above 45°C). > Extreme temperatures can cause deforming of the device and reduce the charging capacity and life of your device. > Do not allow your device to get wet—liquids can cause serious damage. > Do not handle your device with wet hands.

Gaming Headset  
Operating instructions

includes:  
› Gaming headset



43-107-223

Product Overview:

1. Gaming headset
2. RGB light on earpads
3. Microphone
4. Inline controller (volume control and mic ON/OFF)
5. USB cable




Specification:

Model No.: 43107223  
Driver: 40mm  
Impedance: 92±3dB  
Frequency Response: 20Hz - 20kHz  
USB Cable Length: 2m


Functions of Inline Controller:

1. Volume Up (+)
2. Volume Down (-)
3. Mic ON/OFF

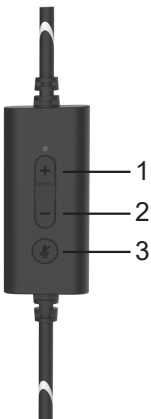

Connection Options:

PC/MAC gaming

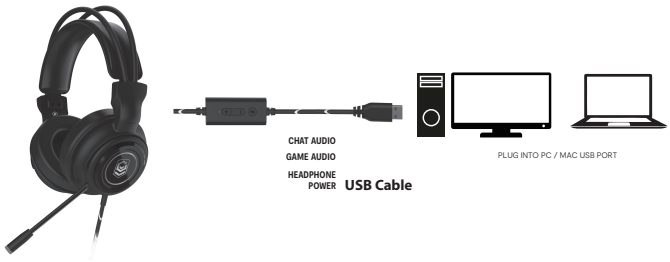

1. This headset is suitable for USB audio devices, such as laptops, tablets, etc.
2. The required operation system, 32-bit and 64-bit Win 7/Win 8/Win81/Win 10/XP.  
When this gaming headset is connect with the USB audio devices successful, the work indicator on the inline controller will turns on red.
3. Adjust the microphone rod to your right position.  
The microphone indicator turns blue when the mic is on and turns off when the mic is off.
4. Please make sure the volume is at the minimum volume, and adjust the volume botton to get a comfortable listening level.

**Warning:**  
High sound pressure!  
Hearing damage risk.  
Do not listen at high volume levels for long periods.