

2 in 1 Swing Set Instruction Manual

› includes tubular frame, swing seat, baby seat, screw sets and anchors

1-3
years

BABY SEAT

3+
years

SWING

25
kg

MAXIMUM
WEIGHT OF
BABY SEAT

45
kg

MAXIMUM
WEIGHT OF
SWING SEAT



Drawings in the manual are for visual purposes only. Actual product may vary slightly.
The manufacturer reserves the right to change any specification or feature without prior notice.

**IMPORTANT! PLEASE READ CAREFULLY BEFORE USE
AND KEEP FOR FUTURE REFERENCE.**

SWING SET SAFETY INSTRUCTIONS

WARNING!WARNING!WARNING!WARNING!WARNING!WARNING!WARNING!

YOUR CHILD'S SAFETY DEPENDS ON YOU!!!

Observing the following statements and warning reduces the likelihood of serious or fatal injury.

1. Provide on-site adult supervision at all times.
2. Be certain that all anchoring devices (including concrete) are placed below the level of the playing surface or below ground level to prevent tripping.
3. NEVER allow children to stand on the swing set. DO NOT allow children to lean to the side when riding on other rides, structural members or collide with other playmates.
4. Dress children appropriately while on and around this equipment. DO NOT allow children to wear ponchos, scarves, jewellery, loose shoes, jackets or clothing with loose strings, and/or clothing that might be potentially hazardous while using this equipment.
5. DO NOT let children use equipment in any manner other than intended.
6. DO anchor swing set .DO NOT install over concrete, asphalt, gravel or any hard surface which may cause injury should a fall occur.
7. DO NOT let children use equipment until properly assembled and anchored. Place **swing set** on LEVEL GROUND not less than 8.2feet(2.5m) from any structures or obstacles such as fences, overhanging branches, laundry or electrical lines garages, sheds or houses.
8. Instruct children to avoid swinging empty play stations. Stations may strike other children or come back and strike you .
9. Instruct children not to walk closely in front of, behind or between moving plays. Instruct children to keep a safe distance away to avoid being struck by items in play.
10. DO NOT allow children to jump from moving play items.
11. DO NOT allow children to climb or play on equipment while wet. (Slips or falls may occur.)
12. DO NOT leave bolts threads uncovered TIGHTEN all hex nuts securely.
13. DO NOT attach items to the swing set that are not specifically designed for use with the equipment, such as, but not limited to, jump ropes, clothesline, pet leashes, cables, and chain as they may cause strangulation hazard.
14. Please retain the instruction manual for future reference and review each season.

WARNING:BE SURE TO FOLLOW ALL INSTRUCTIONS ABOVE

SAFETY INSTRUCTIONS

WARNING!

Adult assembly required.

Adult supervision required at all times.

Maximum user weight 45kg for single swing seat and 25kg for baby seat.

Only for domestic use.

Outdoor use only.

Single swing seat is suitable for 3+ years, baby seat is suitable for 1-3 years. Fall hazard. Strangulation hazard.

Retain instruction manual for future use.

Place on a level surface at least 2.5 m from any structure or obstruction.

Must not be installed over concrete, asphalt or any other hard surface.

It is advised that on a regular basis (i.e. at the beginning of the season and monthly thereafter) all main parts/ fixings are checked as secure, well oiled (if metallic), have no sharp points/edges and are intact. Replace, oil and/or tighten when necessary. Failure to do so may result in an injury or hazard.

Any part such as tube, screw, spacer, nut, etc must be regularly examined for evidence of deterioration. Replace any attachments if there are signs of deterioration. Failure to do so may result in an injury or hazard.

Do not allow children under 3 years to use single swing set.

WARNING!

Unexpected movement (i.e.: tipping, lifting and overturning) of the swing set may result in serious injury or death. The swing set must be securely anchored before use.

WARNING!

The owner should disassemble and dispose of the **swing set** in such a way that no unreasonable hazards will exist at the time the **swing set** is discarded.

Proper Play Conditions:

- Always use the product in a well-lit area. Do not use without lighting during dawn, dusk or in complete darkness!
- Maintain clear space on all sides of the product. Such objects include walls, fences, tree limbs/trunks, electrical power wiring, rocks, sprinkler heads or other recreational objects (i.e. swing sets, swimming pools).
- The product must not be used in windy and rainy conditions as wind can cause unexpected movement and rain can cause expected slippery surfaces on the product.

CONTACT US

Thank you for purchasing.

Please contact our customer service centre

JCA Collective

Email: service@jcacollective.com

Phone Number: +61 423 259 751

Office Hours: Monday to Friday 9am to 5pm

SAFETY NOTES:

- Adult assembly required.
- Adult supervision required when product is in use.
- **For domestic use only.**
- **For outdoor use only.**
- DO NOT allow children to play around product when is in use.
- DO NOT allow more than 1 **child per seat** to use this product at a time.
- Limit the time of continuous usage (make regular stops).

MAINTENANCE INSTRUCTIONS:

- Check fixings regularly. Injury may result if you fail to do so.
- Check the nuts and bolts on a regular basis for tightness, sharp edges or deterioration.
Tighten or replace when required.
- Check paintwork regularly and if needed touch up with enamel.
- Check all nuts and bolts for tightness and tighten when required.
- Oil all metallic moving parts.
- Check all coverings and bolts for sharp edges and replace when required.
- Check all parts such as tubes, screws, nuts, spacers, etc for evidence of deterioration; replace when required in accordance with the manufacturer's instructions. Failure to do so may result in injury or hazard.
- Sand rusted areas and tubular members and repaint using a non-lead based paint when required.
- Retain the instructions for assembly, maintenance and safe use for future reference.

Specifications

This Swing set is designed to have single swing seat and baby swing seat. Single swing seat is suitable for 3+ years, baby seat is suitable for 1-3 years. Maximum user weight 45kg for single swing seat and 25kg for baby seat. The maximum fall height of this climbing frame is 1.9m.

This product is designed for normal residential use only. This product is not designed for use in day care, nurseries, or other public places. This product is to be assembled by adults only in the manner described within this instruction manual.

This product must be anchored. Anchors are included with this swing set.

Assembly

Only adults should assemble or disassemble the swing set. For safety reasons and ease of assembly, it is recommended that two adults assemble the swing set.

Points to remember when locating and placing the swing set.






 
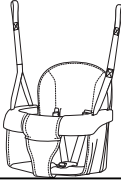 
 



 

 
 
- Place your swing set on level ground a MINIMUM of eight point two (8.2) feet (2.5m) from any structure or obstruction such as a fence, garage, house, over hanging branches, laundry lines, or electrical wires.
- Do not install swing set over concrete, asphalt, packed earth, carpet, or any other hard surface. A fall on to a hard surface can result in serious injury to the equipment user.
- Do not place your swing set underneath electrical lines. If you must, ensure that there is a minimum over head clearance of eight point two (8.2) feet (2.5m).
- Do not make any modifications to the product, it may result in an injury or hazard. Do not over tighten nuts and screws as this may cause them to shear and potentially cause structural failure.

Location and Placement of Your Swing Set

Proper placement and maintenance of protective surfacing is essential.

Be sure to:

- Allow a space of at least 8.2 feet (2.5m) from the equipment in all directions. Swing set must be placed a minimum of 8.2 feet (2.5m) from any structure or obstruction such as a fence, garage, house, overhanging branches, laundry lines, or electrical wires.
- Do not place your Swing set underneath electrical lines. If you must, ensure that there is a minimum overhead clearance of 8.2 feet (2.5m).
- Do not install Swing set over concrete, asphalt, packed earth, carpet, or any other hard surface. A fall on to a hard surface can result in serious injury to the equipment user.
- For safe play on your swing set, extend protective surfacing 12 feet (3.66m) in front of and behind the point of suspension of the swing.

NO.	PART	DESCRIPTION	QTY
A		Top bar	1
B		Curved leg B	2
C		Curved leg C	2
D		Leg D	4
E		Leg E	4
F		Cross bar	2
G		Baby seat	1
H		Single swing seat	1
I		Screw set 32mm	12
J		Screw set 42mm	2
K		Screw set 50mm	4
L		U hook set	2
M		Anchors	4
N		Spanner	1
O		Hexagonal key	1

Option 1: Baby seat mode

Step 1: Top bar and curved legs assembly

Assemble curved legs(B)&(C) and top bar(A) by fixing the screw set 42mm(J) as Figure 1 and Figure 2 show, **DO NOT** tighten the screw set by spanner or hexagonal key at this step.

Figure 1


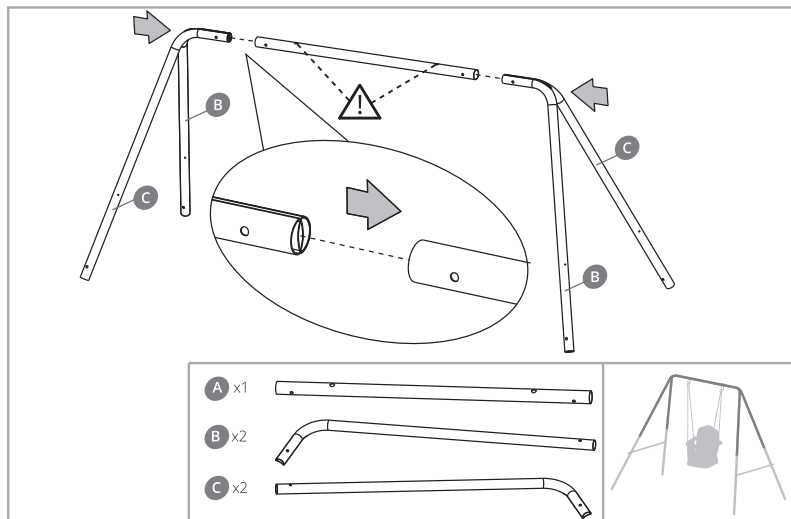 


Figure 2

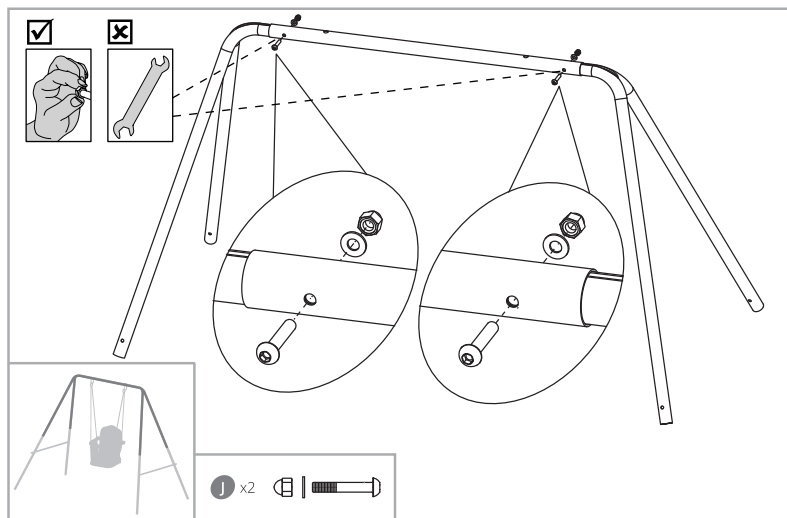 

Step 2: Legs D and curved legs assembly

Assemble curved legs(B)&(C) and leg D(D) by fixing the screw set 32mm(I) as Figure 3 and Figure 4 show, **DO NOT** tighten the screw set by spanner or hexagonal key at this step.

Figure 3


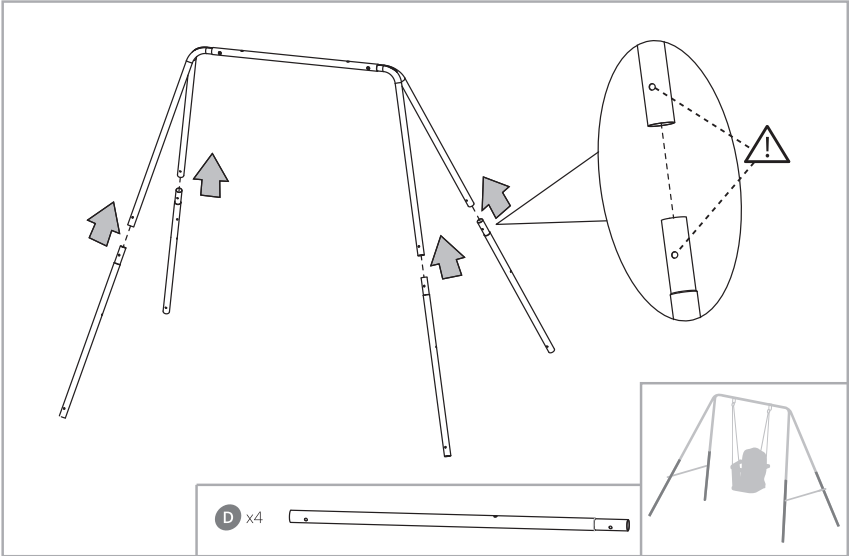 



Figure 4

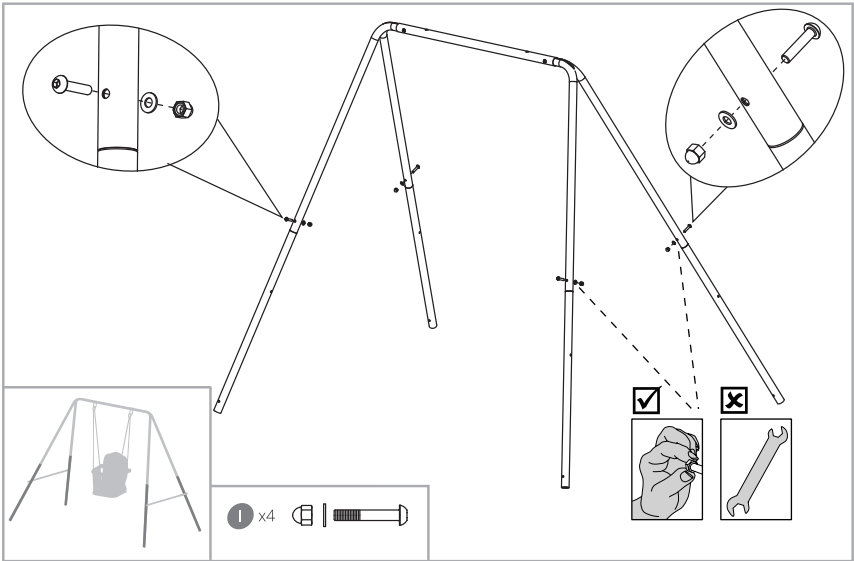 

Step 3: Cross bar and legs D assembly

Assemble cross bar (F) and legs D (D) by fixing the screw set 50mm (K) as Figure 5 shows, DO NOT tighten the screw set by spanner or hexagonal key at this step.

 
Figure 5

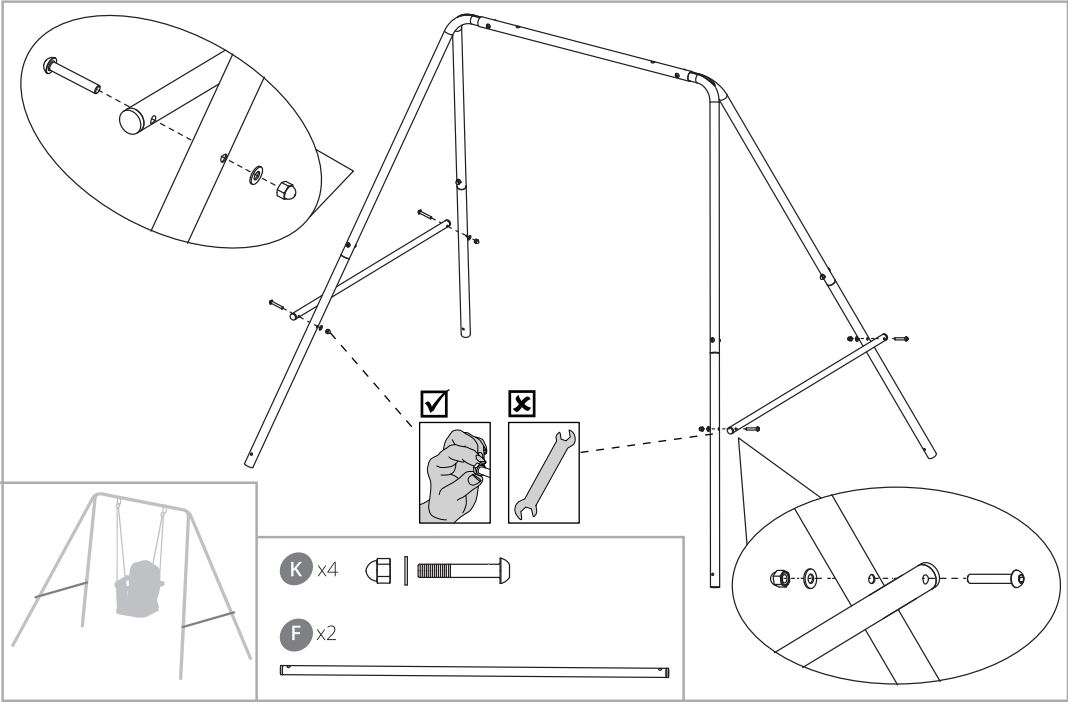

Step 4: Baby seat and top bar assembly

Assemble the baby seat(G) on top bar(A) by fixing the U hook set(L) as Figure 6 shows, DO NOT tighten the screw set by spanner or hexagonal key at this step.

 Figure 6

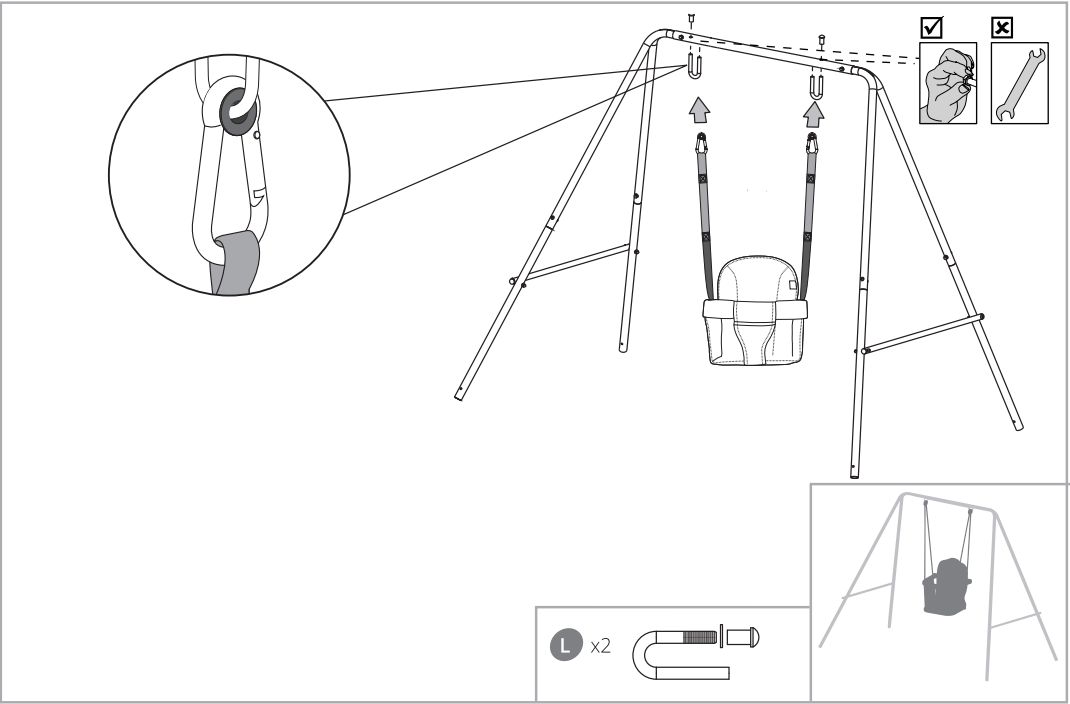

Step 5: Screws tightening and anchors assembly

Tighten all screws on baby seat frame with spanner (N) and hexagonal key (O) as Figure 7 shows.

Assemble anchors(N) with screw set 32mm (I) and tighten all screws with spanner (N) and hexagonal key (O) as Figure 8 shows.

Figure 7


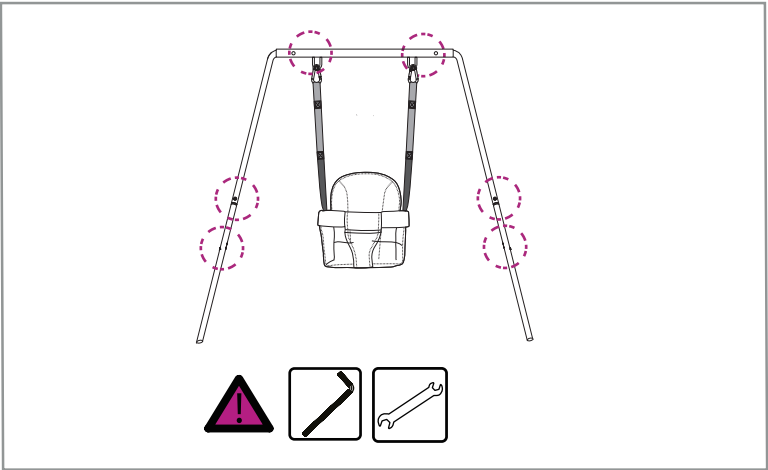 



Figure 8

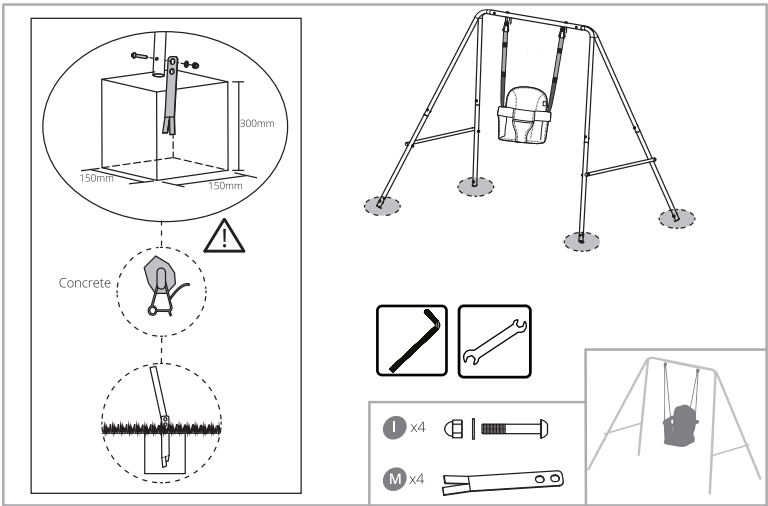 

Important Safety Information


The safety harness must be used for children aged 1-3 years.

 The safety harness must be used to secure the child in the Baby Seat at all times.

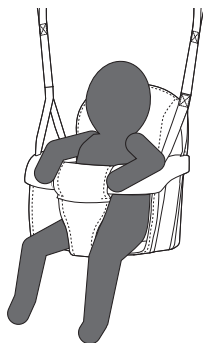


How to seat your child safely in the Baby Seat

 
Seat your baby into the Baby Seat

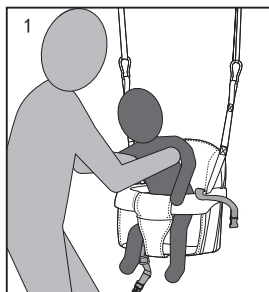

Fasten the Safety harness

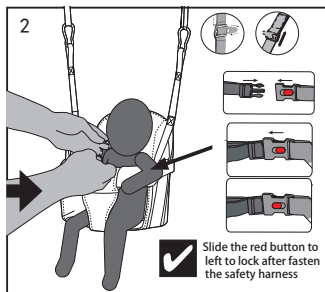 


Start using

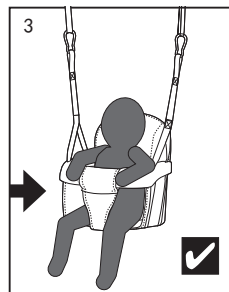 


How to remove your child safely from the Baby Seat

 
Finish using

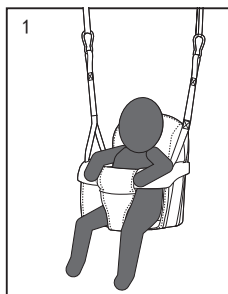

Unfasten the Safety harness

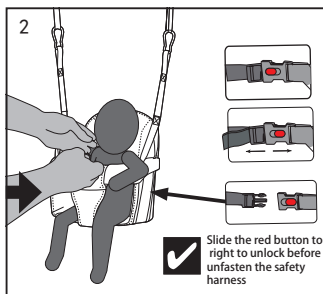 

Take your baby out of the Baby Seat

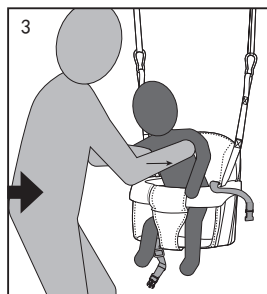 

Option 2: Single swing seat mode

Step 1: Top bar and curved legs assembly

Assemble curved legs(B)&(C) and top bar(A) by fixing the screw set 42mm(J) as Figure 9 and Figure 10 show, **DO NOT** tighten the screw set by spanner or hexagonal key at this step.

Figure 9


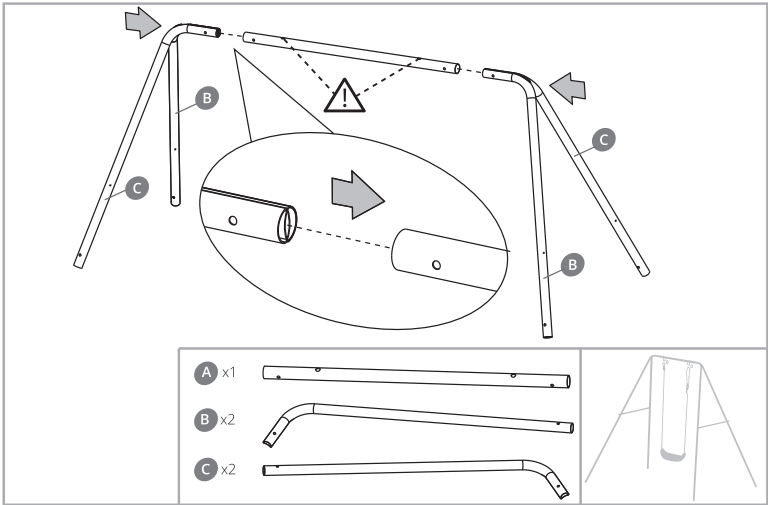 


Figure 10

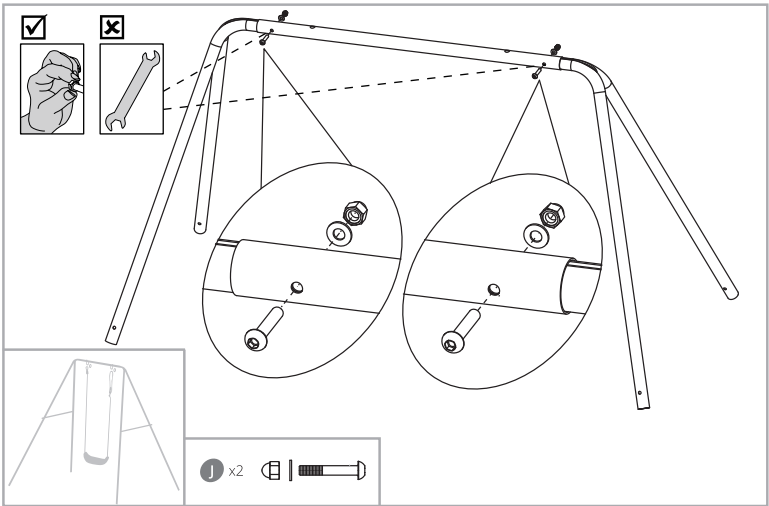 

Step 2: Legs D and curved legs assembly

Assemble curved legs(B)&(C) and leg D(D) by fixing the screw set 32mm(I) as Figure 11 and Figure 12 show, DO NOT tighten the screw set by spanner or hexagonal key at this step.

Figure 11


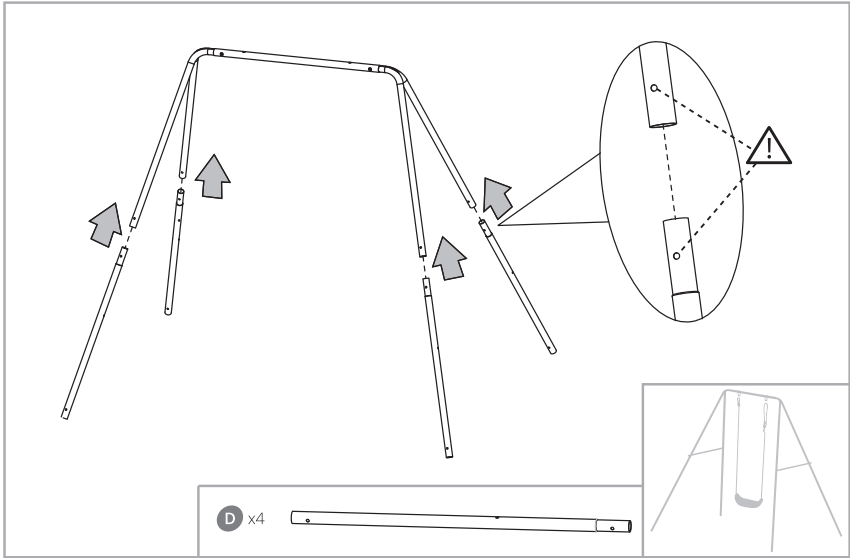 



Figure 12

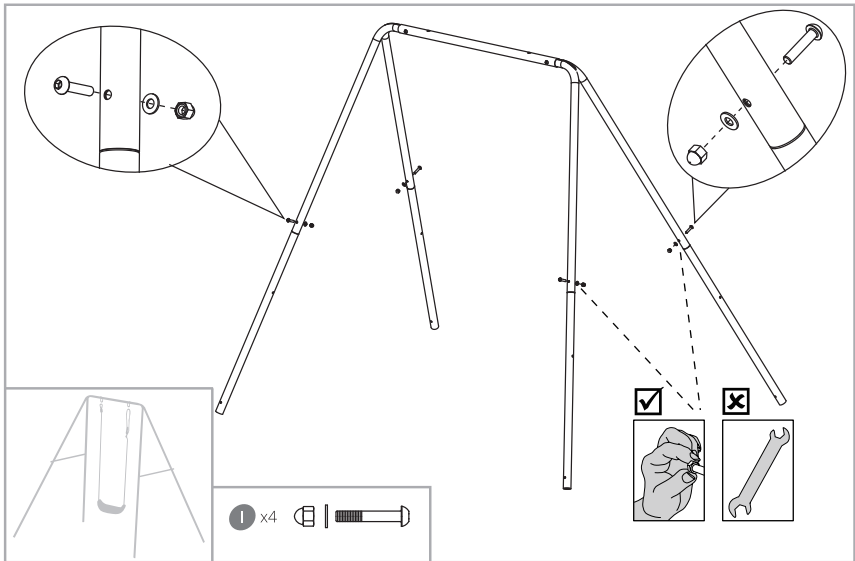 

Step 3: Cross bar and legs D assembly

Assemble cross bar(F) and legs D(D) by fixing the screw set 50mm(K) as Figure 13 shows, **DO NOT** tighten the screw set by spanner or hexagonal key

 Figure 13

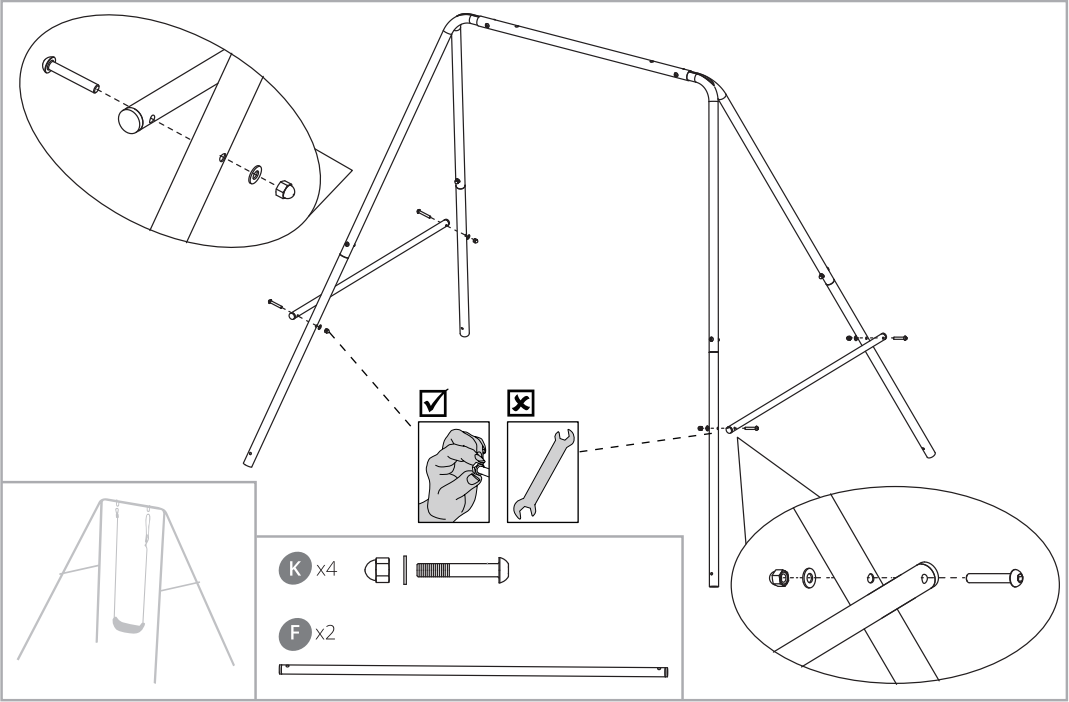

Step 4: Legs D and legs E assembly

Assemble legs D(D) and legs E(E) by fixing the screw set 32mm(I) as Figure 14 and Figure 15 show, **DO NOT** tighten the screw set by spanner or hexagonal key at this step.

Figure 14


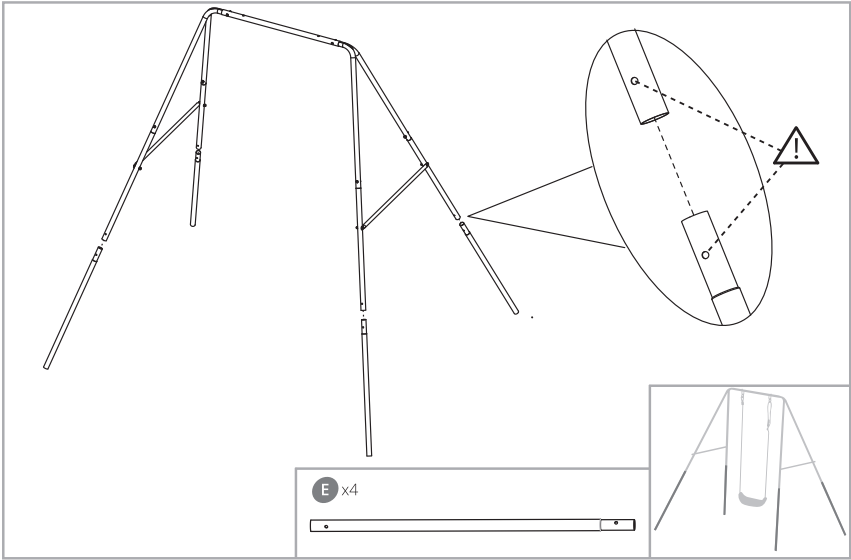 


Figure 15

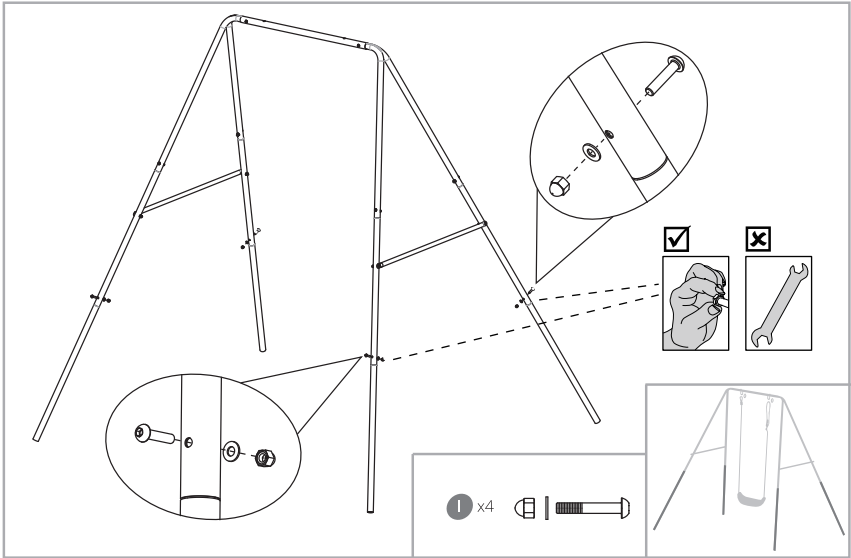 

Step 5: Single swing seat and top bar assembly

Assemble the single swing seat(H) on top bar(A) by fixing the U hook set(L) as Figure 16 shows, DO NOT tighten the screw set by spanner or hexagonal key at this step. Make sure the distance between the seat bottom and ground will be 400-600mm as Figure 17 shows.

Figure 16


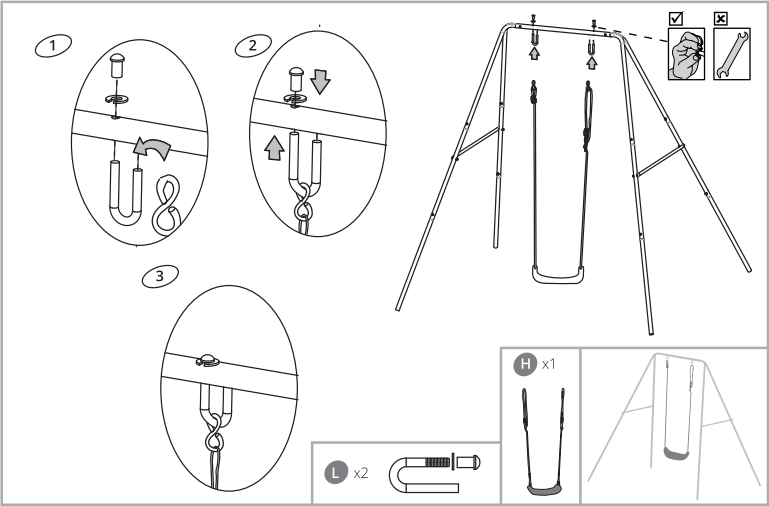 


Figure 17

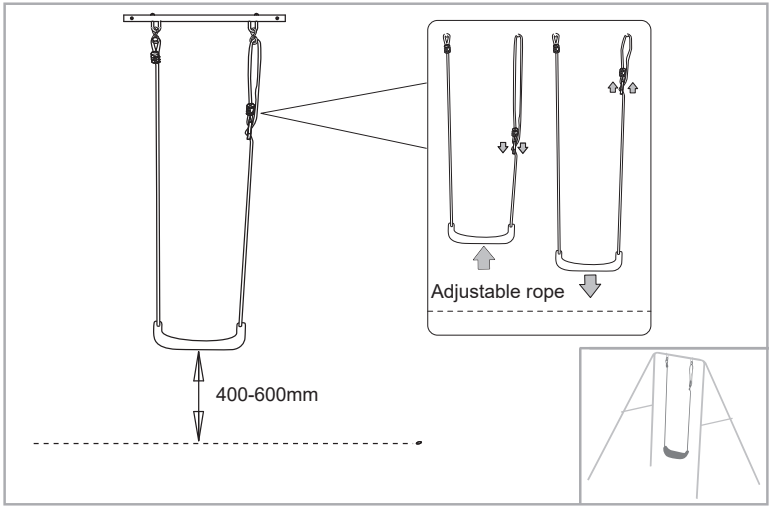 

Step 6: Screws tightening and anchors assembly

Tighten all screws on single swing seat frame with spanner (N) and hexagonal key (O) as Figure 18 shows.

Assemble anchors(N) with screw set 32mm (I) and tighten all screws with spanner (N) and hexagonal key (O) as Figure 19 shows.

Figure 18


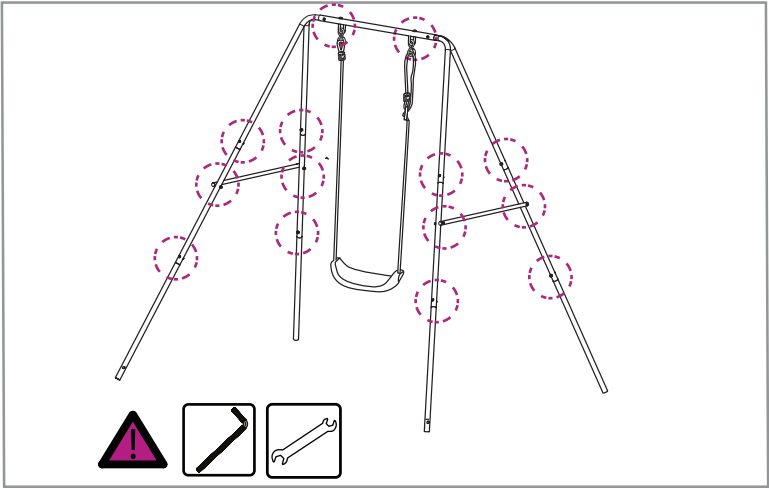 


Figure 19

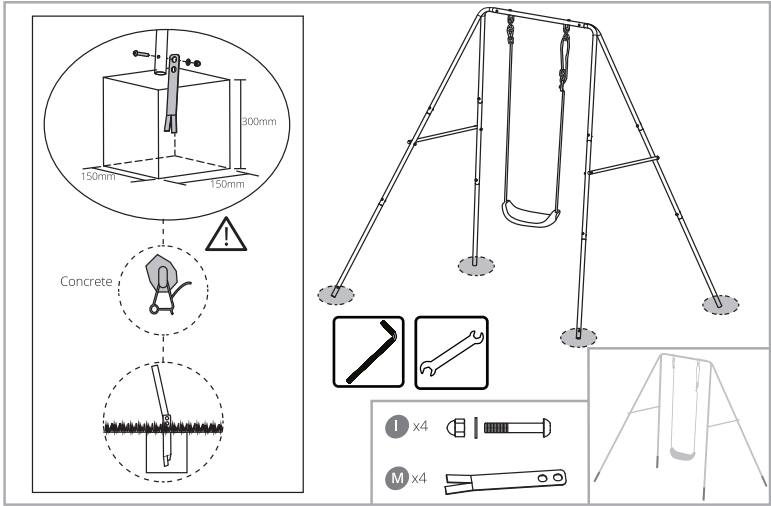 

MADE IN CHINA

12 Month Warranty

Thank you for your purchase.

Stores warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

We will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on

JCA Collective

Email: service@jcacollective.com

Phone Number: +61 423 259 751

Office Hours: Monday to Friday 9am to 5pm

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

The date of purchase:

The components will deteriorate over time.

WARNING Single swing seat is suitable for 3+ years, baby seat is suitable for 1-3 years. Maximum user weight 25kg for Baby seat. Maximum user weight 45kg for single swing seat . This unit is designed to be used safely for one child per seat. Only for domestic use. Outdoor use only. This must be assembled by an adult before use. Adult supervision is required, strangulation hazard. Small parts, choking hazard. Anchors supplied with this product must be fitted before use.

K:43-113-408 | T:69-553-721

MADE IN CHINA

CUSTOMER SERVICE:
KMART AU: 1800 124 125
KMART NZ: 0800 945 995
TARGET AU: 1300 753 567